

NHR-X-X Encore® Feed Hoppers



WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.



WARNING: Wear an approved respirator, protective clothing, and gloves when handling powder. Avoid skin contact with powder coating or breathing powder particles.

Description

This instruction sheet provides specifications; installation and operation instructions; and parts lists for the following hoppers:

- NHR-2-25, Encore[®]
- NHR-2-50, Encore and Encore HD
- NHR-2-80, Encore
- NHR-8-80, Encore

The hoppers are shipped fully assembled, with lids that include pump adapter and pickup tube assemblies, vent tubes, and hopper fill plug. Powder pumps are sold separately or are included in configured systems.

©2016 Nordson Corporation Part 1609826-01

Specifications

	NHR-2-25	NHR-2-50	NHR-2-80	NHR-8-80	
Powder Capacity:	11 kg (25 lb)	23 kg (50 lb)	36 kg (80 lb)	36 kg (80 lb)	
*Pump Knockouts:	2	2	2	8	
*Pump Adapters Included:	1	1	1	2	
Dimensions					
Height:	43 cm (17 in.)	62 cm (24.5 in.)	86 cm (33.8 in.)	86 cm (33.8 in.)	
Diameter:	40.00 cm (15.75 in.)	40.00 cm (15.75 in.)	40.00 cm (15.75 in.)	40.00 cm (15.75 in.)	
Weight (Empty):	8 kg (18 lb)	9.5 kg (21 lb)	11.5 kg (26 lb)	11.5 kg (26 lb)	
**Weight	19.5 kg (43 lb)	32.5 kg (71 lb)	47.5 kg (106 lb)	47.5 kg (106 lb)	
(Full to Capacity):					
Operating Fluidizing Pressure:	0.1-0.6 bar (2-8 psi)	0.1-0.6 bar (2-8 psi)	0.1-0.6 bar (2-8 psi)	0.1-0.6 bar (2-8 psi)	
Fluidizing Air Tubing:	10-mm OD	10-mm OD	10-mm OD	10 mm-OD	
*Pumps and additional adapters must be ordered separately.					
**Weight may vary depending on type of powder.					

Installation

Hopper Body Installation

See Figure 1.

- When assembling the body (1) on the fluidizing drum (4), make sure the body is centered on the gasket (2). Verify that there are equal amounts of the gasket exposed along the edge of the body. If exposed gasket is not equally distributed, reposition the body.
- 2. Lock the body (1) in place by clamping clamps A and C down together. Then, repeat for clamps B and D.
- 3. Re-verify that the gasket (2) is exposed equally along the inside edge of the body (1).

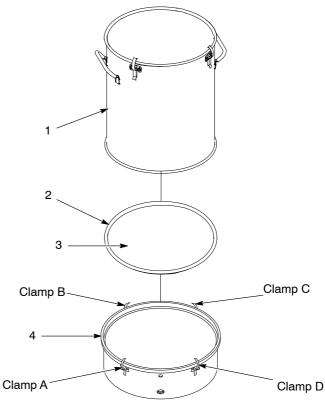


Figure 1 Hopper Body Installation

- 1. Body
- 2. Gasket

- 3. Fluidizing plate
- 4. Drum

©2016 Nordson Corporation Part 1609826-01

Basic Installation and Connections

These hoppers are used primarily with Nordson powder spray handguns and control units mounted on two-wheeled dollies. The gun control units include controls for fluidizing, atomizing, and flow rate air.

See Figure 2.

- 1. Make sure the fluidizing drum (6) and lid (2) are securely clamped to the body (3), and that all gaskets are undamaged and sealing properly.
- 2. Connect 10-mm flexible air tubing to the fitting labeled with the fluidizing icon or AUX on the rear or side of the control unit, or another source of regulated fluidizing air. Connect the opposite end of the tubing to the fluidizing air connector (5).



WARNING: All electrically conductive equipment in the spray area must be grounded. Ungrounded or poorly grounded equipment can store an electrostatic charge which can give personnel a severe shock or arc and cause a fire or explosion.

- 3. For stand-alone hoppers, connect the ground wire shipped with the hopper to the ground stud (4). Connect the spring clip to a true earth ground.
 - For hoppers on a mobile powder system dolly, connect the dolly ground wire to the ground stud (4).
- 4. Connect the ground wire shipped with the hopper from a true earth ground to the ground stud (4).
- 5. Make sure the pump adapter O-rings are installed correctly in the adapter grooves. Install the pump on the adapter with a slight twisting motion.
- Connect the flexible vent hose shipped with the hopper to the vent hose adapter (1). Secure the hose to the adapter with a hose clamp.
 Connect the other end of the hose to the booth powder collector to prevent vented powder from contaminating the room air.

1401303B

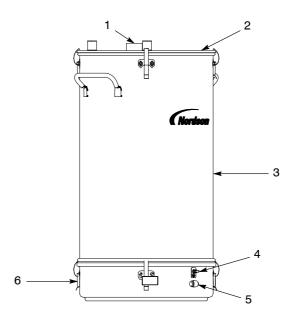


Figure 2 NHR-X-X Encore Feed Hoppers

- 1. Vent hose adapter
- 2. Lid
- 3. Body

- 4. Ground stud
- 5. Fluidizing air connector
- 6. Fluidizing drum

Installing Additional Pumps

If you wish to install additional pumps, you must order a pump adapter for each pump. The adapter must be installed in a hole in the lid. If you have a NHR-2-80 Encore hopper, you can order the NHR-8-80 lid, which has eight holes in it, or you can knock out additional holes. No more than eight pumps can be installed, due to space limitations.

©2016 Nordson Corporation

Operation



WARNING: Wear an approved respirator, protective clothing, and gloves when handling powder. Avoid skin contact with powder coatings, or breathing powder particles.

- 1. Verify that the hopper has been properly grounded.
- 2. Fill the hopper half full of powder, to provide room for expansion as the powder is fluidized. Do not overfill. Overfilling may prevent powder from being fully fluidized, and affect coating performance.
- 3. Turn on the fluidizing air, and adjust the regulator until the powder is gently "boiling." The air mixed with the powder will cause it to increase in volume. Fluidize the powder for five or ten minutes to make sure it is evenly fluidized and no clumps are left before spraying.

Maintenance

Periodically, empty the hopper and clean the interior. Clean the fluidizing plate and inspect it for signs of air contamination. If the plate is discolored and appears to be contaminated, replace it. Check your air supply and correct any contamination problems.

NOTE: Inspect and verify hopper ground connection periodically.

Parts

To order parts, call the Nordson Customer Service Center or your local Nordson representative. Use these five-column parts lists, and the accompanying illustrations, to describe and locate parts correctly.

NHR 50 lb Encore HD Hopper

See Figure 3.

Item	Part	Description	Quantity	Note
_	1608301	HOPPER, powder, 50 lb., NHR, packaged	1	
1	1608300	 TUBE, pickup, HDLV hopper, packaged 	1	Α
1A	941145	O-RING, silicone, conductive, 0.625 x 0.812 in.	2	
2		BODY, hopper, NHR assembly, 50 lb.	1	
3	1608053	 PLATE, fluidizing, NHR, diameter 405/406 	1	
4	1608054	GASKET, U-channel, NHR	1	
5		DRUM, fluidizing, NHR	1	
6	1074534	 COVER, hopper, NHR-2, assembly 	1	
7	142342	PLUG, button	1	
NOTE A: Re	fer to <i>Pickup Tu</i>	ibe and Pump Adapter for 50 lb. Hopper for Encore HD	on page 15 for er	nlarged image.

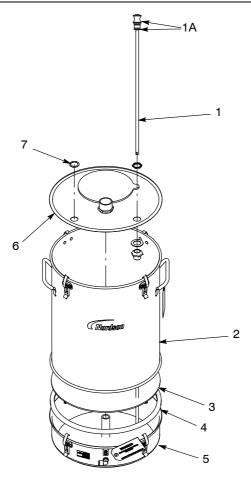


Figure 3 NHR-50 lb Encore HD Hopper

©2016 Nordson Corporation Part 1609826-01

1070231

NHR-2-XX Encore Hoppers

See Figure 4.

Item	NHR-2-25 Parts	NHR-2-50 Parts	Description	Quantity	Note
_	1609827		HOPPER, Encore, packaged, NHR-2-25	1	
		1107949	HOPPER, Encore, packaged, NHR-2-50		
1	1008082	1008082	HOSE, flexible, 3 m (10 ft)	1	
2	970966	970966	CLAMP, hose	1	
3	1608053	1608053	PLATE, fluidizing	1	
4	1608054	1608054	GASKET, U-channel	1	
5	1074531	1074531	DRUM, fluidizing	1	Α
6	1074337		BODY, hopper, packaged, 25 lb	1	
6		1107948	BODY, hopper, packaged, 50 lb	İ	
7	981170	981170	SCREW, truss, unslotted, 10–32 x 0.375 in.	8	
8	984120	984120	NUT, hex, small pattern	8	
9	164064	164064	LATCH, hopper, curve base	4	
10	1074532	1074532	LID, hopper, packaged	1	В
11	1107650		TUBE, pickup, 25 lb	1	
11		1105689	TUBE, pickup, 50 lb, packaged	ĺ	
12	1082198	1082198	ADAPTER, pump, vibratory box feeder	1	
13	941145	941145	O-RING, silicone, conductive, 0.625 x 0.812 in.	2	
14	164063	164063	MOUNT, pump	1	
15	1070534		• • TUBE, pickup, 0.360-in. ID x 10 in.	1	
15		164065	• • TUBE, pickup, 0.360-in. ID x 18 in.		
16	983055	983055	WASHER, pump mount	1	
17	939613	939613	• • LOCKNUT, conduit, ³ / ₄ -in. NPS	1	
18	1074535	1074535	 ELBOW, male, ³/₈₋in. RPT x 10 mm tube 	1	
NS	134575	134575	WIRE, ground	1	

NOTE A: Refer to Fluidizing Drum on page 13 for a parts breakdown.

B: Refer to NHR-X-X Hopper Lids on page 12 for a parts breakdown.

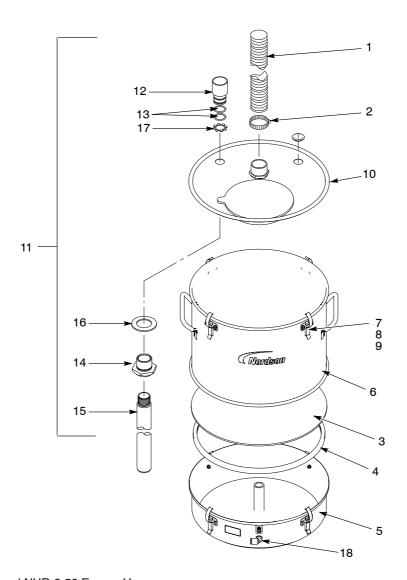


Figure 4 NHR-2-25 and NHR-2-50 Encore Hoppers

©2016 Nordson Corporation Part 1609826-01

NHR-2-80 Encore Hopper

NOTE: The NHR-2-80 hopper is a two pump Venturi hopper.


See Figure 5.

Item	Part	Description	Quantity	Note
_	1609828	HOPPER, Encore, packaged, NHR-2-80	1	
1	1008082	HOSE, flexible, 3 m (10 ft)	1	
2	970966	CLAMP, hose	1	
3	1608053	PLATE, fluidizing	1	
4	1608054	GASKET, U-channel	1	
5	1074531	DRUM, fluidizing	1	Α
6	1074338	BODY, hopper, packaged	1	
7	981170	SCREW, truss, unslotted, 10-32 x 0.375 in.	8	
8	984120	NUT, hex, machined	8	
9	164064	LATCH, hopper, curve base	4	
10	1074532	LID, hopper, packaged	1	В
11	1105687	 TUBE, pickup, 80 lb, packaged 	1	С
12	1074535	 ELBOW, male, ³/₈-in. RPT x 10-mm tube 	1	

NOTE A: Refer to Fluidizing Drum on page 13 for a parts breakdown.

B: Refer to NHR-X-X Hopper Lids on page 12 for a parts breakdown.

C: Refer to Pickup Tube and Pump Adapter for 80 lb Hoppers on page 14 for a parts breakdown.

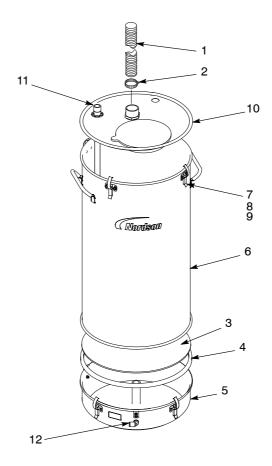

1401305B

Figure 5 NHR-2-80 Encore Hopper

NHR-8-80 Encore Hopper


NOTE: The NHR-8-80 hopper is an eight pump Venturi hopper. See Figure 6.

Item	Part	Description	Quantity	Note
_	1609829	HOPPER, Encore, packaged, NHR-8-80	1	
1	1008082	HOSE, flexible, 3 m (10 ft)	1	
2	970966	CLAMP, hose	1	
3	1608053	PLATE, fluidizing	1	
4	1608054	GASKET, U-channel	1	
5	1074531	DRUM, fluidizing	1	Α
6	1074338	BODY, hopper, packaged	1	
7	981170	SCREW, truss, unslotted, 10-32 x 0.375 in.	8	
8	984120	NUT, hex, machined	8	
9	164064	LATCH, hopper, curve base	4	
10	1074575	 COVER, hopper, NHR-8, assembly, packaged 	1	В
11	1105687	TUBE, pickup, 80 lb, packaged	2	С
12	1074535	 ELBOW, male, ³/₈-in. RPT x 10-mm tube 	1	

NOTE A: Refer to Fluidizing Drum on page 13 for a parts breakdown.

B: Refer to NHR-X-X Hopper Lids on page 12 for a parts breakdown.

C: Refer to Pickup Tube and Pump Adapter for 80 lb Hoppers on page 14 for a parts breakdown.

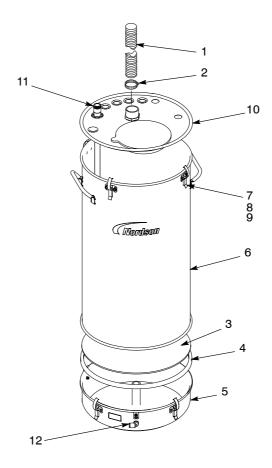

1401306B

Figure 6 NHR-8-80 Encore Hopper

©2016 Nordson Corporation Part 1609826-01

NHR-X-X Hopper Lids

NOTE: Use with Venturi or HD hoppers.

Item	Part	Description	Quantity	Note
_	1074532	LID, hopper, packaged, NHR-2-X	1	Α
_	1074575	LID, hopper, packaged, NHR-8-80	1	В
1	1008081	NUT, conduit, 1.25 in.	1	
2	1008080	GASKET, vent stack	1	
3	1008079	 FITTING, pvc, 1 ¹/₄ in., male adapter 	1	
4	1070199	PLUG, hopper fill, NHR	1	
NS	1074539	GASKET LID SERVICE KIT	1	

NOTE A: Used on all NHR-2-X hoppers. Has two knockouts for pump adapters.

B: Used on NHR-8-80 hoppers and can replace the lid used for NHR-2-80 hoppers. Has eight knockouts for pump adapters.

NS: Not Shown

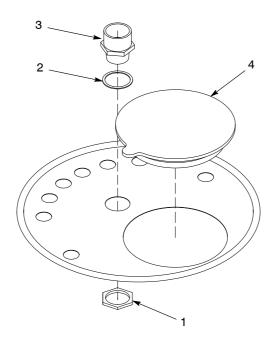


Figure 7 NHR-X-X Hopper Lid

1401308B

NHR Fluidizing Drum

See Figure 8. The fluidizing drum is common to all NHR-X-X Encore

Item	Part	Description	Quantity	Note
_	1074531	DRUM, fluidizing	1	
1	1074535	 ELBOW, male, ³/₈-in. RPT x 10-mm tube 	1	
2	984702	NUT, hex, M5, brass	2	
3	983401	LOCK WASHER, split, M5, steel, zinc	11	
4	983021	 WASHER, flat, 0.203 x 0.405 x 0.040 in., brass 	1	
5	982126	SCREW, pan head, M5 x 25, brass	1	
6	240674	TAG, ground	1	
7	164064	LATCH, hopper, curve base	4	
8	982000	SCREW, pan head, M5 x 10, zinc	8	
9	983123	 WASHER, flat, 0.219 x 0.500 x 0.049 in. 	7	
10	984706	NUT, hex, M5, steel, zinc	8	

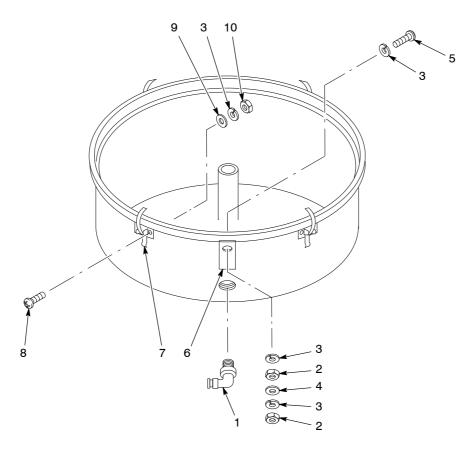


Figure 8 NHR Fluidizing Drum

©2016 Nordson Corporation Part 1609826-01

Pickup Tube and Venturi Pump Adapter for 80 lb Hoppers

See Figure 9.

Item	Part	Description	Quantity	Note	
_	1105687	TUBE, pickup, 80 lb, packaged	1		
1	1082198	ADAPTER, pump, Encore	1		
2	941145	O-RING, silicone, conductive, 0.625 x 0.812 in.	2		
3	939613	 LOCKNUT, conduit, ³/₄-in. NPS 	1		
4	983055	WASHER, pump mount	1		
5	164063	MOUNT, pump	1		
6	152223	 TUBE, pickup, 0.360-in. ID x 24 in. 	1		
NOTE A: Do	NOTE A: Do not replace with non-conductive O-rings.				

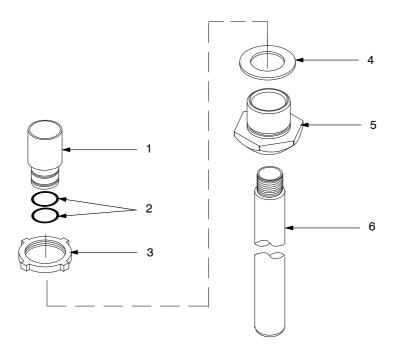


Figure 9 Pickup Tube and Venturi Pump Adapter for 80 lb Hoppers

1401309A

Pickup Tube and Pump Adapter for 50 lb Encore HD Hopper

See Figure 10.

Item	Part	Description	Quantity	Note
_	1608300	TUBE, pickup, HDLV hopper, packaged	1	
1	941145	O-RING, silicone, conductive, 0.625 x 0.812 in.	2	



10014500

Figure 10 Pickup Tube and Pump Adapter for 50 lb Encore HD Hopper

Issued 10/16

Original copyright date 2016. Nordson, Encore, and the Nordson logo are registered trademarks of Nordson Corporation.

©2016 Nordson Corporation Part 1609826-01