

Instruction Sheet P/N 1063413-04

Prodigy[®] High-Capacity HDLV[®] Pump Fluidizing Tube Replacement




WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.




3

WARNING: Shut off and relieve system air pressure before performing the following tasks. Failure to relieve air pressure may result in personal injury.

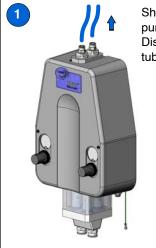


Shut off and relieve the purge air pressure. Disconnect the purge air tubing.

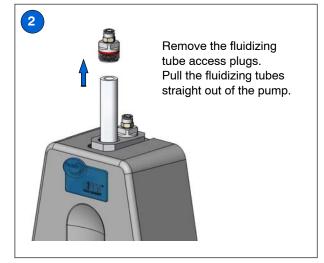


Check the O-rings in the inside diameter of the access plugs. Replace them if necessary.



Look down into the pump to make sure the O-rings are seated in the upper-Y manifold. If the O-rings are not seated, use the fluidizing tubes to seat them.

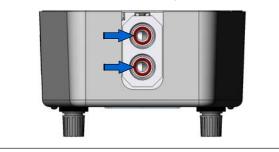

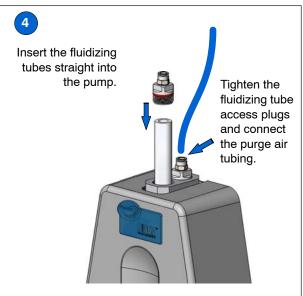

Issued 03/18 Original copyright date 2005. HDLV, Prodigy, Nordson, and the Nordson logo are registered trademarks of Nordson Corporation. 2 Prodigy HDLV and High-Capacity HDLV Pump Fluidizing Tube Replacement