P/N 1091211A

## LCD Replacement Prodigy® Manual Controller



**WARNING:** Repair of this equipment shall carried out by suitably trained personnel in accordance with the applicable code of practice. EN60079-19.



**CAUTION:** The circuit boards and keypad panel are electrostatic-sensitive devices (ESD). Wear a grounding strap when removing and installing them. Failure to heed this caution could result in static discharges and equipment damage.

Use this instruction sheet with 1091172 Kit, LCD, Graphical, 128 x 240.

 See Figure 1. Remove the 8 screws from the rear cover and remove the cover. Disconnect the ground wire from the cover to move the cover out of the way.

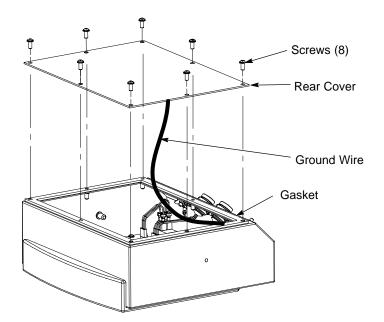


Figure 1 Removing rear cover

- 2. See Figure 2. Disconnect all wire harness connected to the circuit board. Note where each harness is connected so they can be properly reconnected.
- 3. Remove the 4 screws holding the circuit board to the keypad.
- 4. Using proper PCB handling techniques place the PCB LCD side up on a clean flat surface.

© 2008 Nordson Corporation Part 1091211A

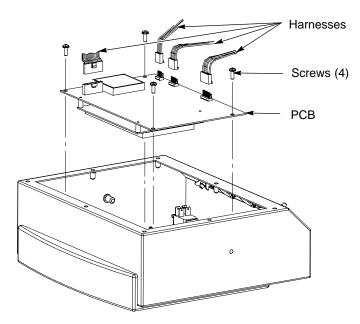


Figure 2 Disconnecting harnesses and removing PCB

- 5. See Figure 3. Remove the 4 screws holding the LCD display to the circuit board.
- 6. Carefully pull the LCD display off the circuit board.

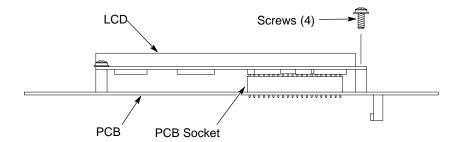


Figure 3 Disconnecting LCD from PCB

- 7. Remove the new LCD display from the anti static protective bag.
- 8. Line up the LCD pins with the PCB socket and press gently to connect the LCD to the PCB.
- 9. Secure the LCD to the PCB with the 4 mounting screws removed earlier.
- 10. Remove any protective covering from the face of the LCD screen.
- 11. Install the PCB in the enclosure and secure it with the 4 screws.
- 12. Reconnect the wiring harnesses to the PCB.
- 13. See Figure 1. Make sure the gasket is undamaged. Install the rear cover, connecting the ground wire to the spade terminal on the cover.
- 14. If necessary, adjust the contrast of the new LCD, using the Options menu under the Tool menu.

Issued 9/08

Original copyright date 2008. Prodigy, Nordson, and the Nordson logo are registered trademarks of Nordson Corporation.

Part 1091211A © 2008 Nordson Corporation