

Removing the NIO2 Positioner from the Shipping Pallet

The Nordson NIO2 positioner is shipped on a wooden pallet. Use the instructions below to remove the positioner from the pallet.

See Figure 1.

1. Remove the screws (1), washers (2), and side covers (3) from the positioner base (4) to access the lag screws securing the positioner to the pallet (6).
2. Remove the four lag screws (5) from the corners of the positioner.

NOTE: The holes for the lag screws are also used for mounting the positioner, so you can leave the side covers off until it is bolted in place. For further instructions on mounting the positioner, refer to the positioner manual.

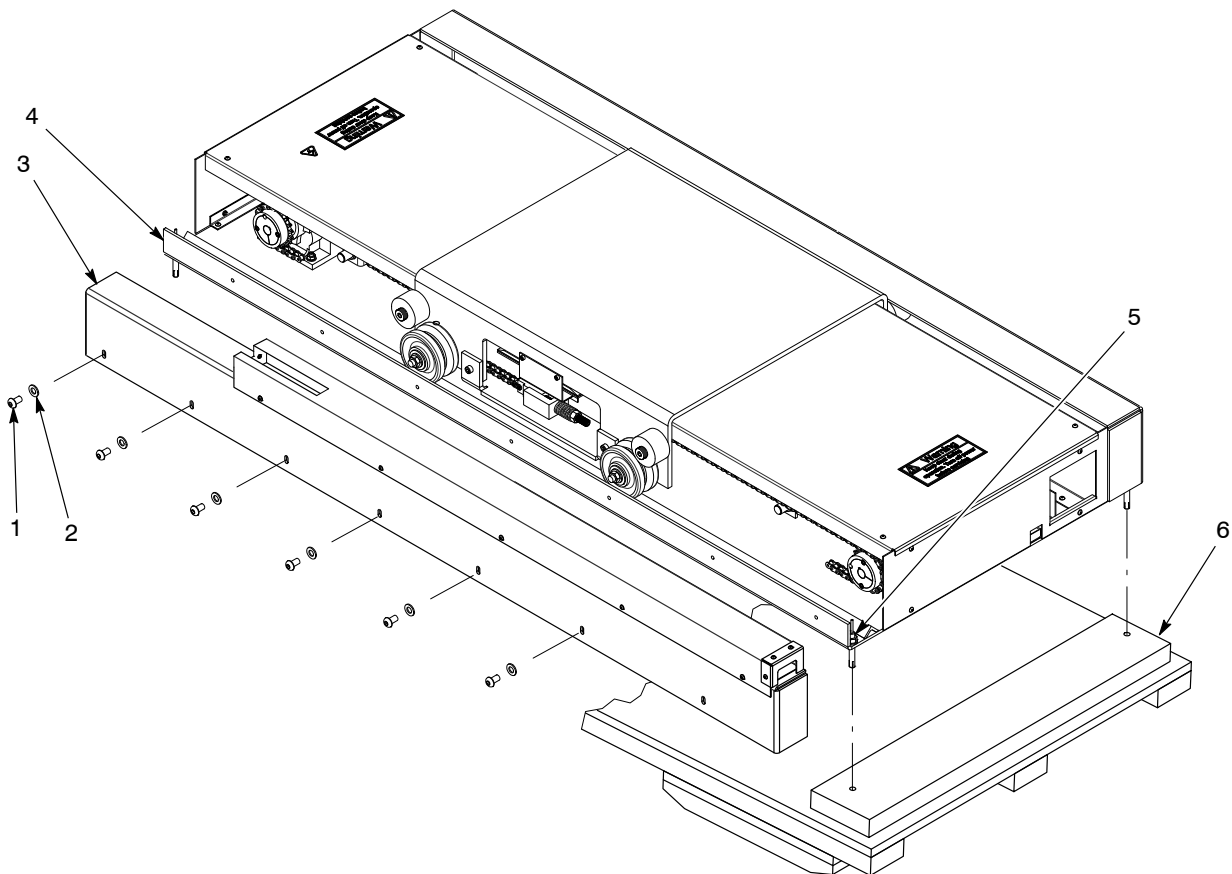


Figure 1 Removing Lag Screws

Issued 07/13

Original copyright date 2013. Nordson and the Nordson logo are registered trademarks of Nordson Corporation.