

Standard/Encore[®] iControl[®] Relay Replacement

The system is pre-installed with 240 Vac interface relays. If the required voltage is 120 Vac, the relay must be replaced with the applicable relay included with the system.

The replacement kit contains the following:

- Two relays, 1FRMC, 240 V coil, GSRS (installed) – 1093008
- Two relays, 1FRMC, 120 V coil, GSRS (shipped with) – 1081529

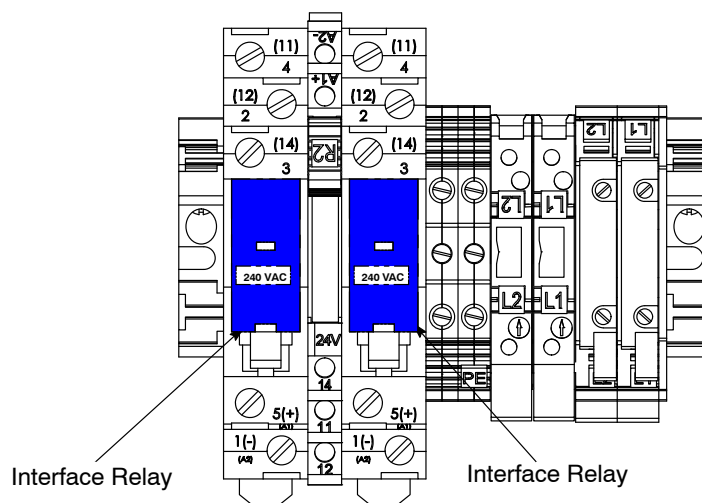


Figure 1 Terminal Block

Replacing Relays



WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.

NOTE: Be sure to replace both relays.

1. Turn the circuit power OFF.
2. Press the relay tab to remove the installed relay.
3. Replace with the applicable voltage relay.

Issued 12/17

Original copyright date 2017. Encore, iControl, Nordson, and the Nordson logo are registered trademarks of Nordson Corporation.

All other trademarks are the property of their respective owners.