

coatmaster Flex - Maintenance Kit



Scope of delivery

- 12ps. Inlet filters
- 1pc. IR optics
- 1ps. O-ring

Replacing Inlet Filter (monthly)

1. Open bottom flap

2. Exchange filter

3. Insert bottom flap

4. Close bottom flap

Replacing IR-Optics (annually)

1. Unscrew front ring

2. Remove old O-Ring

3. Insert new O-Ring

4. Remove old IR-optics

5. Insert new IR-optics

6. Screw on front ring