

coatmaster Flex - local server

Coupling Flex to local-server




1. Connecting power




2. Power-on server





3. Select server wifi

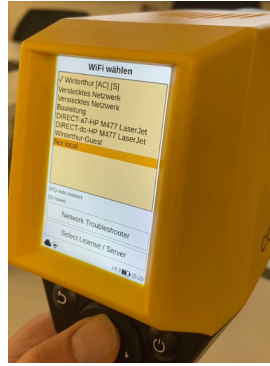

4. Select local-server

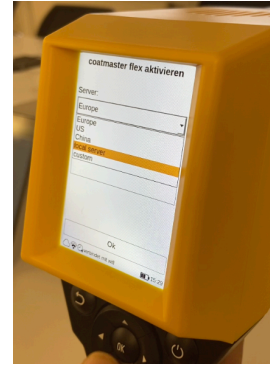

5. Enter license/password

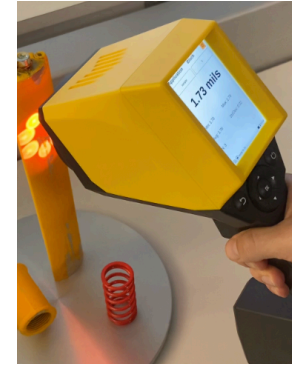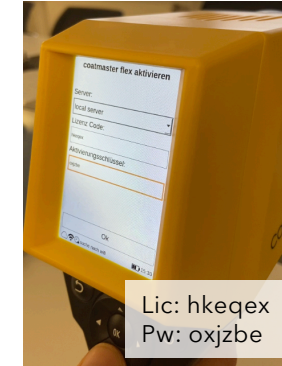


Scope of delivery

- Local-Server
- Power-Supply
- Power-Cord




Accessing Measurement-Data


1. Connecting to server

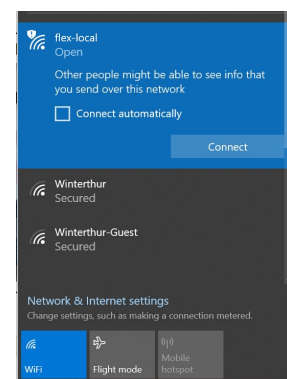

2. Access <10.10.0.1:9080> with internet-browser

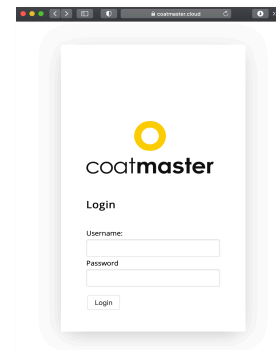

3. Enter license/password

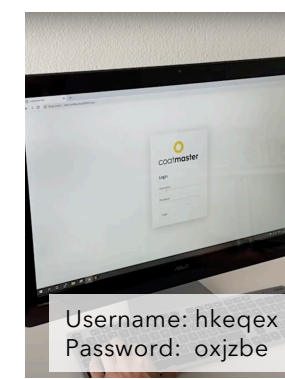

4. Visualize & export data

