

**CoolWaveTM Ultraviolet Microwave
Applied Curing System
Ten-Inch Lamphead**

Customer Product Manual

Part 775160B

Issued 6/03

**To order parts call 866-885-1212.
For technical support call 800-524-1322.**

This document is subject to change without notice.
Check <http://emanuals.nordson.com/uvsystems> for the latest version.



NORDSON CORPORATION • AMHERST, OHIO • USA

Address all correspondence to:
North American Sales and Service Nordson UV Systems Inc.
555 Jackson Street Amherst, OH 44001 United States Tel: (440) 985-4592 (800) 717-4228 Fax: (440) 985-4593 Email: uvcuring@nordson.com Website: www.uv.curing.com

Nordson Corporation welcomes requests for information, comments, and inquiries about its products. General information about Nordson can be found on the Internet using the following address:
<http://www.nordson.com>.

Notice

This is a Nordson Corporation publication which is protected by copyright. Original copyright date 2002. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Nordson Corporation. The information contained in this publication is subject to change without notice.

Trademarks

Nordson and the Nordson logo are registered trademarks of Nordson Corporation.

CoolWave is a trademark of Nordson Corporation.

Nylok is a registered trademark of Nylok Fastener Corporation.

Table of Contents

Safety	1-1	Installation	3-1
Introduction	1-1	Introduction	3-1
Qualified Personnel	1-1	Inspection and Packaging	3-1
Intended Use	1-1	Mounting Guidelines	3-1
Regulations and Approvals	1-1	Power Supply	3-1
Personal Safety	1-2	External Blowers - Cooling Air	3-2
Ultraviolet Radiation	1-2	Lamphead	3-2
First Aid	1-3	Light Shielding	3-2
Microwave Radiation	1-3	RF Detector	3-3
Ozone Gas	1-4	Electrical Installation Guidelines	3-3
High Temperature	1-4	Power Line Connections	3-3
High Voltage	1-4	Input Power Configuration	3-4
Mercury Bulbs (Lamps)	1-5	Power Source	3-4
UV Curable Inks and Products	1-5	Environmental Operating Conditions	3-4
Fire Safety	1-5	Network Connections	3-4
Action in the Event of a Malfunction	1-5	Network Connectors IN1 and OUT1	3-4
Safety Precautions While Servicing	1-6	Input Connector TB2	3-6
Control System Cleaning	1-6	Remote Power Level Control	3-7
High Voltage Connections	1-6	Lamp Start-Up Timing Diagram for Remote Input Contact Closures	3-7
Cabinet Cooling	1-6	Output Connector TB1	3-8
Disposal	1-6	Cable Connections	3-8
Safety Symbols	1-6	Lamphead	3-8
		RF Detector	3-8
		Main Control Board Standard Configurations ..	3-9
Description	2-1	Main Control Board Dip Switches	3-10
Introduction	2-1	Dip Switch Configurations	3-11
What is UV Curing?	2-1	Power Supply Address Switch	3-12
How Does it Work?	2-1	Standalone Units	3-12
System Components	2-2	Networked Units	3-12
Reflectors	2-4		
		Operation	4-1
		Introduction	4-1
		Display and Controls	4-1
		Display Messages	4-2
		Fault Messages	4-3
		Resetting a Fault	4-3
		Lamp Start-Up Timing Diagram for Remote Input Contact Closures	4-4
		Startup	4-5
		Locally Operated Units	4-5
		Remotely Operated Units	4-8
		Shutdown	4-9

Maintenance and Repair	5-1
Maintenance and Replacement Schedule	5-1
Replacement Procedures	5-3
Preparation	5-3
Bulb Replacement	5-3
Reflector Replacement	5-4
Remove the Reflectors	5-4
Install the Reflectors	5-5
Internal Component Replacement	5-6
Pressure Switch	5-8
Light Detector Board	5-9
Starter Bulb	5-9
Magnetron	5-10
Fuse Replacement	5-12
Air Filter Cleaning and Supply Cooling Fan ..	5-12
Troubleshooting	6-1
Introduction	6-1
General Troubleshooting	6-1
Troubleshooting Bulb Problems	6-4
Troubleshooting Curing Process Problems	6-4
Parts	7-1
Introduction	7-1
Using the Illustrated Parts List	7-1
Lamphead	7-2
Power Supply and RF Detector	7-4
CoolWave Cables	7-6
Recommended Spare Parts	7-7
Specifications	8-1
Power Supply	8-1
Lamphead	8-2
Bulb	8-2
RF Detector	8-2
System Drawings	8-4
UV Glossary	9-1

Section 1

Safety

Introduction

Read and follow these safety instructions. Task- and equipment-specific warnings, cautions, and instructions are included in equipment documentation where appropriate.

Make sure all equipment documentation, including these instructions, is accessible to all persons operating or servicing equipment.

All equipment is designed and manufactured to International Safety Standards to ensure that the health and safety of the operator is protected at all times.

Qualified Personnel

Equipment owners are responsible for making sure that Nordson equipment is installed, operated, and serviced by qualified personnel. Qualified personnel are those employees or contractors who are trained to safely perform their assigned tasks. They are familiar with all relevant safety rules and regulations and are physically capable of performing their assigned tasks.

Intended Use

Nordson ultraviolet (UV) equipment is intended specifically for integration into other machines and should **NOT** be operated as a standalone system or without appropriate safety guarding, shielding, and interlocks. It is the responsibility of the integrator and end user to ensure that the final assembly fulfills all necessary legislation and is completely safe before operation.

This equipment is designed for the accelerated curing of UV inks, adhesives, and coatings. Do not use this equipment to cure alternative materials unless approved by the material supplier.

The equipment is not flame or explosion proof and is not designed for use in hazardous areas.

Use of Nordson equipment in ways other than those described in the documentation supplied with the equipment may result in injury to persons or damage to property.

Some examples of unintended use of equipment include:

- using incompatible materials
- making unauthorized modifications
- removing or bypassing safety guards, shielding, or interlocks
- using incompatible or damaged parts
- using unapproved auxiliary equipment
- operating equipment in excess of maximum ratings
- using equipment in hazardous areas

Regulations and Approvals

Make sure all equipment is rated and approved for the environment in which it is used. Any approvals obtained for Nordson equipment will be voided if instructions for installation, operation, and service are not followed.

Currently there are two organizations that set recommended guidelines for exposure to occupational microwave radiation exposure, OSHA (U.S. Department of labor, Occupational Safety and Health Administration - Directive 29cfr 1910.97) and ANSI (American National Standards Institute - Directive C95.1-1982). The ANSI directive, which is more stringent and most commonly referred to, states that individuals should not be exposed to microwave radiation levels above 5 mW/cm² at 2.45 GHz on a continuous basis.

Personal Safety

To prevent injury follow these instructions.

- Do not operate or service equipment unless you are qualified.
- Do not operate equipment unless safety guards, light shields, doors, and/or covers are intact and automatic interlocks are operating properly. Do not bypass or disarm any safety devices.
- Keep clear of moving equipment. Before adjusting or servicing any moving equipment, shut off the power supply and wait until the equipment comes to a complete stop. Lock out power and secure the equipment to prevent unexpected movement.
- Obtain and read Material Safety Data Sheets (MSDS) for all materials used. Follow the manufacturer's instructions for safe handling and use of materials. Always use recommended personal protection devices.
- Make sure the UV area is adequately ventilated.
- The UV equipment runs at extremely high temperatures. Do not touch the UV lamphead face during operation or immediately after shutting off the equipment.
- To prevent injury, be aware of less-obvious dangers in the workplace that often cannot be completely eliminated, such as hot surfaces, sharp edges, energized electrical circuits, and moving parts that cannot be enclosed or otherwise guarded for practical reasons.
- Always wear safety glasses that offer UV protection.
- Never expose any part of the body to direct or indirect UV light.

Ultraviolet Radiation



WARNING: Ultraviolet light is a form of electromagnetic radiation and can be harmful if exposure exceeds recommended levels. Protect eyes and skin from direct exposure to UV light. All equipment or areas where UV light is used must be adequately guarded, shielded, and interlocked to prevent accidental exposure.

Ultraviolet light is not capable of penetrating into the body and interacting with internal tissues and organs.


The National Institute for Occupational Safety and Health (NIOSH) document *Criteria for Recommended Standard... Occupational Exposure to Ultraviolet Radiation* (PB214 268) establishes guidelines for safe use.

See Figure 1-1. Ultraviolet light is divided into wavelength bands A, B, C, and V along with vacuum UV. Although values for wavelength bands will vary depending on the source, the following ranges may be used as a guide.

- Vacuum UV (100-200 nanometers) - absorbed by air and poses no danger to humans.
- UV-A (315-400 nanometers) - represents the largest portion of UV energy and is most responsible for human skin aging and increased pigmentation. UV-A is at the lower limit of sensitivity to the human eye. Referred to as far UV.
- UV-B (280-315 nanometers) - most responsible for reddening and burning of the skin and damage to the eyes.
- UV-C (200-280 nanometers) - filtered by ozone. Referred to as near UV.
- UV-V (400-450 nanometers) – visible UV

Exposure to UV radiation can result in

- reddening of skin
- headaches
- sore eyes

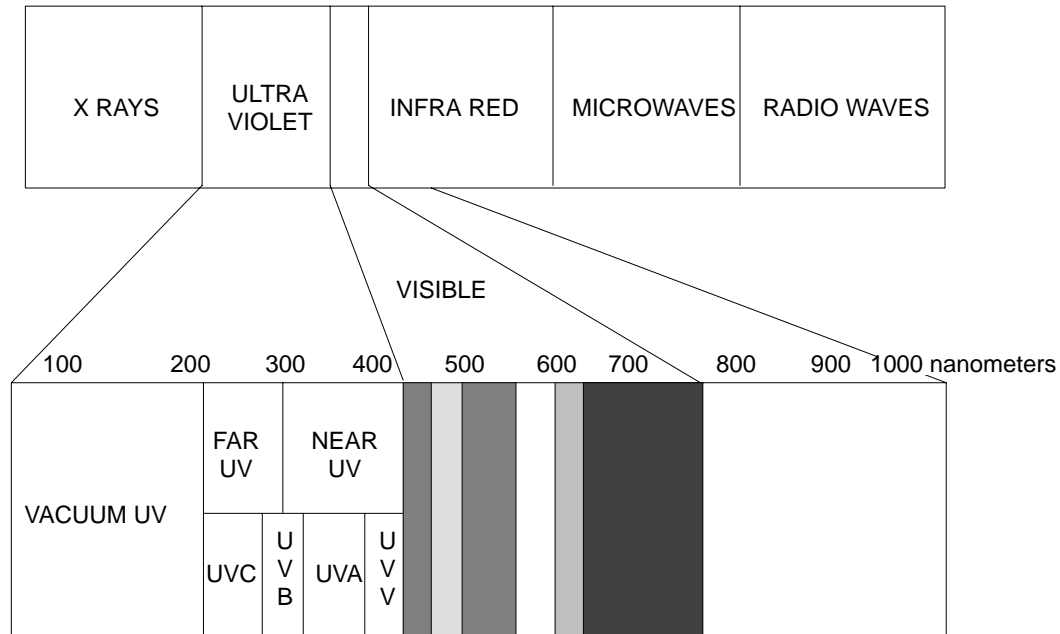

1500021A

Figure 1-1 Ultraviolet Light Wavelength Bands

It is very important that all precautions are taken to prevent all UV light, whether direct or indirect, from escaping the curing area. Exposure to UV light can be harmful to both eyes and skin. Use the following table to determine the permissible exposure time to UV light on unprotected eyes or skin.

Permissible Ultra Violet Exposures as Recommended by the American Conference of Government and Industrial Hygienists	
Duration of Exposure (Per Day)	Effective Irradiance (E Micro Watts/cm sq)
8 hours	0.1
4 hours	0.2
2 hours	0.4
1 hour	0.8
30 minutes	1.7
15 minutes	3.3
10 minutes	5.0
5 minutes	10
1 minute	50
30 seconds	100
10 seconds	300
1 second	3000

First Aid

Store-bought creams, lotions, or aloe can be applied to affected areas of the skin. Seek immediate medical attention for skin burns and direct UV exposure to the eyes.

Microwave Radiation



The lamp system utilizes high powered RF microwave energy generated by a magnetron to provide power to the UV lamp. This technology is identical to that of residential microwave ovens and like these ovens can be dangerous if misused. The lamp system is safe provided that the RF screen and gasketing are intact. Any damage such as rips or holes in the screen may cause leakage of dangerous amounts of microwave radiation. The power to the lamp is interlocked to the RF detector and will shut down if microwave leakage in excess of 2 mW/cm² is detected. Any excessive leakage will cause the system to shutdown and the RF Detector fault will illuminate on the front of the power supply.

Ozone Gas

Ozone (O₃) is a colorless gas that is generated by the reaction of short-wave UV light (around 200-220 nanometers) with air, and it occurs whenever high-energy electrical discharge is present.

Ozone readily reverts to breathable oxygen when mixed with atmospheric air. Ozone should be removed from the UV source via a sealed duct and discharged to atmosphere according to local regulations. The discharge location should be away from pedestrian walkways and window openings and should be well above the average human breathing height for the area.

Regular ozone checks should be carried out every three months using an ozone meter.

Recommended levels of ozone in the atmosphere of a factory should not exceed 0.1 parts per million (PPM). This level is easily obtainable if factory recommended exhaust rates are followed.

Ozone has a very distinct, strong odor even at low levels. Immediate ozone checks should be made if an operator can smell ozone. Most people can smell ozone at about one third the maximum allowable 0.1 PPM level.

Ozone exposure will cause headaches and fatigue. It will also irritate the mouth and throat. Overexposure can lead to respiratory infections.

If ozone is detected,

1. Shut down the UV system.
2. Check exhaust ducting for leaks.
3. Check the operator working area with an ozone meter.

If a person is overcome by ozone,

- Move the individual to a warm uncontaminated atmosphere and loosen tight clothing at the neck and waist.
- Keep the individual at rest.
- If the person has difficulty breathing, oxygen may be administered provided that suitable apparatus and a trained operator are available.
- If breathing is weak or has ceased, artificial respiration should be started.
- Seek medical assistance.

High Temperature



UV curing systems generally run at extremely high temperatures. A sudden shock from touching a high temperature surface might cause an operator to jump or take his attention away from other potential hazards.

When shutting down UV equipment for maintenance, allow the equipment to cool before beginning work, or wear protective gloves and clothing to prevent burns.

High Voltage

The UV curing equipment operates at high voltages up to 5000 Vdc. The system uses high-voltage, self-discharging capacitors. **Once power to the power supply is shut off, the capacitors need 120 to 130 seconds to discharge.**

If any electrical faults develop, the operator should:

1. Switch the equipment off immediately.
2. Make no attempt to service the equipment.
3. Call a qualified electrician, trained to service this type of equipment.

Mercury Bulbs (Lamps)

The bulbs used in UV lamp systems contain mercury under medium pressure. Mercury is a toxic substance and must not be ingested or come into direct contact with the skin. Under normal UV operating conditions, mercury presents no hazard as it is completely contained in the sealed quartz tube of the bulb; however, it is strongly recommended that protective gloves and eye protection be worn when handling UV bulbs.

These precautions should be followed when disposing of UV bulbs:

- Place the bulb in a rigid protective carton.
- Dispose of used bulbs through a local mercury recycling center.
- Wash your hands if a bulb breaks: mercury could come into contact with your skin.
- Do not store or handle bulbs near food or beverages.
- Nordson Corporation will dispose of UV bulbs free of charge provided the customer covers all shipping costs associated with returning the bulbs. For bulb disposal, please clearly mark on the all bulb containers AND shipping packages BULBS FOR DISPOSAL ONLY

Bulbs should be shipped to:

Primarc
Bulb Disposal Department
2 Danforth Drive
Easton, Pennsylvania 18045

UV Curable Inks and Products

Some materials used in UV curable inks, adhesives, and varnishes are toxic. Before handling them, read the Material Safety Data Sheets provided by the manufacturer, use the recommended personal safety equipment, and follow the recommended procedures for safe use and disposal.

Fire Safety

Under proper operating conditions, the surface temperature of the bulb is anywhere between 700-900 °C (1300-1700 °F), and the vapor gas inside the bulb is several thousand degrees Fahrenheit. As a result, there is always a risk of fire, should any paper or flammable materials get jammed under the lamp or in the lamp's vicinity, or should there be any build-up of lint, dirt, or powder within the lamp housing.

To avoid a fire or explosion, follow these instructions.

- Know where emergency stop buttons, shut-off valves, and fire extinguishers are located.
- Clean, maintain, test, and repair equipment according to the instructions in this manual.
- Always keep a fire extinguisher approved for electrical equipment near the unit.

Should a fire occur, the operator must:

1. Switch the equipment off immediately.
2. If possible, put out the fire with a fire extinguisher.

Action in the Event of a Malfunction

If a system or any equipment in a system malfunctions, shut off the system immediately and perform the following steps:

1. Disconnect and lock out system electrical power.
2. Identify the reason for the malfunction and correct it before restarting the system.

Safety Precautions While Servicing

A qualified competent electrician must carry out all electrical maintenance and servicing of this equipment.



WARNING: This equipment operates at high voltages up to 5000 volts dc and is therefore potentially dangerous. The electrician servicing this equipment must take all precautions.



WARNING: Isolate the equipment at the main, disconnect or lockout before removing any of the cover panels

Control System Cleaning

Keep all contactors and relays clean and free from dirt and dust. Check these regularly, particularly in extremely dusty or powder-charged working rooms.

High Voltage Connections

Checks the high voltage connections within the equipment carefully to make sure that these do not become dirty or coated with powder or other possible conducting material. Clean them regularly, at least whenever the lamp is changed, possibly more often where a particularly heavily polluted atmosphere occurs.

Cabinet Cooling

Check the cabinet cooling fan at least weekly and kept clear of any material that might clog or stop its operation. The power supplies run warm and keeping them cool with proper ventilation will prolong their life.

Disposal

Dispose of equipment and materials used in operation and servicing according to local codes.

Safety Symbols

The following safety symbols are used in this manual. The symbols are used along with warnings to help you operate and maintain your equipment safely. Pay attention to all warnings and follow directions to avoid personal injury.



WARNING: Mechanical or combined mechanical/electrical hazards.



WARNING: Electrical hazard



WARNING: Ultra violet light hazard



WARNING: Burn hazard



CAUTION: Equipment hazard

Section 2

Description

Introduction

This section provides a general overview of ultraviolet (UV) curing and the components of the Nordson CoolWave ultraviolet microwave applied curing system.

The system is designed to cure UV inks, adhesives, and coatings for numerous industrial applications.

The system consists of an individual 10-in. lamphead, a corresponding fixed output power supply, and an RF detector. Additional lampheads can be lined up end-to-end to form longer curing widths.

Figure 2-2 and Table 2-1 illustrate and describe the major components of a typical setup for a CoolWave ultraviolet microwave applied curing system. Your system may appear different depending on your application requirements.

What is UV Curing?

Ultraviolet curing is achieved by a chemical reaction in special inks and coatings when intense UV energy is focused on them. Curing efficiency depends on UV power, coating weight, operation speed, type of substrates, material chemistry, and other factors.

How Does it Work?

A microwave generator (magnetron) operating at 2400 to 2500 MHz is used to excite a medium pressure mercury bulb installed in a lamphead. Ultraviolet light between 220 and 470 nanometers is emitted.

Microwave energy from a magnetron is directed into a cavity containing the UV bulb. A screen located at the opening of the cavity allows the UV light to pass through while the microwave radiation is contained.

In addition to ultraviolet light, the high-energy bulbs radiate heat. Therefore, a cooling system is incorporated to take away the excess heat and make sure that the bulbs and housings remain at an acceptable operating temperature.

The unit is fitted with interlocks and safety faults that prevent the operation of the system in an unsafe condition and indicate any faults that might occur on the front panel of the power supply.


The power supply unit provides the high voltage supply for the lampheads and a control circuit to interlock the lampheads with the machine.


Light shielding is required to ensure the stray UV light and heat meet agreed safety criteria.

System Components

Refer to Table 2-1 and see Figure 2-2 for a description of the system components.

Table 2-1 System Components

Item	Component	Description
1	Lamphead	The lamphead consists of a bulb housing, UV bulb, wave guide, reflectors, light detector, starter bulb, and the magnetron assembly. The patented wave guide also couples RF energy to the bulb and provides cooling for the bulb. The lamphead reflects the emitted UV light onto the substrate.
2	Ultraviolet Bulbs	 Only genuine Nordson replacement bulbs should be used with this system. Alternative bulbs may damage the control or over-heat the reflector system. NOTE: The system warranty is void if genuine Nordson UV bulbs are not used. Contact a Nordson UV representative for ordering information. The system uses medium pressure mercury bulbs. The bulbs consist of high-purity quartz and have various fills including doped spectrally enhanced metal halide bulbs to produce light at different wavelengths. Bulbs and controls are carefully matched to give optimum UV output and wavelength requirements.
3	Reflectors	Refer to <i>Reflectors</i> on page 2-4 for more information. Elliptical shaped focus reflectors are used to guide the UV light in a tight band across the surface of the material being cured. The reflectors are manufactured from borosilicate glass, with a dichroic coating to give maximum UV reflectivity while minimizing infrared radiation. NOTE: A wider band of light can be produced by using optional flood reflectors. Contact a Nordson UV representative for details.
4	Starter Bulb	The starter bulb acts as the ignitor for the ultraviolet bulb. The starter bulb is powered with 220 Vac at the same time the magnetron is energized. After the UV bulb reaches full power the starter bulb turns off automatically.
5	Magnetrons	The magnetrons are 3 kW, 2450 MHz \pm 50 frequency generators that convert high voltage electrical inputs to RF energy. The wave guide cavity is designed to couple the RF energy with the UV bulb, thus exciting a UV emitting plasma within the bulb.
6	External Blowers for Cooling	External blowers are used to cool the UV bulb and magnetron. The lamphead requires approximately 350 CFM at 7 in. H ₂ O of cooling air per lamphead in order to function properly. The external blowers must be sized appropriately to provide adequate cooling.
7	Power Supply	The power supply is fully modular. One power supply must be provided for each lamphead. The power supply can operate as a standalone system or part of a Master/Remote circuit. Refer to <i>Power Supply</i> on page 3-1 for details.
8	RF Detector	An RF detector monitors microwave energy levels. The system will shut down when RF levels above 5mW/cm ² are measured. Systems operated as standalone units require one RF detector per power supply unit. If multiple systems are networked then the master power supply unit must be connected to one RF detector. Refer to <i>RF Detector</i> on page 3-3 for details.

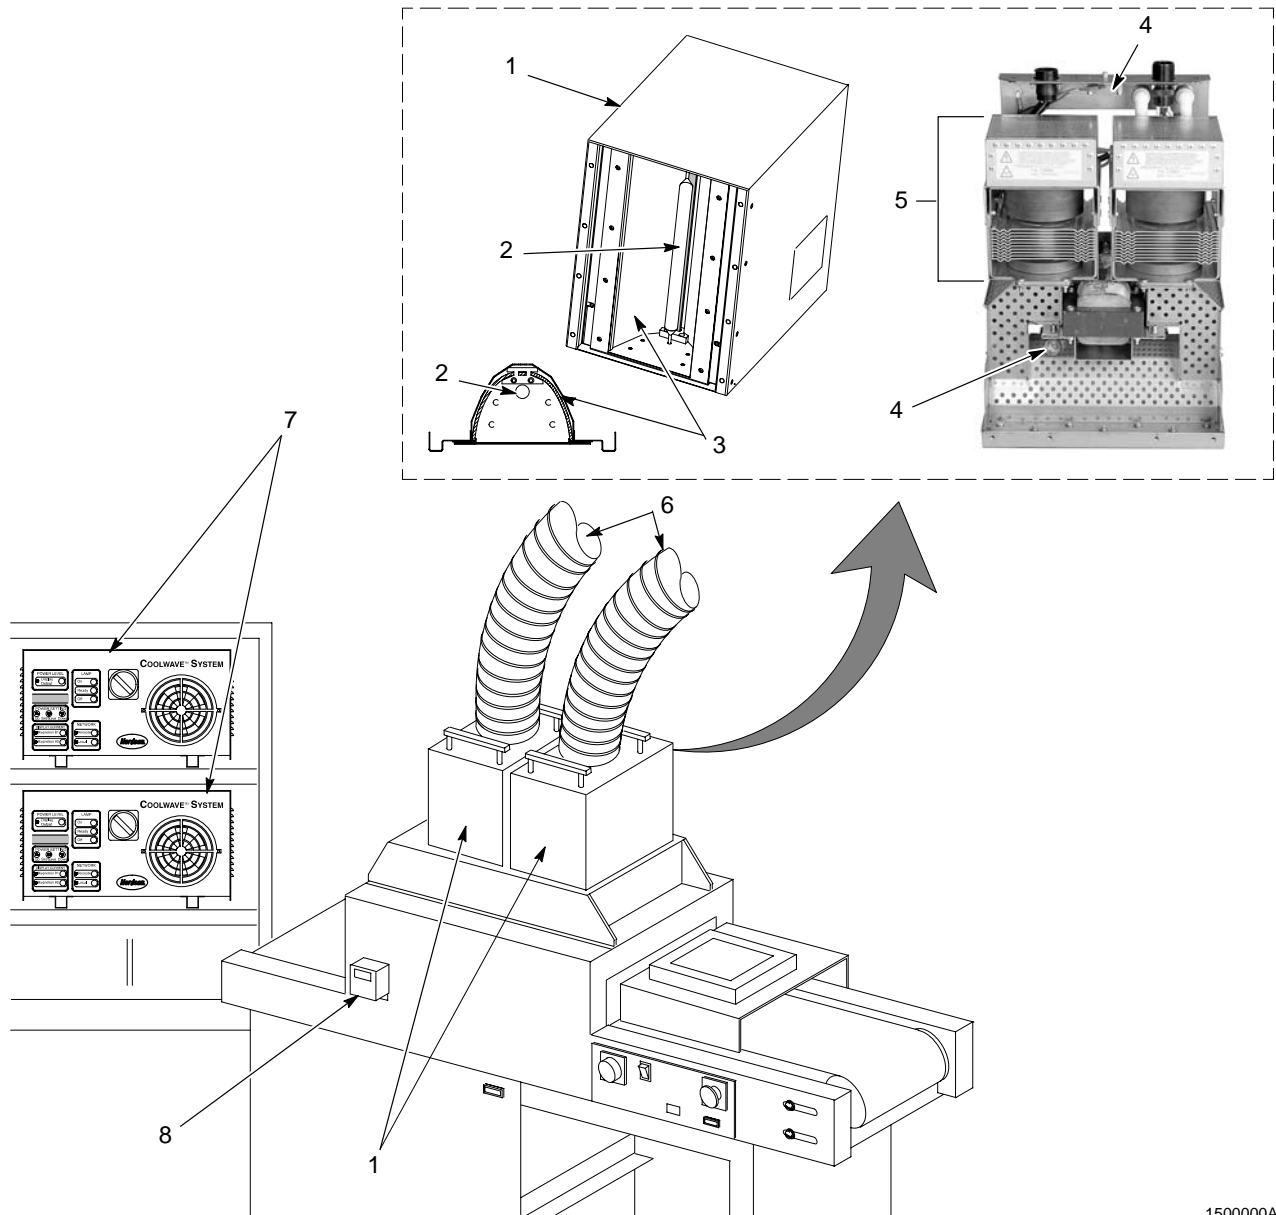

1500000A


Figure 2-2 System Components (Typical UV Curing System Setup)

- | | | |
|---------------------|---|-------------------|
| 1. Lampheads | 4. Starter bulb | 7. Power supplies |
| 2. Ultraviolet bulb | 5. Magnetrons | 8. RF detector |
| 3. Reflectors | 6. Tubing to external blowers for cooling | |

Reflectors


Two types of reflectors are available for the lamphead: focus and flood. The flood reflectors produce a wider band of light.

The reflectors use different retaining brackets to secure them in place in the lamphead. Figures 2-3 and 2-4 illustrate the curve in each reflector and the differences in their retaining brackets.

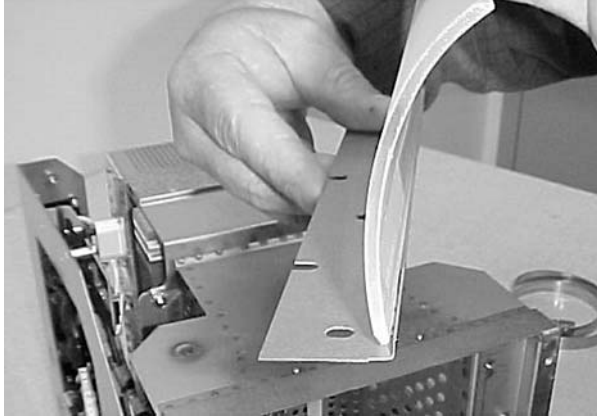

1500089A

Figure 2-3 Focus Reflector and Bracket

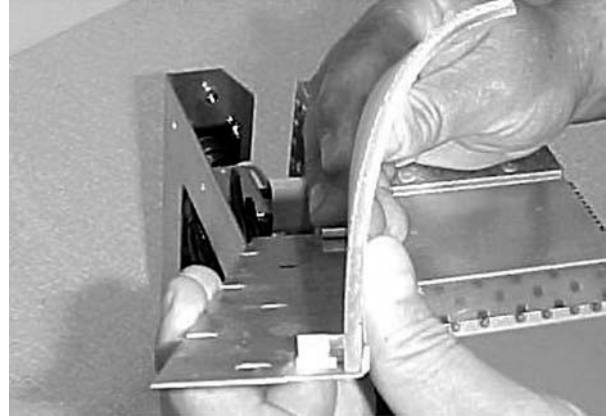

1500094A

Figure 2-4 Flood Reflector and Bracket

Section 3

Installation



WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.

Introduction

This section contains the necessary information for installing the CoolWave system. Directions for mounting and shielding are explained in general terms due to differences for each independent installation.

Inspection and Packaging

The Nordson CoolWave system has been carefully tested, inspected, and packaged prior to shipping. Upon receipt, inspect the shipping materials and components for visible damage. Report any damage immediately to the shipper and to the Nordson UV systems engineering department.

NOTE: When opening the packaging, please take care so that the packaging can be re-used to ship the unit to the next destination. Keep all packaging materials together and in a location that they will not get damaged.

Mounting Guidelines


Power Supply



WARNING: Due to the weight of the power supply, be careful when moving the unit.

See Figure 3-1 for power supply dimensions and clearance requirements.

- The power supply can be mounted on any horizontal surface.
- Power supplies can be stacked up to five units high but due to the weight of each unit (approximately 230 lb) it is recommended that they be stacked so they can be easily accessed for service.
- Leave at least six inches of ventilation clearance on all four sides of the power supply unit.
- Blowers are mounted on the front and the rear of the power supply and need to be free and clear of any obstructions.

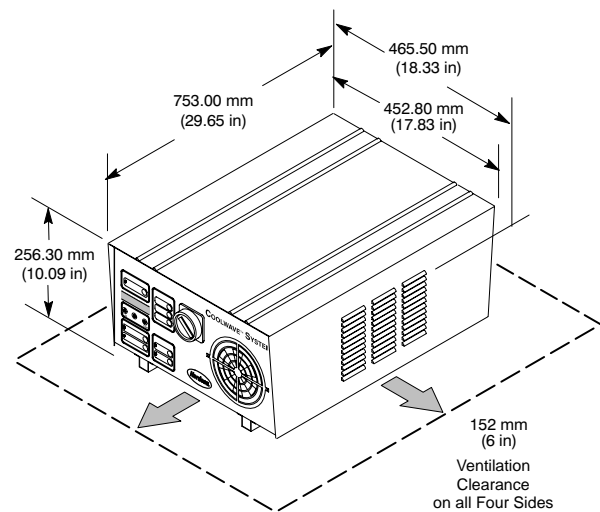

1500001A

Figure 3-1 Power Supply Dimensions

External Blowers - Cooling Air

The cooling requirements for each lamphead is 350 cfm @ 7-in. H₂O of static pressure.

See Figure 3-2. Measure for the correct pressure at each lamphead at the port located at the top and center of the lamphead between the cable connections. The port can be exposed by removing the Phillips-head screw.

NOTE: If the top of the lamphead is not accessible, take a reading in the duct work immediately preceding the lamphead.

In many applications there will be multiple lampheads obtaining their cooling air from a common source such as a plenum.

It is recommended that air flow adjustment dampers be added to the ducting as close to the lamphead as possible.

Lamphead

The lamphead mounting must include provisions for shielding the UV light and venting for the cooling air. Each application contains different constraints and therefore requires custom design of enclosures and light shielding. Contact Nordson UV systems engineering department for help with design.

Figure 3-2 illustrates the physical dimensions of the lamphead. Install the lamphead screen (bulb end) 53.3 mm (2.1 in.) above the substrate for optimal focal positioning when using focus reflectors.

NOTE: If flood reflectors are used there is no set focus distance. The screen to substrate distance is not as critical and can be adjusted to vary dosage.

NOTE: Detailed dimensional data is provided for the lamphead on page 8-8 in the *Specification* section.

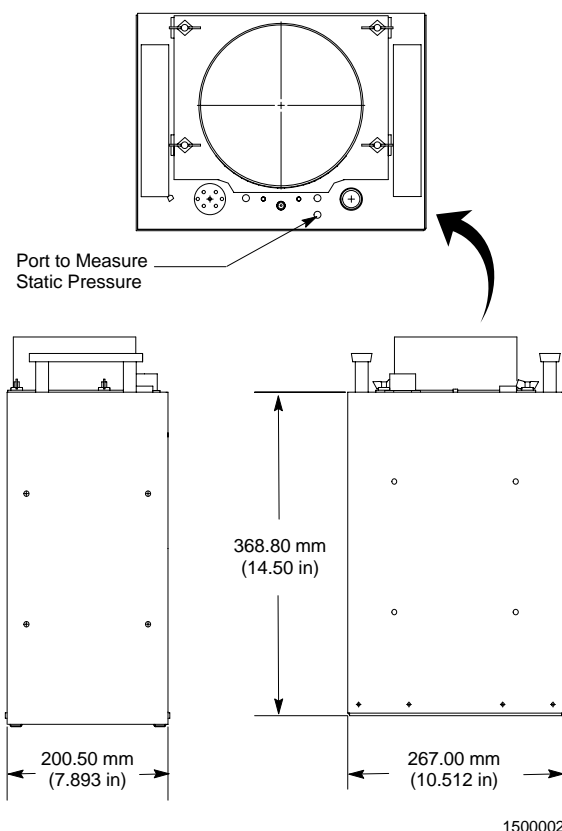


Figure 3-2 Lamphead Dimensions

Note: The mounting holes on both sides of the lamphead are the same.

Light Shielding

- Provide adequate shielding of UV light. The lamphead must be enclosed such that no UV light is allowed to escape.
- Any louvered material used for exhausting must be of a light-shielding design.
- If UV light does escape the operator must wear approved UV-protective eyewear and long-sleeved clothing.

Input Power Configuration

Refer to Table 3-2. Current ratings indicate current demand during normal full-power operation. Size supply wiring and circuit breakers or fuses to allow for heavy current draw during startup.

Table 3-2 Power Line Current

Line	60 Hz			50 Hz		
	Amps @ 380 Vac	Amps @ 440 Vac	Amps @ 480 Vac	Amps @ 380 Vac	Amps @ 440 Vac	Amps @ 480 Vac
L1	14	13	12	16	15	14
L2	22	21	18	25	23	21
L3	13	13	12	16	15	14

Power Source

The customer power source must be wired in accordance with either the National Electric Code, Part I or the Canadian Electrical Code, Part I, or local codes.

Connector P1 on the power supply is for three-phase input power. A 600 Vac, 30 Amp twist lock connector is supplied with the system for the power input.

Measure the incoming power source voltage from the main power supply. Make sure that the power source voltage matches the transformer tap settings.

Environmental Operating Conditions

Condition	Specification
Altitude	Up to 2000 meters (6561 ft)
Temperature	5-40 °C (41-104 °F)
Rh	80% up to 31 °C (88 °F), decreasing linearly to 50% at 40 °C (104 °F).

Network Connections

NOTE: Equipment must be connected in accordance with the NEC and local wiring codes.

The power supply can be configured to form a network of up to 16 systems. The entire network can be operated either from the master control unit front panel or from a remote source.

Network Connectors IN1 and OUT1

See Figure 3-4 and refer to Table 3-3. Use the IN1 and OUT1 connectors (1) (shielded RJ45) to connect multiple units in a Master/Remote fashion. The connection cable is commercially available and should have a rating of CAT3 or higher. Repeat this for each unit

Table 3-3 IN1 and OUT1 Network Connectors

Cable	From	To	Length (ft)	Part
Network	OUT1 connector of a unit	IN1 connector of the next unit	6	775031

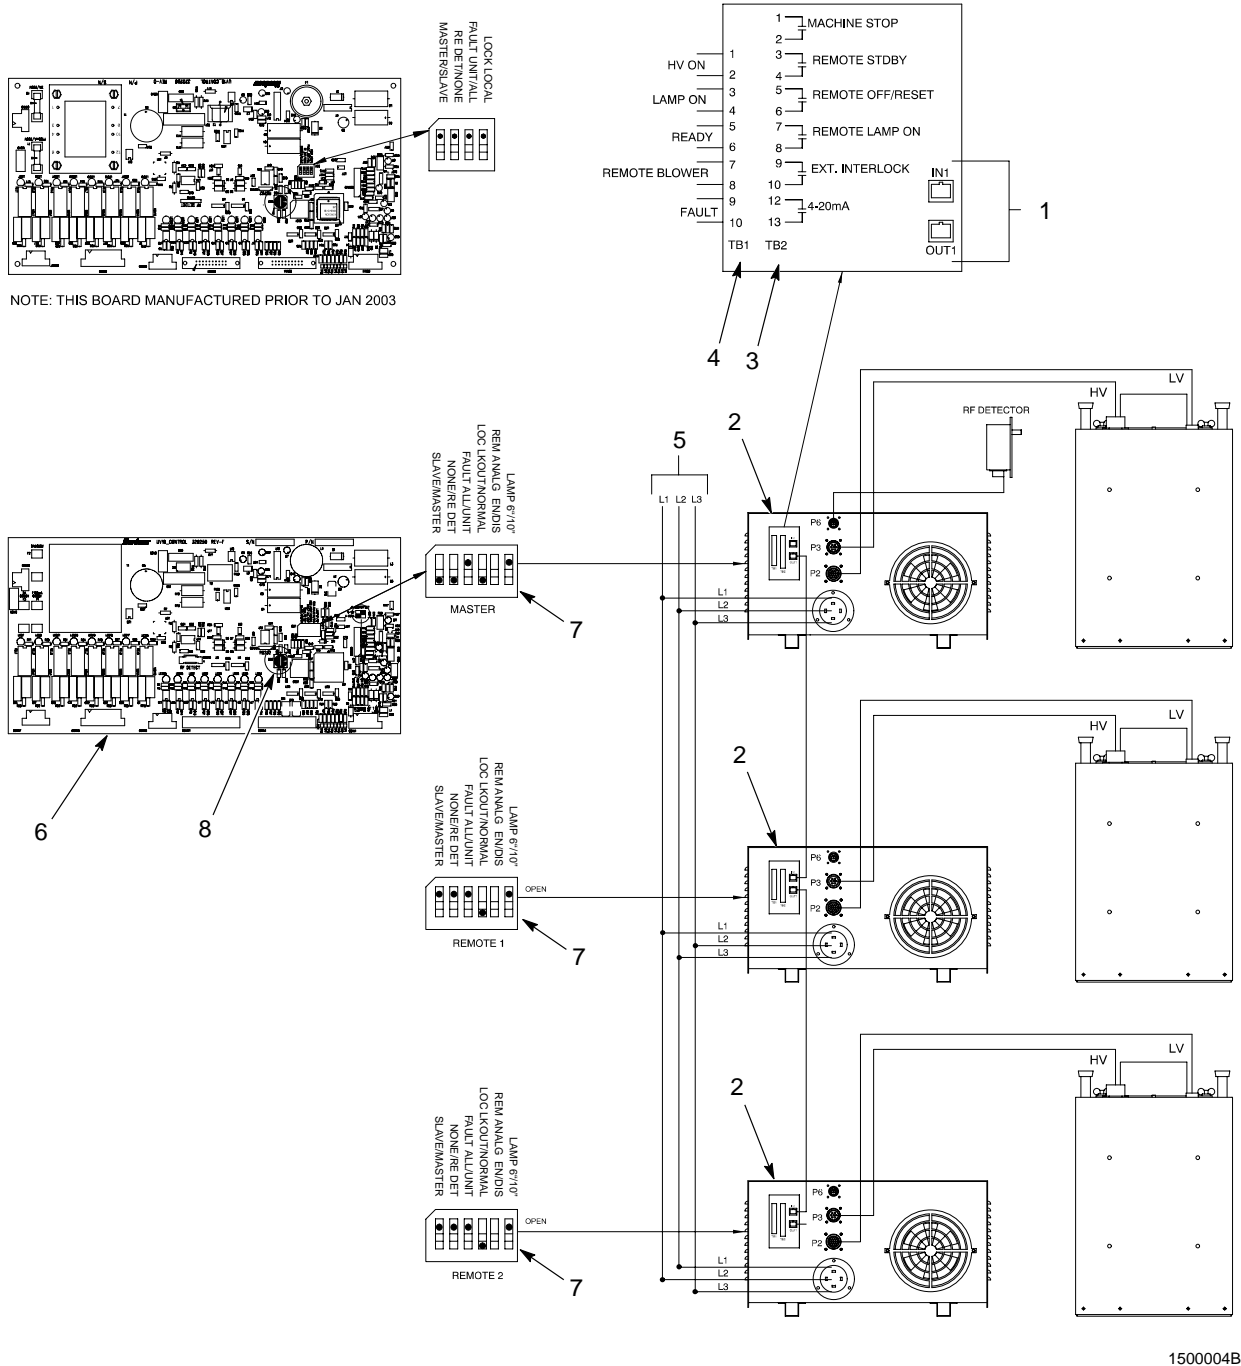


Figure 3-4 Network Connections

- | | | |
|------------------------------------|-------------------------|--------------------------|
| 1. Network connectors IN1 and OUT1 | 4. Output connector TB1 | 7. DIP switches |
| 2. Power supply | 5. Power lines | 8. Rotary address switch |
| 3. Input connector TB2 | 6. Main control board | |

Input Connector TB2

Refer to Table 3-4 and see Figure 3-4.

The inputs from the TB2 input connector (3) are designed for contact closure or an open collector output. With the exception of the 4-20 ma remote analog input, the input terminal voltage is 24 Vdc and will source about 8 ma.

Table 3-4 Input Connector TB2 Pin Assignments


Pin	Function	Remote	Local	Description
1	Common	X	X	If this input is not interfaced to external equipment, a jumper must be installed. Opening this input shuts down the power supply unit, sets the FAULT output, and causes the F STOP fault message to appear on the display.
2	Machine Stop			
3	Common	X	NA	Remotely controls the power supply unit when operating in the Remote mode. A pulse or momentary contact closure to this input places the power supply unit in the Standby mode. (The Off/Reset contact must be closed)
4	Remote Standby			
5	Common	X	NA	Remotely controls the power supply unit when operating in the Remote mode. This contact must be closed for the lamphead to be turned on. Opening the contact will turn the lamphead off and will clear a fault condition.
6	Remote Off/Reset			
7	Common	X	NA	Remotely controls the power supply unit when operating in the Remote mode. A pulse or momentary contact closure to this input turns the CoolWave lamphead to the on state. (The Off/Reset contact must be closed). The Off/Reset contact must be opened to turn the lamphead off.
8	Remote Lamp On			
9	Common	X	X	If this input is not interfaced to external equipment, a jumper must be installed. Opening this input shuts down the power supply unit, sets the FAULT output, and causes the F LOCK fault message to appear on the display.
10	External Interlock			
11	Chassis Ground	X	X	Not Used
12	4-20 ma input or 0-10 Vac	X	NA	Remotely varies the lamphead output power when the unit is in the Remote mode. The lamphead power varies from 25% to 100% power up to the front panel SETPOINT as the input current is varied from 4-20 ma or 0-10 Vac. NOTE: If this input is used to vary the lamphead power and the current drops below about 3 ma, the lamphead power becomes the SETPOINT power. If remote variable power is not required, leave these terminals disconnected. Reversing the ground and signal wires can cause erratic system operation.
13	4-20 ma input or 0-10 Vac (ground)			

Remote Power Level Control

The 4-20 ma power level control can be modified to a 0-10 volt power level control if required. Contact your Nordson UV curing representative for more information on this conversion.

Lamp Start-Up Timing Diagram for Remote Input Contact Closures

The Off/Reset contact must be closed for the unit to go to **Standby** or **On**. Once the lamphead is put into the Standby or On mode the lamphead will remain in that mode until the Off/Reset contact is opened.

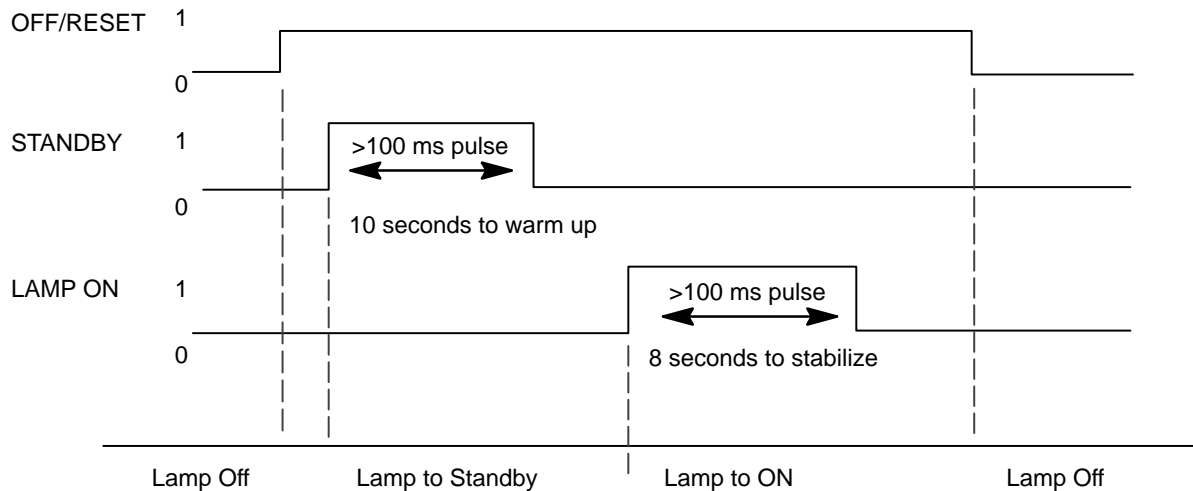

1500003A

Figure 3-5 Lamp Start Up Timing Diagram for Remote Input Contact Closures

Rapid Startup

Use if your system will sit idle in the Standby mode before moving to the On mode.

1. On the LAMP selector of the host machine (or master control unit's lamp selector), press the Standby button. There will be an approximate 10 second warm-up time for the magnetron filament.
2. After the 10 seconds the system will go into standby and remain there indefinitely.

NOTE: Do not leave the power supply in the standby mode for longer than 30 minutes. Prolonged standby periods will shorten the magnetron life.

3. Press the On button to enable the UV light. The light will turn on instantly but will take approximately 8 seconds to stabilize. After the 8 seconds, the system ready output contact (TB1) will close.

Standard Startup

Use to go directly through the warm-up to the On mode.

1. On the LAMP selector of the host machine (or master control unit's LAMP selector), press the LAMP On button.
2. During the next 10 seconds the unit will go through the warm up cycle before turning to On.
3. After approximately 8 more seconds the unit has stabilized and the system is ready to run. The system ready output contact (TB1) will close.

Output Connector TB1

Refer to Table 3-5 and see Figure 3-4.

All outputs from the TB1 output connector (4) are isolated normally open relay contacts and are rated at 240 Vac, one amp maximum.

Table 3-5 Output Connector TB1 Pin Assignments

Pin	Function	Description
1, 2	High Voltage ON	Contact closes when high voltage is applied to the magnetrons.
3, 4	Lamp ON	Contact closes when the light sensor has detected light output from the lamphead (after 10-15 seconds).
5, 6	System Ready	Contact closes after the power supply unit has been turned on and the light detector senses light output. In a networked system all power supply units have to be turned on and all lamphead detectors sense output.
7, 8	Remote Blower	This output contact closes when the lamphead is placed in Standby or On. Please note the contact is only rated for one amp @ 240 Vac.
9, 10	Fault Output	Contact closes whenever there is a fault present on the system.
11, 12	Not Used	

Cable Connections

See Figure 3-4.

Lamphead

Refer to Table 3-6.

Table 3-6 Lamphead Cable Connections

Cable	From	To	Length (ft)	Part
Low Voltage	Power supply unit connector P2 (Low-voltage lamphead)	Low-voltage lamphead	25	775027
			50	775036
			75	775037
			100	775038
High Voltage	Power supply unit connector P3 (High-voltage lamphead)	High-voltage lamphead	25	775024
			50	775032
			75	775033
			100	775034

RF Detector

Refer to Table 3-7

NOTE: Each network requires at least one RF detector. If there are multiple light shielding chambers at least one RF detector must be located in each chamber.

Table 3-7 RF Detector Connections


Cable	From	To	Length (ft)	Part
RF Detector	CoolWave power supply	RF detector	25	775029
			50	775050
			75	775051
			100	775052

Main Control Board Standard Configurations

See Figures 3 -6 and 3-7.

The following information identifies the standard switch configurations for the power supply unit. The systems may be configured to run as standalone or interconnected to form a complete networked system of up to 16 lamps.


NOTE: The main control board was changed in 2003. Figure 3-7 illustrates the previous control board.

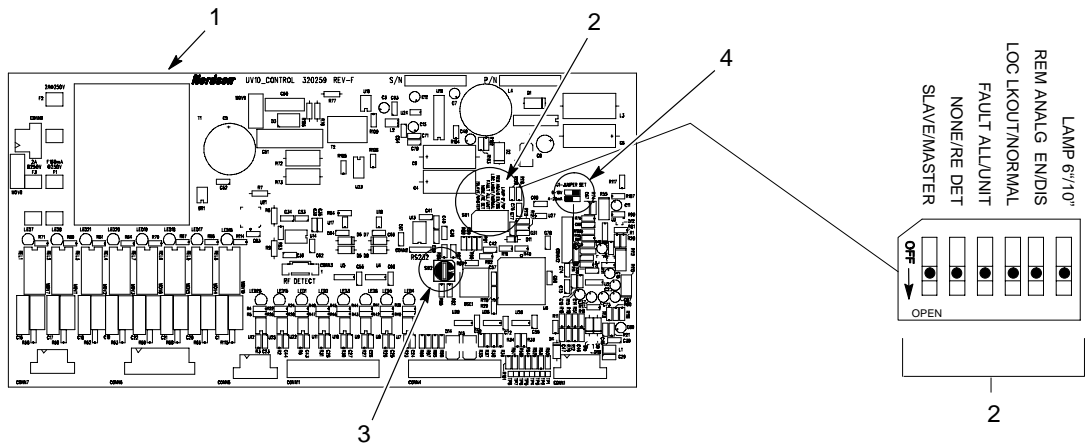

1500063B

Figure 3-6 Main Control Board

1. Main control board
2. Dip switches
3. Power supply address switch
4. 4-2 ma/0-10 Vdc Jumper

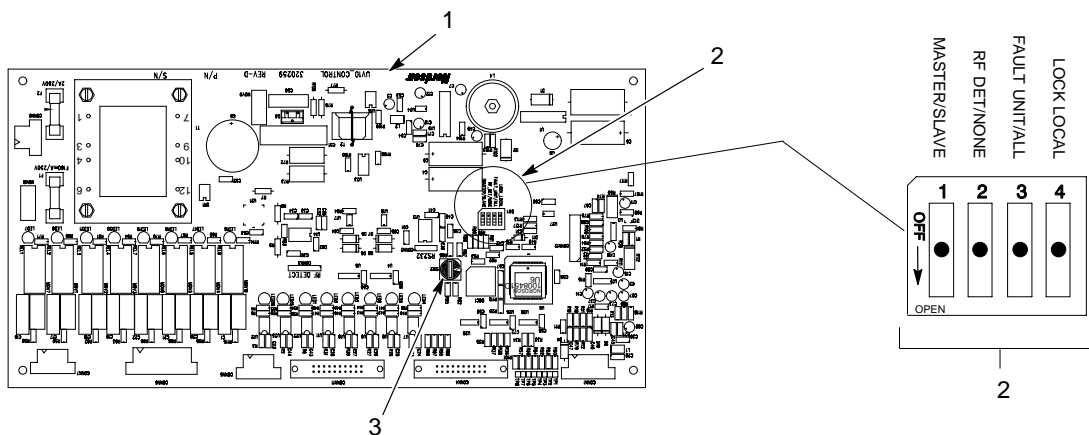

1500005A


Figure 3-7 Main Control Board Manufactured before 2003

1. Main control board
2. Dip switches
3. Power supply address switch

Main Control Board Dip Switches

There are four or six switches on the main board DIP switch that need to be set depending upon the system configuration. Table 3-8 provides an explanation of each switch.

NOTE: Switches 5 and 6 were added to control boards manufactured after 2002.

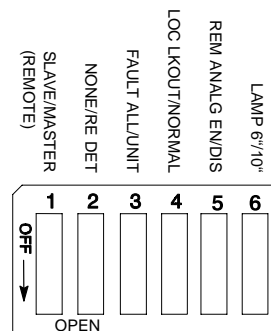

1500031A

Figure 3-8 Dip Switch Configurations

Table 3-8 Main Board Dip Switches

Dip Switch	Description	Function
1	Open/Off = Master unit Closed/On = Remote unit	Configures the power supply to be operated as either a master or remote unit. Systems that operate as standalone units are set up as masters. Systems that operate as remote units are configured as remote (slave) units and are networked to be controlled by a master unit. The networked master unit can be controlled locally or by a remote source (such as a PLC, remote operator panel, parent machine, etc.).
2	Open/Off = RF Detector is used Closed/On = RF Detector is not used	Configures the power supply unit to be operated with or without an RF detector. Standalone systems or master units cannot operate without an RF detector. An RF detector can be installed at each power supply when necessary. Networked systems are typically configured for the master unit to have one RF detector while its remote units (up to 16 units) do not. NOTE: Up to 16 units can be networked and operate with one RF detector but it is recommended that every six units have one RF detector.
3	Open/Off = Fault individual unit Closed/On = Fault all units	Configures the power supply (standalone or networked system) to shut down the individual lamp or the entire network in the event of a fault.
4	Open/On = Enables the front panel controls Closed/Off = Disables the front panel controls	Configures the front panel of an individual power supply to be enabled or disabled. When disabled, all operational functions must be controlled by the inputs or the network master.
5	Open/Off = Remote power input On Closed/On = Remote power input Off	Configures the remote adjustable power input to on or off.
6	Open/Off = Six-inch power supply is used/10-inch power supply is not used Closed/On = Six-inch power supply is not used/10-inch power supply is used	Configures the main control board for the six-inch or the 10-inch power supply and lamphead.

Dip Switch Configurations

Refer to Tables 3-9 through 3-12 for possible configurations in which the dip switches can be set.

OPEN = Off

CLOSED = On

NOTE: Switches 5 and 6 were added to control boards manufactured after 2002.

Table 3-9 Single System Operating Locally

Power Supply	SW1-1	SW1-2	SW1-3	SW-4	SW-5	SW1-6
Standalone (Set Front Panel to: Local)	Master (Open)	RF Detector (Open)	Fault (Open)	Front Panel (Open)	Remote Current/ Voltage Input (Open/Off = Enabled) (Closed/On = Disabled)	6 in. = Open/Off 10 in. = Closed/On

Table 3-10 Single System Operating Remotely

Power Supply	SW1-1	SW1-2	SW1-3	SW1-4	SW-5	SW1-6
Standalone (Set Front Panel to: Remote)	Master (Open)	RF Detector (Open)	Fault (Open)	Front Panel (Open = Enabled) (Closed = Disabled)	Remote Current/ Voltage Input (Open/Off = Enabled) (Closed/On = Disabled)	6 in. = Open/Off 10 in. = Closed/On

Table 3-11 Networked System Operating Locally

Power Supply	SW1-1	SW1-2	SW1-3	SW1-4	SW-5	SW-6
Master (Set Front Panel to: Local)	Master (Open)	RF Detector (Open)	Fault (Single = Open/Off) (All = Closed/On)	Front Panel (Open = Enabled)	Remote Current/ Voltage Input (Open/Off = Enabled) (Closed/On = Disabled)	6 in. = Open/Off 10 in. = Closed/On
Remote (Set Front Panel to: Remote)	Remote (Closed)	RF Detector (Open=Off) (Closed=On)	Fault (Single = Open/Off) (All = Closed/On)	Front Panel (Open = Enabled)	Remote Current/ Voltage Input (Open/Off = Enabled) (Closed/On = Disabled)	6 in. = Open/Off 10 in. = Closed/On

Dip Switch Configurations (contd)

Table 3-12 Networked System Operating Remotely

Power Supply	SW1-1	SW1-2	SW1-3	SW1-4	SW-5	SW-6
Master (Set Front Panel to: Remote)	Master (Open)	RF Detector (Open)	Fault (Single = Open/Off) (All = Closed/On)	Front Panel (Open = Enabled) (Closed = Disabled)	Remote Current/ Voltage Input (Open/Off = Enabled) (Closed/On = Disabled)	6 in. = Open/Off 10 in. = Closed/On
Remote (Set Front Panel to: Remote)	Remote (Closed)	RF Detector (Open=Off) (Closed=On)	Fault (Single = Open/Off) (All = Closed/On)	Front Panel (Open = Enabled) Closed = Disabled)	Remote Current/ Voltage Input (Open/Off = Enabled) (Closed/On = Disabled)	6 in. = Open/Off 10 in. = Closed/On

Power Supply Address Switch

See Figure 3-9

The rotary address switch is located on the main board right next to the DIP switch and has 0 through 9 and A through F as locations.


Standalone Units

When operating the power supply as a standalone unit (single) the switch can be in any location. To avoid an unnecessary problems, it is recommended that it be set to 0.

Networked Units

When operating the power supplies in a networked configuration (master/remoted), you must set the rotary power supply address switches as follows:

Unit	Rotary Switch Setting
Master	0
Remote(s)	any different value
Example: Set the master to 0, remote 1 to 1, remote 2 to 2, etc.	

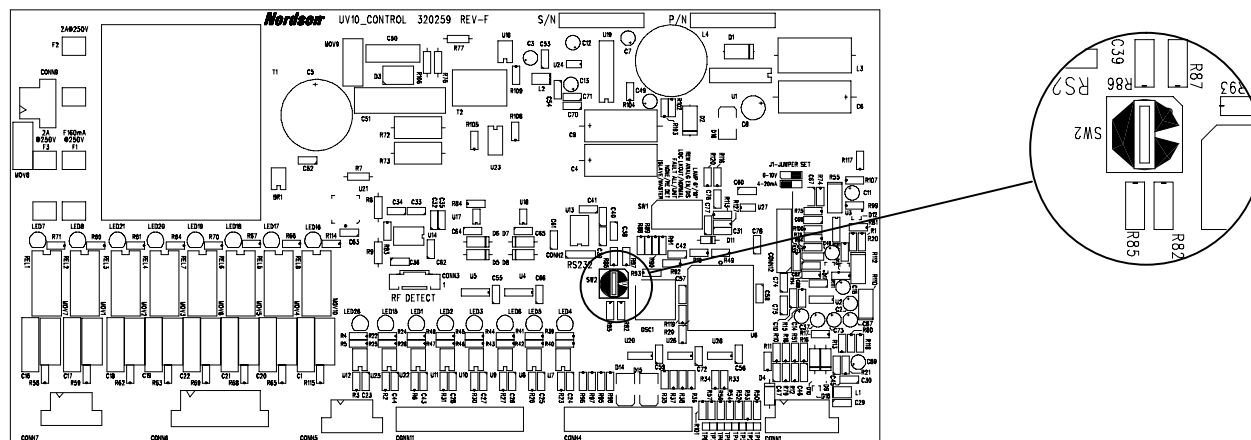

1500037A

Figure 3-9 Power Supply Address Switch on Main Control Board

Section 4

Operation




WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.

Introduction

Startup procedures will vary depending on how the system was integrated into other equipment. As a result, the startup procedures documented in this manual are strictly for the UV equipment

Display and Controls

See Figure 4-1 and refer to Table 4-1.

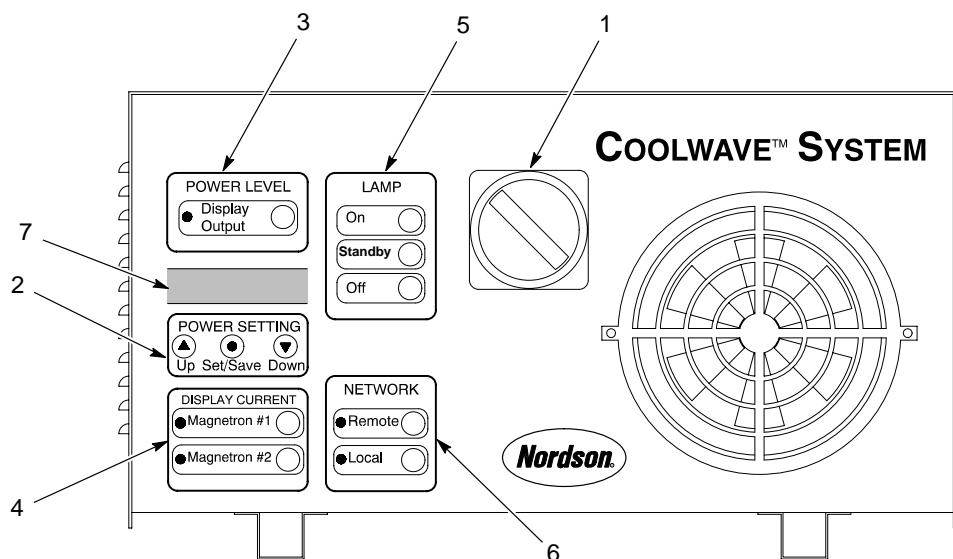

1500006A

Figure 4-1 CoolWave System Displays and Controls

Display and Controls *(contd)*

Table 4-1 Displays and Controls

Item	Control	Description
1	Main Power Switch	Turns the main power on and off to the CoolWave system.
2	POWER SETTING	The system is factory set to operate at 100% output. To check the power level, press the Set/Save button. Change the output in 5% increments by pressing the up or down arrow buttons. Changes take place immediately at the time of pressing the up or down arrow button. Press the Set/Save button in order to save these changes. If the Set/Save button is not pressed the power will revert back to the last saved level when the main power is cycled.
3	POWER LEVEL/Display Output	Displays the percentage power output as controlled remotely and of the actual power level set on the unit.
4	DISPLAY CURRENT	Displays the current flowing to a magnetron. Press the button next to the appropriate magnetron to display that magnetron's current. To leave this display press the same button again.
5	LAMP	Off: Turns the lamphead off. Standby: Applies warm-up power to the magnetron filament and the message WARMUP appears in the display while warming up. Once it is warm, STDBY appears. On: Turns the lamphead on after magnetron filament is warm and LMPDLY is displayed and then LAMPON.
6	NETWORK	Sets system operation from the Local or front panel mode to a Remote or external device or controller.
7	Digital Display	Displays power levels, operation and fault messages.

Display Messages

During operation, the system displays messages that indicate the system operating status. Table 4-2 lists the display messages.

Table 4-2 Display Messages

Message	Description
OFF	The power is turned on to the power supply. The lamphead is in the Off mode.
WARMUP	The magnetron filament is energized. This message will be present for only the filament warm-up time period, which is about 10 seconds.
STDBY	The filament is warm and the unit is waiting for an On command.
LMPDLY	Lamp ON has been enabled. The power contactor is closed, and high voltage has been applied to the magnetrons. This message is present only for the lamphead warm-up period, which is about eight seconds.
LAMPON	Lamp is On at the set power level.
L COOL	Lamp was On and a Standby command has been received. The magnetron power is shut off and the contactor is open. This message is present only for the cool down period, which is about 30 seconds. The lamphead then goes to a standby state. The unit will not restart until the delay time expires.
C DELAY	An Off command was received. The lamphead power is turned off. The message is present only for the cool down period, which is about 60 seconds. The unit will not restart until delay time expires.

Fault Messages

When a fault is detected, the unit shuts down the high voltage, turns on the FAULT relay output, and displays a fault message. Table 4-3 lists the fault messages.

Table 4-3 Fault Messages

Message	Fault	Description
F PRSW	Pressure Switch	Insufficient or no air pressure in the lamphead.
F LOCK	Interlock	External interlock input is open.
F OTMP	Over Temperature	Transformer thermal switch(es) open. May be caused by insufficient air flow through power supply cabinet.
F STOP	STOP	STOP interlock input is open.
F CABL	Cable Interlock Open	The high-voltage cable and/or the low-voltage cable from the power supply to the lamphead is disconnected or open.
F RF	RF Interlock	RF detector is disconnected or has sensed high levels of RF from the lamphead.
F POWR	Power	Light output or magnetron current has been sensed when the power supply is in the Off mode.
F LOUT	Lamp Out	There was insufficient output from the light detector when the power supply energized the magnetrons in the Lamp On mode.
F NETW	Network	The control board can no longer communicate with a previously detected system.
F IBAL	Magnetron Current Imbalance	The magnetrons are turned on (LAMPON) and the magnetron currents differ by more than 100 ma for a period exceeding about 600 ms.
F OVER	Magnetron Over Current	Either magnetron current exceeds 950 ma in the LAMPON mode.

Resetting a Fault

Operating in the Local Mode: Press the Off button to clear a fault once it has been corrected.


Operating in the Remote Mode: Open and close the off/reset contact to reset a fault once it has been corrected.

NOTE: Once the fault has been corrected a remote unit can be reset by either the front panel of the master unit or a host controlling the master unit.

Lamp Start-Up Timing Diagram for Remote Input Contact Closures

The Off/Reset contact must be closed for the unit to go to Standby or On. Once the lamphead is put into the Standby or On mode the lamphead will remain in that mode until the Off/Reset contact is opened.

NOTE: If the LAMP On message does not appear, refer to the *Troubleshooting* section.

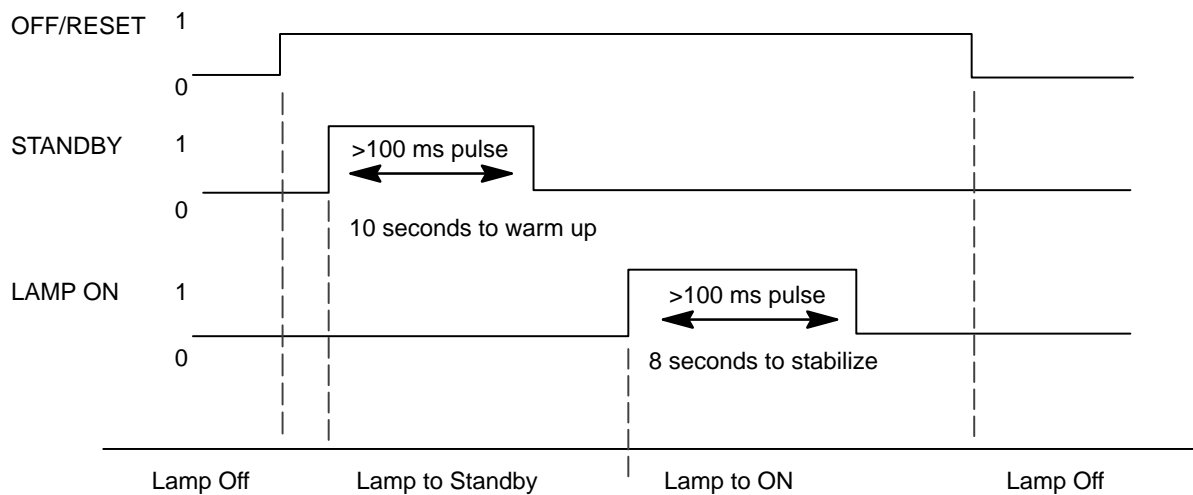

1500003A

Figure 4-2 Lamp Start Up Timing Diagram for Remote Input Contact Closures

Startup

NOTE: Refer to the *Troubleshooting* section if the system faults during startup.

Locally Operated Units

Table 4-4 Startup Procedures for Locally Operated Units

Step	Single Unit Operated Locally	Multiple Units Networked to a Master Unit Operated Locally
1	Switch the electrical disconnect enclosure to ON.	
2	<p>Turn the main power switch on the front of the power supply unit to the on position. The power on message begins to scroll.</p> <p>The power on message begins with the words UV CURING. Three numbers will then scroll listing the software versions for the display board, main control board, and the phase board respectively.</p>	
3	Make sure that all interlocked access doors are closed and that the exhaust fan is running if not directly connected to the power supply blower contacts. If external interlocks are wired and open, a fault message F LOCK will appear in the display.	
4	On the NETWORK selector, press Local.	<p>Set the NETWORK configuration.</p> <ul style="list-style-type: none"> On the master unit's NETWORK selector, press Local. On the remote units' NETWORK Selector, press Remote.
Continued...		

Locally Operated Units (contd)

Step	Single Unit Operated Locally	Multiple Units Networked to a Master Unit Operated Locally
5	<p>Set the POWER SETTING.</p> <ol style="list-style-type: none"> 1. Press the Set/Save button on the POWER SETTING selector until the power level is displayed. 2. Press the up or down arrows to set the desired power level. 3. Press the Set/Save button to save the setting. 	<p>Set the POWER SETTING.</p> <ol style="list-style-type: none"> 1. On the master unit, press the Set/Save button on the POWER SETTING selector until the power level is displayed. 2. Press the up or down arrows to set the desired power level. 3. Press the Set/Save button to save the setting. 4. Set the POWER SETTING at each remote unit between 25 and 100 using the same procedure as the master unit. The POWER SETTING at each remote unit will determine the power output percentage for that unit. <p>For example, if your master unit's POWER SETTING is 100 and your first remote unit's POWER SETTING is set at 50, that remote unit will run on 50% output. If the second remote unit's POWER SETTING is set at 75 then that unit will run at 75% output.</p> <p>Each remote POWER SETTING can be different. Each setting is determined by the POWER SETTING entered in the master control unit and is proportional to the maximum set at each power supply.</p>
6	<p>Enable the cooling fan by either an external/remote switch or a set of contacts from the power supply. If the exhaust fan is wired to the normally open set of contacts on the power supply they will close when the lamphead is put in STDBY or LAMPON mode. If there is insufficient pressure (less than 7 in. H₂O static pressure) there will be a system fault and the message F PRSW will appear in the display. (Check for proper pressure with the appropriate instrumentation.)</p>	

Continued...

Step	Single Unit Operated Locally	Multiple Units Networked to a Master Unit Operated Locally
7	<p>Start up the lampheads.</p> <p>NOTE: If the LAMPON message does not appear, refer to the <i>Troubleshooting</i> section.</p> <p>Rapid Startup</p> <p>Use this procedure if your system will sit in an idle state in the STDBY mode before moving to the On mode.</p> <ol style="list-style-type: none"> 1. On the LAMP selector (or master control unit's LAMP selector) press the LAMP Standby button. There will be an approximate 10 second warm-up time for the filament transformer. WARMUP will appear on the display. 2. After approximately 10 seconds the system will display STDBY until Lamp On is pressed. 3. Press the LAMP On button. It will take approximately eight seconds to stabilize. <p style="text-align: center;">Or</p> <p>Standard Startup</p> <p>Use this procedure to go directly through the warm-up to the On mode.</p> <ol style="list-style-type: none"> 1. On the LAMP selector (or master control unit's LAMP selector) press LAMP On. WARMUP will appear on the display. 2. After approximately 10 seconds the unit will display LMPDLY. It will take 10 seconds to stabilize as it goes thru the warm up cycle before turning to On. 3. After approximately 10 more seconds and the unit(s) has stabilized at the set power level, LAMPON will appear in the display and the system is ready to run. 	

Remotely Operated Units

Refer to Table 4-5.

NOTE: The system can be wired to initiate lamphead start from either the process machine or from the UV power supply control panel.

Table 4-5 Startup Procedures for Remotely Operated Units

Step	Single Unit and Units Networked to a Master Unit Operated Remotely
1	Switch the electrical disconnect enclosure to ON.
2	Turn the main power switch on the front of the power supply unit to the on position. The power on message begins to scroll. The power on message begins with the words UV CURING. Three numbers will then scroll listing the software versions for the display board, main control board, and the phase board respectively.
3	Make sure that all interlocked access doors are closed and that the exhaust fan is running. If external interlocks are wired and open, a fault message F LOCK will appear in the display.
4	On the NETWORK selector, press Remote. NOTE: For networked units, press Remote at each NETWORK selector.
5	Set the POWER SETTING. There are two ways of setting the POWER SETTING. If the power level will be set at the control panel prior to turning on and off remotely (Remote Operation), select the desired power level and save it while the unit is in Local mode. At the Network Selector then select Remote.
6	Enable the cooling fan by either an external/remote switch or a set of contacts from the power supply. If the exhaust fan is wired to the normally open set of contacts on the power supply they will close when the lamphead is put in STDBY or LAMPON mode. If there is insufficient pressure (less than 7 in. H ₂ O static pressure) there will be a system fault and the message F PRSW will appear in the display. (Check for proper pressure with the appropriate instrumentation.)
7	There are many ways that the system can be configured to operate Remotely. By utilizing the power supply I/O the UV system can be controlled from a simple panel or fully automated to work in concert with a complete process. Contact a Nordson UV Curing representative for details.

Shutdown



The system will stop if any of the following conditions occur:

- LAMP STOP push button on UV operator station is pressed
- The power supply switch is turned to the off position
- The LAMP On/Off switch is turned to Off

- Cooling air for the lamphead ceases or reaches an insufficient level
- Any of the safety interlocks wired into the UV equipment are interrupted. These include exhaust fan, access panels, doors and process equipment
- Any fault condition occurs

Refer to Table 4-6 for shutdown procedures for the CoolWave UV system.

Table 4-6 Shutdown Procedures

Step	Shutting Down Systems Locally	Shutting Down Systems Remotely
1	Press the Lamp Off button.	Press the Lamp Off button on the remote or host machine.
2	<p>Allow the lampheads five minutes of cool down before shutting off the cooling air.</p> <p>CAUTION: Failure to do this can cause problems restarting the lamps as well as greatly reduce the life of the lamphead bulbs.</p> <p> Failure to do this can cause problems restarting the lamps as well as greatly reduce the life of the lamphead bulbs.</p>	<p>Allow the lampheads five minutes of cool down before shutting off the cooling air.</p> <p>CAUTION: Failure to do this can cause problems restarting the lamps as well as greatly reduce the life of the lamphead bulbs.</p> <p> Failure to do this can cause problems restarting the lamps as well as greatly reduce the life of the lamphead bulbs.</p> <p>NOTE: Typically the cooling fan will be controlled by the remote or host machine through the I/O of the UV System.</p>
3	Turn off the main power to all units.	

Section 5

Maintenance and Repair



WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.

Maintenance and Replacement Schedule

Table 5-1 lists typical maintenance guidelines and replacement schedules for the components of the CoolWave UV microwave applied curing system with ten-inch lamphead.

Recommended maintenance to the lamphead consists of changing bulbs and reflectors and cleaning or replacing filter material. It is also recommended that reflectors be cleaned periodically.

Recommended maintenance to the power supply consists of cleaning or changing the cooling fan filter material and removing dust from the power supply.



Establish acceptable curing levels for your process and then develop a maintenance schedule that fits your needs. Radiometers can be used to measure relative readings for spectral output as a means of monitoring spectral intensity.

The maintenance and replacement schedule for the system will depend upon your:

- application process
- plant environment
- quality of cooling air passing through the system
- coating formulation

Maintenance and Replacement Schedule *(contd)*

Table 5-1 Typical Maintenance and Replacement Schedule

Component	Maintenance Guidelines	Replace component...
UV Bulb	<p>Bulbs are warranted for a specific number of hours when operating under manufacturer's operation specifications (hours vary with differing bulbs). Depending on your application, some installations may provide acceptable curing well beyond the warranty.</p> <p>NOTE: Do not touch or handle the bulb with bare hands. Be sure to clean them with a lint-free cloth or tissue to remove any fingerprints that might be present.</p>	after 3000 hours of operation or as needed
Magnetrons	The magnetrons are warranted for a specific number of hours when operating under the manufacturer's operation specifications. Each application will be different and, in many cases, the magnetron life will last well beyond the warranty.	after 3000 hours of operation or as needed
Screen	<p>The screen should be free of all debris such as cured material, lint, dust or anything that might impede cooling or UV transmittance. Soaking in a compatible solvent to remove any such items may clean the screen.</p> <p> Do not use damaged screens. This can result in RF detector leakage.</p>	as needed
Reflectors	<p>Reflector surfaces should be cleaned every 500 working hours (more frequently in dirty environments) and at every bulb change. Wipe the reflector surface and the cavity with a clean, lint-free cloth dipped in a suitable solvent such as isopropyl alcohol.</p> <p>Be careful when replacing reflectors. They are made of glass and may break if dropped or forced.</p> <p> Never use metal polish or any abrasive media to clean the reflectors.</p>	as needed
Pressure Switch	Pressure switches are rated for operation between -40 °C and 120 °C. If your system experiences repeated loss of cooling air, the pressure switch may overheat and fail. Make sure that the lamphead cooling fan cools the system sufficiently to avoid pressure switch and other internal lamphead component failures.	when failure occurs
Filters	<p>Filter material is designed to capture dust and contaminants from the plant before entering the UV equipment. These filters are located on the lampheads, remote blowers, and some power supplies (customer-supplied filters). Eventually, the filters will become loaded with matter and will start to impede the flow of air. A dirty filter also will release matter into the air stream that may deposit on the part being cured as well as the bulb and reflector.</p> <p>Use soap and water to wash all filter material that provides cooling to any part of your UV system.</p>	
Remote blower		Weekly or as needed
cooling fan electrical enclosure/ lamphead		


Replacement Procedures

Preparation

1. Turn off the UV system from the process equipment controller or at the UV panel.
2. Allow the lamphead fan to complete its cooling cycle. If this has been prevented by premature isolation of the control cabinet, always allow sufficient time for the bulb to cool before proceeding.
3. Turn off the main electrical disconnect. Follow all relevant OSHA established lockout procedures.
4. If the lamphead has a plastic and metal connector, disconnect the interconnect cables.
5. If necessary, loosen the M6 lamphead mounting fasteners and remove the assembly from the brackets.

Bulb Replacement

1. Perform the *Preparation* procedure in this section.
2. See Figure 5-1. Turn or place the lamphead assembly so that the entire bulb area is exposed and accessible.
3. Remove the eight screws from the lamphead base to remove the RF screen.

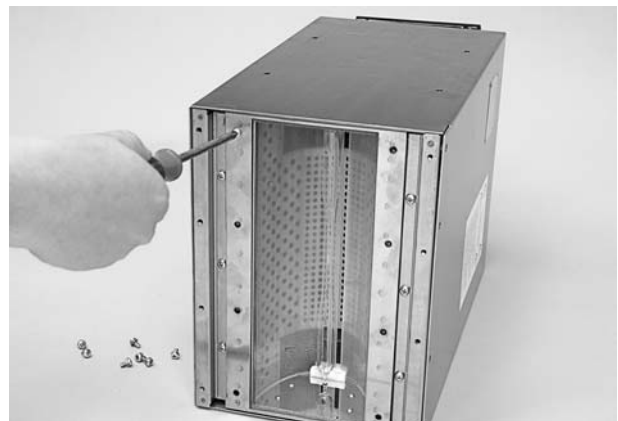


1500013A

Figure 5-1 RF Screen Removal

Bulb Replacement (contd)

NOTE: Do not touch the quartz portion of the bulb with bare hands. Use protective gloves.

4. See Figure 5-2. Grasp the ends of the bulb and push it to one side. Lift one end of the bulb out of the retaining hole; the other end of the bulb should come out of the other retaining hole.
5. Place one end of the new bulb into the retaining hole, push to one side and lower the bulb into place. Install the remaining end of the bulb into the other retaining hole.
6. Place the old bulb in the new bulb packaging and dispose of according to your company's disposal policies. Refer to page 1-5 in the *Safety* section for the bulb return policy.
7. Install the RF screen to the lamphead base with the eight screws.

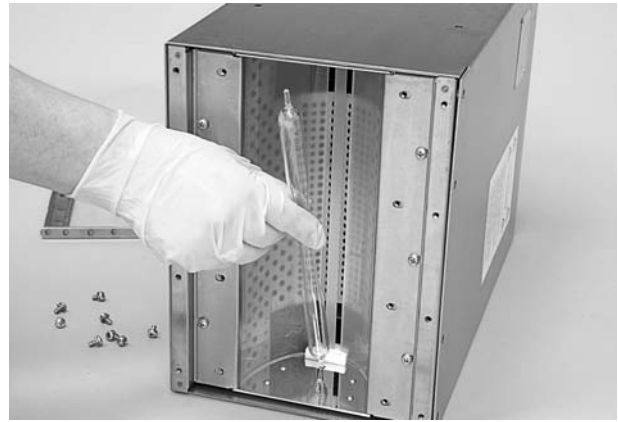

1500014A

Figure 5-2 Bulb Replacement

Reflector Replacement


Two types of reflectors may be used in the lamphead: **Flood** and **Focus**. The reflectors use different retaining brackets within the lamphead.

Remove the Reflectors

1. Perform the *Preparation* procedure on page 5-3.
2. Turn or place the cradle assembly so that the entire bulb area is exposed and accessible.
3. Remove the eight screws from the lamphead base to remove the RF screen.

NOTE: Do not touch the quartz portion of the bulb with bare hands. Use protective gloves.

4. Remove the bulb. Refer to *Bulb Replacement* beginning on page 5-3.
5. See Figure 5-3. Remove the six M3 mounting screws and the two retaining bars from the lamphead base.

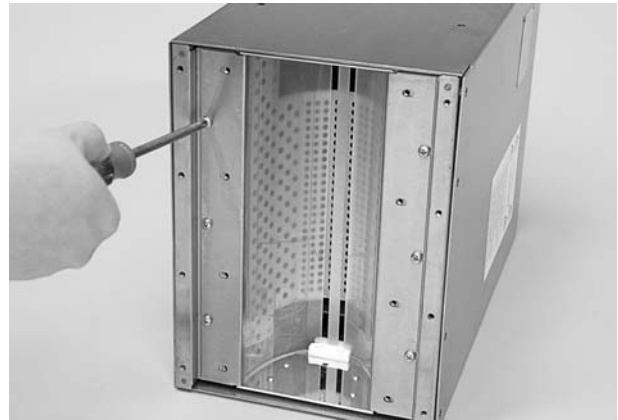


1500015A

Figure 5-3 Retaining Bars Removal

- See Figure 5-4. Carefully slide the two reflectors from the lamphead base.

NOTE: Great care should be taken when replacing reflectors as they are made of glass and may break if dropped or forced.

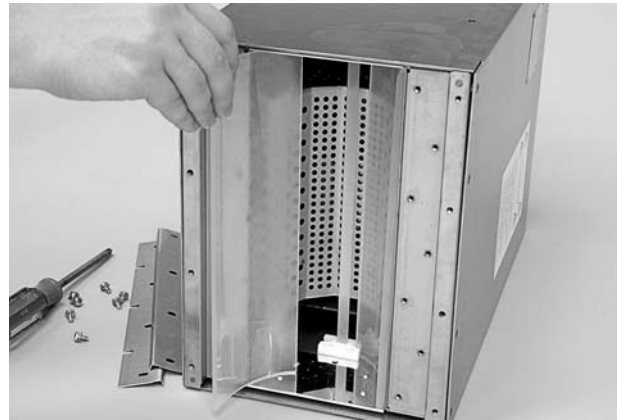

1500016A

Figure 5-4 Reflector Replacement

Install the Reflectors


- Slide the reflectors into the lamphead base.

NOTE: The inside edge of the reflector should slide into the notches of the white retainers.

- Set the retaining brackets in place. The placement of the retaining brackets differs between focus and flood reflectors.


Focus Reflectors: See Figures 5-5 and 5-6. The edge of the reflector will sit on the retainer springs on the inside edge of the bracket.

The lip on the focus bracket will go to the inside of the lamphead and wrap around the reflector. Line up the retaining bracket mounting holes with the mounting holes in the lamphead base.

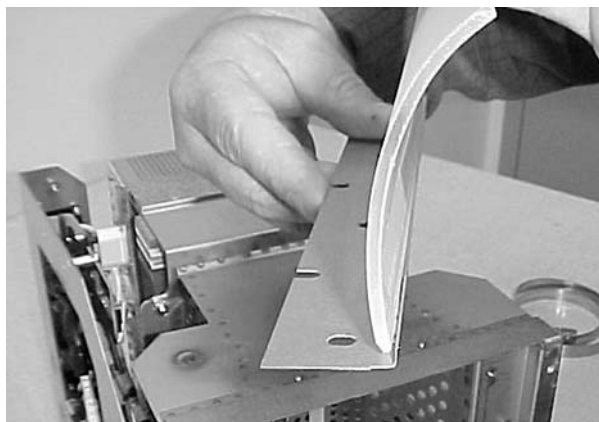

1500089A

Figure 5-5 Focus Reflector Curve and Retaining Bracket

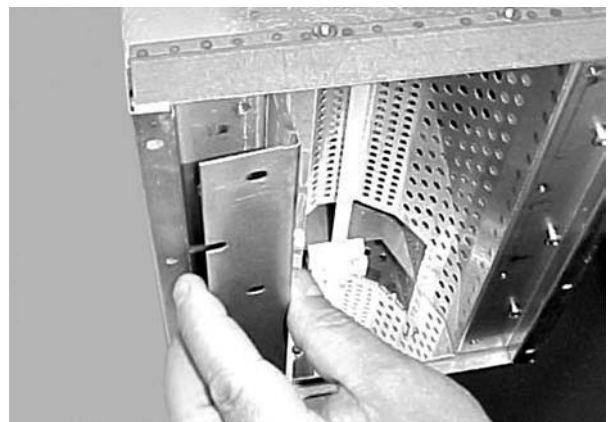


1500091A

Figure 5-6 Placing the Focus Retaining Bracket

Install the Reflectors *(contd)*


Flood Reflectors: See Figures 5-7 and 5-8. The edge of the reflector will sit on the retainer springs on the inside edge of the bracket.

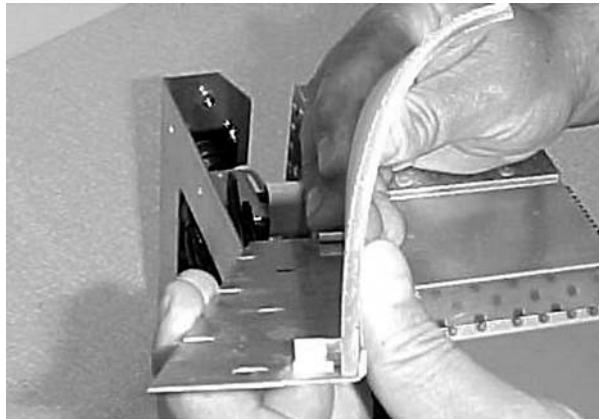

1500094A

Figure 5-7 Flood Reflector Curve and Retaining Bracket

The lip on the flood bracket will go to the inside of the lamphead and wrap around the edge of the reflector. The curve of the reflector causes the reflector to sit farther away from the side of the lamphead. Line up the retaining bracket mounting holes with the mounting holes in the lamphead base.

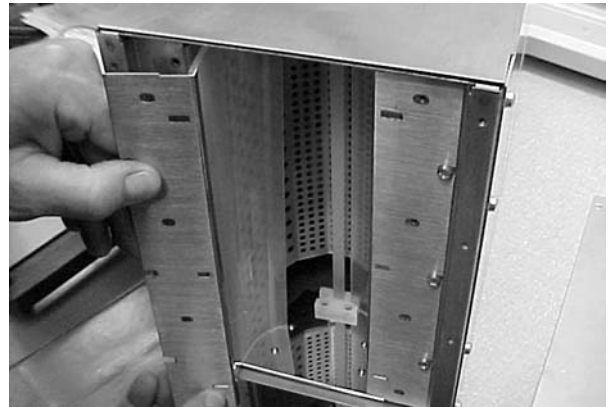

1500099A

Figure 5-8 Placing the Flood Retaining Bracket

3. Install the six M3 mounting screws to secure the reflectors and retaining brackets.
4. Install the bulb.
5. Install the RF screen to the lamphead base.

Internal Component Replacement

Remove the lamphead cover to replace the following internal components:

- Pressure switch
- Light detector board
- Starter bulb
- Magnetron


NOTE: Steps 2 through 4 are optional and are taken only to prevent any damage to the RF screen or bulb.

1. Perform the *Preparation* procedure on page 5-3.
2. Turn or place the lamphead assembly so that the entire bulb area is exposed and accessible.

3. Remove eight screws from the lamphead base to remove the RF screen.


NOTE: Do not touch the quartz portion of the bulb with bare hands, use protective gloves.

4. Remove the bulb. Refer to *Bulb Replacement* on page 5-3.
5. See Figures 5-9 and 5-10. Remove the 12 screws from the lamphead cover to remove the cover.

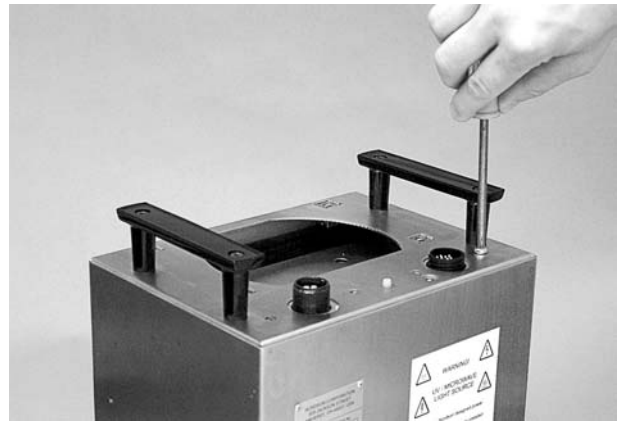

1500017A

Figure 5-9 Lamphead Cover Removal
(Top Four Screws)

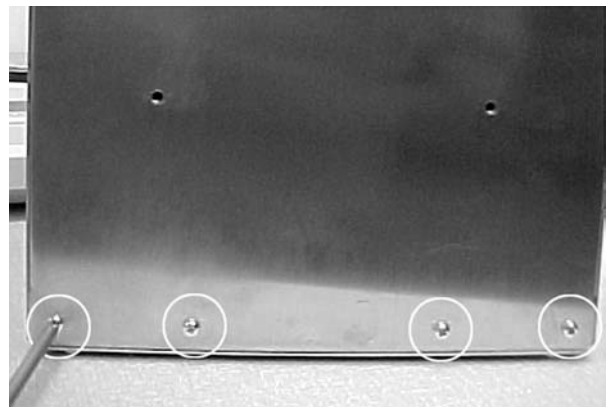


1500098A

Figure 5-10 Lamphead Cover Removal
(Eight screws -four on each side)

NOTE: Step six can be skipped if you are only replacing the pressure switch.

6. Remove the transformer and connector bracket by removing the three screws identified in Figure 5-11.

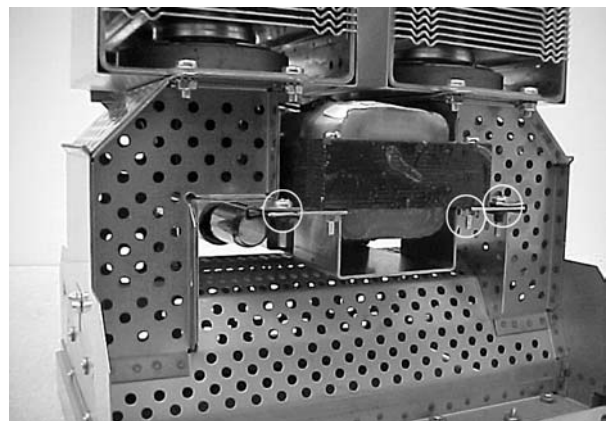


1500078A

Figure 5-11 Transformer and Connector Bracket
Removal

Internal Component Replacement (contd)

7. See Figure 5-12. Pull the the transformer and connector bracket from the lamphead base

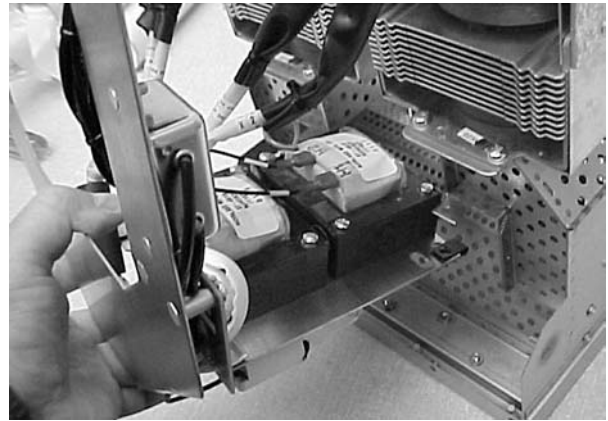


1500079A

Figure 5-12 Transformer and Connector Bracket

Pressure Switch


1. Follow steps 1-5 under *Internal Component Replacement* on page 5-6 to remove the lamphead cover.
2. Note the orientation of the pressure switch with regard to the airflow direction.
3. See Figure 5-13. Remove the M3 screws securing the pressure switch to the insulating plate.

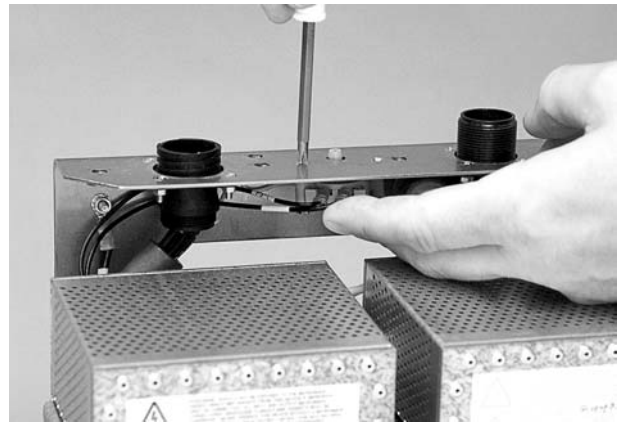

1500018A

Figure 5-13 Pressure Switch Removal

4. See Figure 5-14. Disconnect the the two wires and connect them to the new pressure switch in the same orientation.
5. Fasten the pressure switch to the insulator plate and stainless steel mounting bracket with the M3 fasteners.
6. Assemble the lamphead.

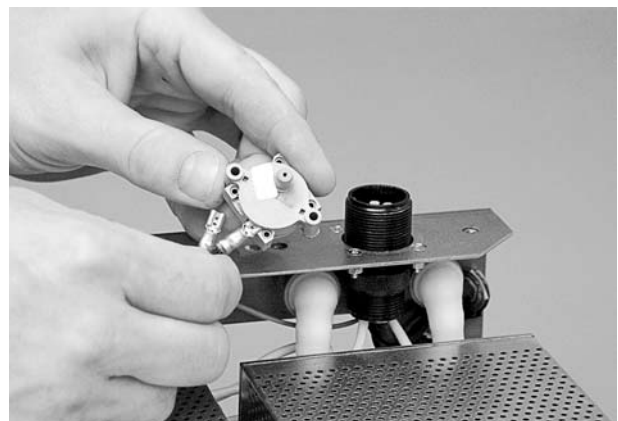

1500019A

Figure 5-14 Pressure Switch Wires

Light Detector Board

1. Follow steps 1-7 under *Internal Component Replacement* beginning on page 5-6 to remove the lamphead cover.
2. See Figure 5-15. Disconnect the light detector board.
3. Remove the two M4 screws.
4. Replace and connect the new board and install it with the M4 screws.
5. Install the transformer and connector bracket.
6. Install the cover on the lamphead base.
7. Install the bulb and RF screen, if necessary.




1500082A

Figure 5-15 Light Detector Board Replacement

Starter Bulb

1. Follow steps 1-7 under *Internal Component Replacement* beginning on page 5-6 to remove the lamphead cover.
2. See Figure 5-16. Cut or remove the threadlocking material from the base of the bulb to remove the bulb.
3. Apply a small dot of threadlocking material to the base of the new bulb and install it.
4. Install the transformer and connector bracket.
5. Install the cover on the lamphead base.
6. Install the bulb and RF screen, if necessary.

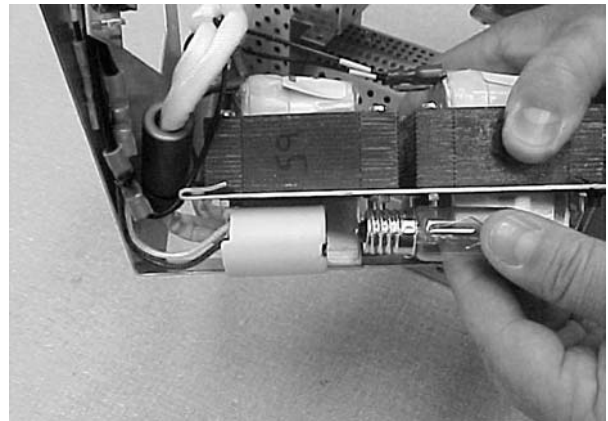

1500083A

Figure 5-16 Starter Bulb Replacement

Magnetron

NOTE: Each lamphead contains two magnetrons. The replacement procedure is the same for each magnetron.


Remove the Magnetron

1. Follow steps 1-7 under *Internal Component Replacement* beginning on page 5-6 to remove the lamphead cover.

NOTE: Be careful not to cut or damage the black sleeving.

2. See Figure 5-17. Cut the four ties securing the black sleeving over the high-voltage ring terminals.
3. See Figure 5-18. Slide the sleeving down to expose the two ring terminals. Remove the two screws.

4. See Figure 5-19. Remove the four screws, washers and nuts that secure the magnetron to the lamphead base. Remove the magnetron.

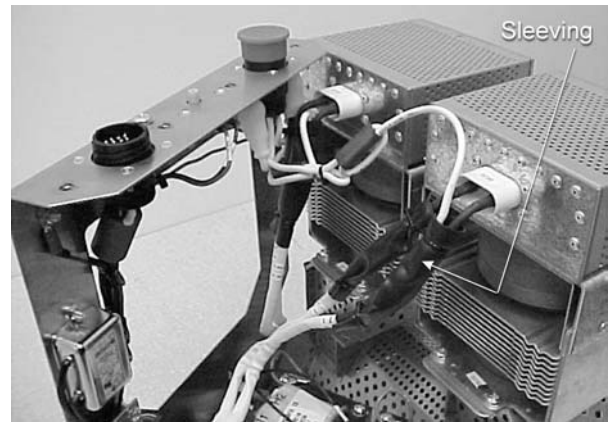


1500084A

Figure 5-17 Black Sleeving



1500066A

Figure 5-18 Ring Terminals

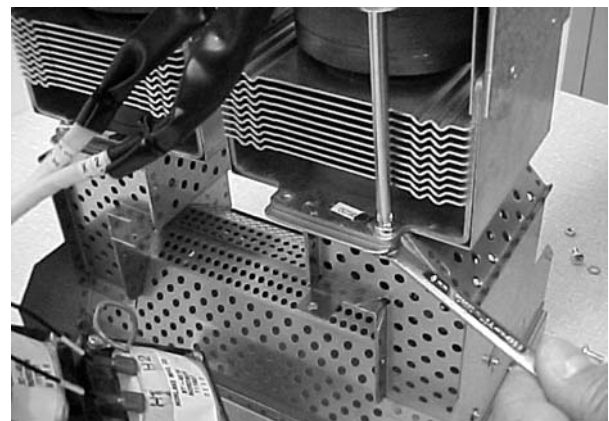


1500085A

Figure 5-19 Remove the Magnetron

Install the Magnetron

1. See Figure 5-20. Inspect the gasket around the antenna of the new magnetron, making sure it is smooth and free of debris.

Check for signs of arcing or burning around the flange. If arcing or burn marks are present, contact your Nordson representative.
2. Carefully insert the antenna through the hole in the lamphead base.

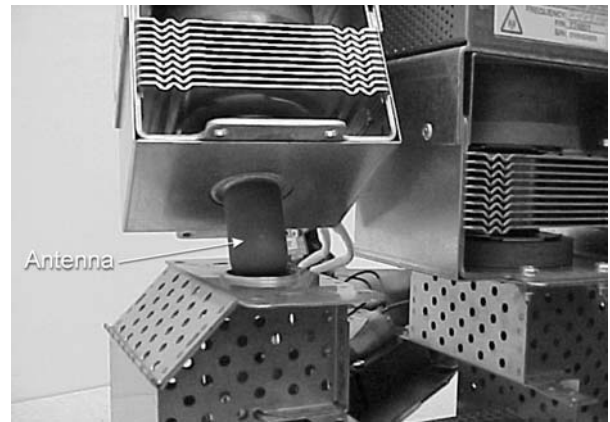


1500086A

Figure 5-20 Install the Magnetron

3. Make sure the magnetron gasket is sealed evenly on the flange and secure the magnetron to the lamphead with the four screws, washers, and nuts. Tighten the nuts to 1.9 N•m (17-in. lb).
4. Secure the two high-voltage ring terminal on each magnetron with the two screws.
5. Pull the black sleeving up over the high-voltage terminal and secure it in place with tie wraps.
6. Install the transformer and connector bracket.
7. Install the cover on the lamphead base.
8. Install the bulb and RF screen, if necessary.

Fuse Replacement

See Figure 5-21 to identify the three fuses on the main control board that are replaceable.

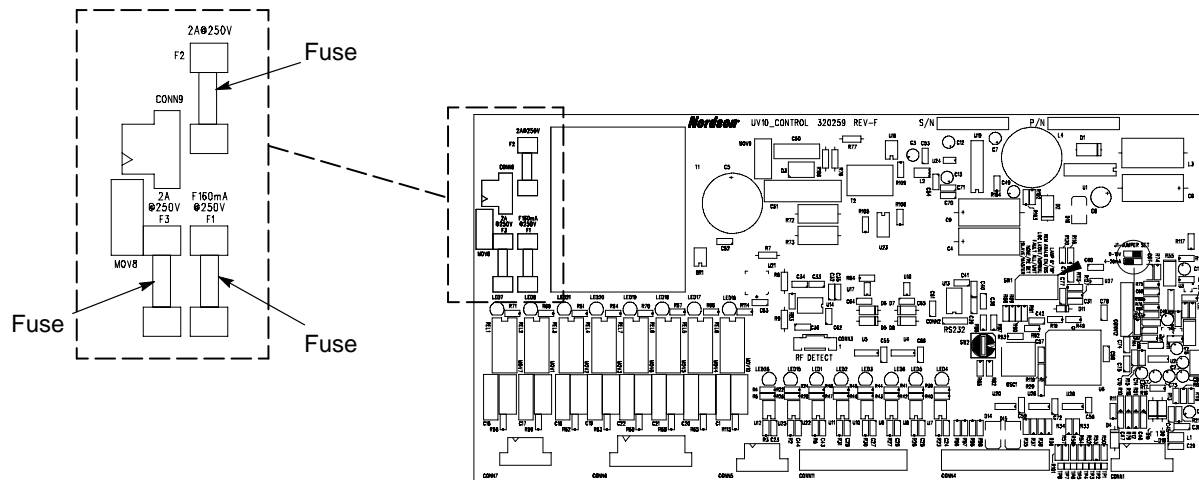

1500073A

Figure 5-21 Main Control Board Fuses

Air Filter Cleaning and Supply Cooling Fan

NOTE: Repeat the same procedure for all external blowers.

NOTE: Some filter media can be washed and reused. Refer to the users' manual for your blower.

1. Turn off the main electrical disconnect. Follow all relevant OSHA-established lockout procedures.
2. Locate the cooling fan on the power supply. It is located on the front side of the power supply.
3. Make sure the safety cover is clean and free of any debris.
4. Examine fan blades for contamination. Clean or replace if necessary.

Section 6

Troubleshooting



WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.

Introduction

This section contains troubleshooting procedures. These procedures cover only the most common problems that you may encounter. If you cannot solve the problem with the information given here, contact your local Nordson representative for help.

General Troubleshooting

NOTE: If your unit does not start up, disconnect power to the unit then remove the cover and check the fuses. See Figure 7-2 for fuse locations.

Problem	Possible Cause	Corrective Action
1. Lamp Fault Fault Message: F LOUT	The light detector outputs a voltage when the lamphead is in operation: the voltage drops below a minimum Interconnect cable at lamphead or power supply is loose Bulb has failed	Check the magnetron current, main fuses, phase control board, and light detector. Disconnect and reconnect the cable. Replace the bulb.
2. Pressure Fault Fault Message: F PRSW	Cooling fan is not running Cooling fan is running in reverse Filter on cooling fan is dirty	Remote Blower: Check the motor starter, fuses, and overloads. Reset or replace overloads and/or fuses if necessary. Check the wires at the blower and at the starter, check the fan rotation. Replace the filter on the blower. Wash the filter on the remote blower with soap and water.
Continued...		

General Troubleshooting *(contd)*

Problem	Possible Cause	Corrective Action
2. Pressure Fault Fault Message: F PRSW <i>(contd)</i>	<p>Remote cooling fan is wired improperly</p> <p>Pressure sensor has failed</p> <p>Pressure drop in remote blower ducting is too great</p>	<p>Switch two of the main input power wires on the three-phase remote blower. Air flow will be in the same direction for all combinations; however, there will be greater air flow when the motor is spinning the correct direction. Follow the motor rotation diagram on the motor.</p> <p>The pressure sensor is a normally open switch that closes with 7-in. wc static pressure. Make sure both the external and internal port of the switch are open and there are no obstructions. If there are no obstructions and the blower is operating correctly, replace the switch.</p> <p>Ducting to the remote blower should be large enough with minimum of sharp bends to supply adequate ventilation. If pressure faults have consistently been a problem, you may want to consider mounting the remote blower closer to the lamphead or increasing the duct size or blower.</p>
3. Magnetron Current Fault Fault Message: F POWR	<p>The current in one or both magnetrons has dropped below 200 ma for a duration of more than 600 ms</p> <p>Magnetron current is detected when unit is off</p>	<p>Reset the lamphead and restart the system. If the problem still exists there may be a magnetron failure.</p> <p>Reset the lamphead and restart the system. If the problem still exists there may be a magnetron failure.</p>
4. Interlock Fault Fault Message: F LOCK	<p>Open external interlock</p>	<p>Check all system interlocks.</p>
5. Power Supply Overtemp Fault Message: F OTMP	<p>Insufficient air flow to the power supply</p> <p>Main power supply</p>	<p>Clean the blower filters and make sure that there are no obstructions in the blowers and the filters.</p> <p>Check the main power supply for proper voltage.</p>
<i>Continued...</i>		

Problem	Possible Cause	Corrective Action
6. Magnetron Overcurrent Fault Fault Message: F OVER	Magnetron current has exceeded 950 ma	Check all the power supply to lamphead cables for damage or arcing. Check for signs of arcing in the lamphead.
7. Network Fault Fault Message: F NETW	A fault has been detected somewhere on the network; the master shows F NETW and the problem unit will display the specific fault	Determine the unit with the fault and correct the fault. Clear the master or individual control unit.
8. E-Stop system will not start Fault Message: F STOP	Pins 1 and 2 on the input are not jumpered E-Stop buttons are activated either on the power supply or external equipment	Add an E-Stop jumper between pins 1 and 2. Check and release all E-Stops.
9. Irradiator will not light Fault Message: F CABL	Power supply to lamphead cables disconnected or faulty	Check the cable connections. Check the continuity of cables.
10. RF Fault Fault Message: F RF	RF detector switch is not set properly on control board RF detector is not properly connected RF cable is faulty RF detector is detecting a high level of RF	Check the dip switch setting on the main control board. Check the connections. Check the continuity of the cable. Replace the cable if necessary. Check the lamphead screen for holes and tears. Replace the lamphead screen if necessary. Check to make sure the screen is securely fastened.
11. Magnetron current imbalance Fault Message: F IBAL	The current from magnetron 1 and magnetron 2 has differed by more than 100 ma for a time longer than 600 ms Magnetron current has fallen below 200 milliamps	Check the SCRs and phase control board. Check that the fuses are ok. Check the diode block five ohm feedback resistor for short or open.
<i>Continued...</i>		

General Troubleshooting *(contd)*

Problem	Possible Cause	Corrective Action
12. Open filament transformer circuit Fault Message: F FUSE	Filament transformer fuse blown	Check fuse on main circuit board.
	Filament transformer bad Short or open in cable to filament transformer	Check output of filament transformer. Remove the LV cable from the power supply and check Pin 9 and Pin 10 for continuity.
	Filament in magnetron failed	Replace the magnetron.

Troubleshooting Bulb Problems

NOTE: Any bulb that has been touched or contaminated should be cleaned with alcohol prior to use. Failure to do so can and possibly will result in premature failure of the bulb.

Problem	Possible Cause	Corrective Action
1. Bulbs have white fingerprints on quartz	Quartz was touched when bulb was installed: finger dirt and oils were deposited on the quartz and burned into the quartz when the bulb was running	Replace the bulb. The spectral output has diminished. In the future, do not touch the quartz portion of the bulb under any circumstances.
2. New bulb does not start	Pressure seal has been broken	Replace the bulb.
3. Quartz portion of bulb is rippled	Bulb is overheating	Check the ventilation. Clean the filter material. Check the pressure switch, it may have failed.
4. Quartz has a white or gray cloudy appearance	Bulb is overheating	Replace the bulb. If UV output is below acceptable levels.

Troubleshooting Curing Process Problems

Problem	Possible Cause	Corrective Action
1. System running ok but material not curing	Reflectors are installed in the wrong orientation	Check to make sure reflectors are installed and are installed correctly.
	Reflectors are badly damaged or dirty	Replace the reflectors.
	RF screen dirty	Remove and clean the RF screen.

Section 7

Parts

Introduction

To order parts, call the Nordson Customer Service Center or your local Nordson representative. Use this five-column parts list, and the accompanying illustration, to describe and locate parts correctly.

Using the Illustrated Parts List

Numbers in the Item column correspond to numbers that identify parts in illustrations following each parts list. The code NS (not shown) indicates that a listed part is not illustrated. A dash (—) is used when the part number applies to all parts in the illustration.

The number in the Part column is the Nordson Corporation part number. A series of dashes in this column (- - - - -) means the part cannot be ordered separately.

The Description column gives the part name, as well as its dimensions and other characteristics when appropriate. Indentions show the relationships between assemblies, subassemblies, and parts.

- If you order the assembly, items 1 and 2 will be included.
- If you order item 1, item 2 will be included.
- If you order item 2, you will receive item 2 only.

The number in the Quantity column is the quantity required per unit, assembly, or subassembly. The code AR (As Required) is used if the part number is a bulk item ordered in quantities or if the quantity per assembly depends on the product version or model.

Letters in the Note column refer to notes at the end of each parts list. Notes contain important information about usage and ordering. Special attention should be given to notes.

Item	Part	Description	Quantity	Note
—	0000000	Assembly	1	
1	000000	• Subassembly	2	A
2	000000	• • Part	1	

Lamphead

See Figures 7-1 and 7-3.



Item	Part	Description	Quantity	Note
1	775010	FOCUS LAMPHEAD, CoolWave	1	
1	775015	FLOOD LAMPHEAD, CoolWave	1	
2	775042	• MERCURY BULB, CoolWave, 10 in., H	1	A, B
2	775043	• IRON BULB, CoolWave, 10 in., D	1	A, B
2	775044	• GALIUM BULB, CoolWave, 10 in., V	1	A, B
2	775045	• INDIUM BULB, CoolWave, 10 in.	1	A, B
2	775046	• MERCURY PLUS BULB, CoolWave, 10 in., H+	1	A, B
3	775060	• BRACKET, retaining reflector, CoolWave, focused	2	B
3	775061	• BRACKET, retaining reflector, CoolWave, flood	2	B
4	775062	• SWITCH, pressure, CoolWave, 10	1	B
5	775064	• FILAMENT TRANSFORMER, CoolWave	2	B
6	775040	• BULB, starter	1	
7	775090	• FOCUSED REFLECTOR, CoolWave, standard	2	B, C
7	775092	• FOCUSED REFLECTOR, CoolWave, 3.1	2	B, C
7	775100	• FLOOD REFLECTOR, CoolWave, standard	2	B, C
8	775115	• DEFLECTOR, strip, quartz, CoolWave	1	B
9	775120	• SCREEN, lamphead, CoolWave	1	B
10	775130	• MAGNETRON PAIR, 3.0 Kw, CoolWave	1	B
11	775139	• SENSOR, light, CoolWave, 6/10	1	B
12	-----	• SCREW, M4 mounting holes	8	
13	-----	• PAN HEAD SCREW, M4 x 8, Phillips, steel, zinc plated	14	
14	-----	• PAN HEAD SCREW, M4 x 8, Phillips with lock washer, steel, zinc plated	8	
15	-----	• BUTTON HEAD SOCKET SCREW, M3 x 10, with Nylok nut	4	
16	-----	• BUTTON HEAD SOCKET SCREW, M3 x 5, stainless steel	8	
17	-----	• PAN HEAD SCREW, M5 x 8, Phillips, steel, zinc plated	4	
18	-----	• SCREW, M5 mounting holes	12	
NS	775160	MANUAL, CoolWave	1	B

NOTE A: Order the correct bulb for your particular system.

B: Recommended spare part. Keep this part in inventory to avoid unplanned downtime.

C: Order the correct reflector for your particular system.

NS: Not Shown

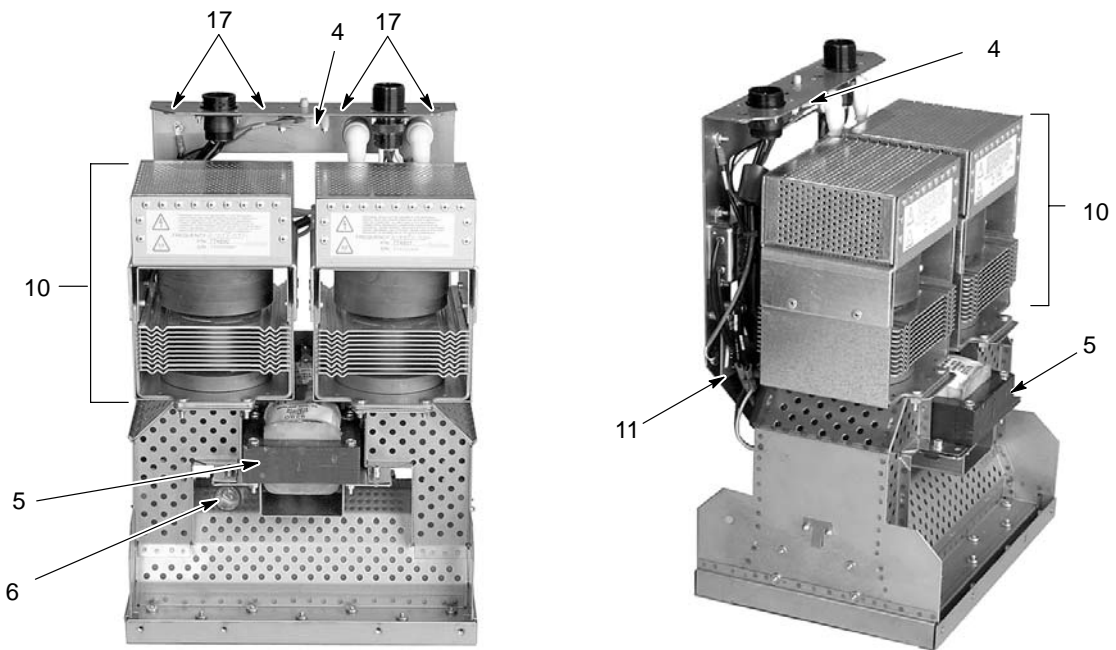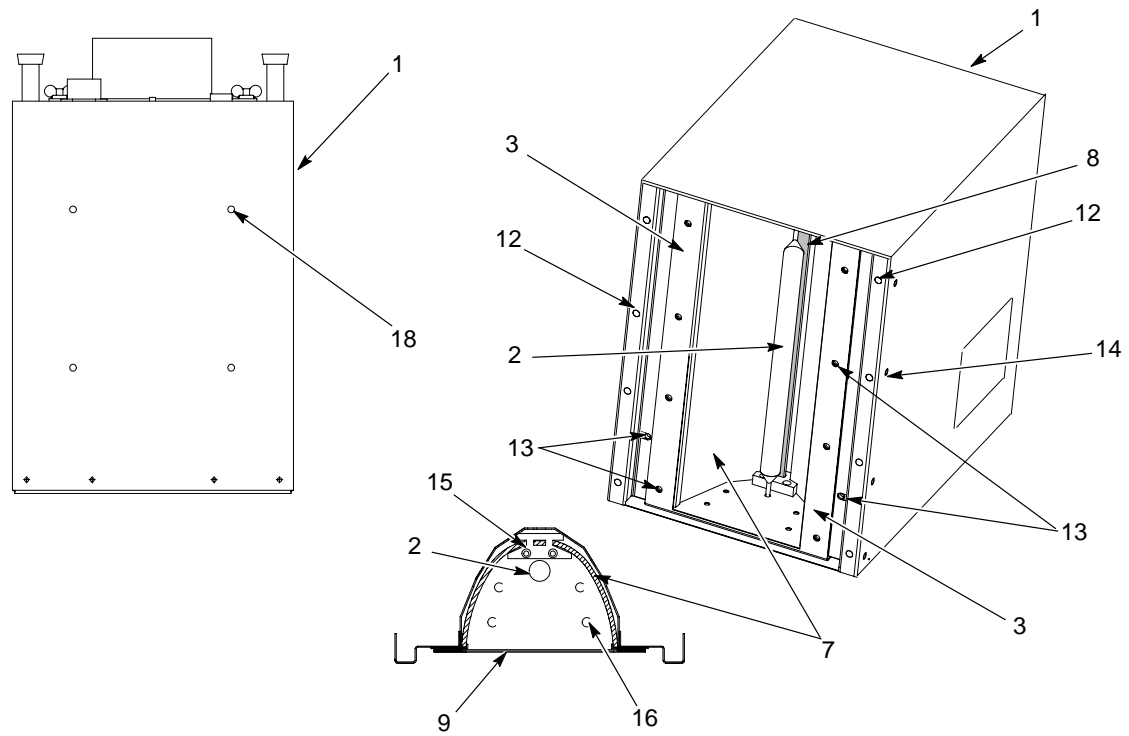

1500026A

Figure 7-1 CoolWave Lamphead

Power Supply and RF Detector

See Figures 7-2 and 7-3.

Item	Part	Description	Quantity	Note
19	775019	50/60 HZ POWER SUPPLY, CoolWave	1	
20	775066	• POWER TRANSFORMER, CoolWave	2	
21	775068	• TRANSFORMER, step down, 480-240	1	
22	775076	• 50/60 Hz CAPACITOR, 1.1 Mf, 2500 Volt, CoolWave	4	
23	775080	• FUSE, kit, CoolWave	1	A, B
23a	-----	• • FUSE, 30 amp	3	B
23b	-----	• • FUSE, 1 amp	2	B
23c	-----	• • FUSE, 160 microamp, 250 volt	1	B
23d	-----	• • FUSE, 2 amp, 250 volt	2	B
24	775085	• FAN, cooling, CoolWave	2	A
25	775140	• PCB, CONTROL, CoolWave	1	
26	775142	• PCB, DISPLAY, CoolWave	1	
27	774144	• PCB, PHASE, CoolWave	1	
28	775146	• PCB, I/O, CoolWave	1	
29	775150	• MODULE, rectifier, CoolWave	2	
30	-----	• PAN HEAD SCREW, M5 x 10, with captive lock washer, stainless steel	10	
31	775022	RF DETECTOR, CoolWave, 6/10	1	
<p>NOTE A: Recommended spare part. Keep this part in inventory to avoid unplanned downtime.</p> <p>B: The fuse kit part, 775080, contains three 30 amp, 500 volt main fuses; two one amp, 500 volt fuses for the step down transformer; one 160 microamp, 250 volt control board fuse; and two two amp, 250 volt fuse for the filament transformer.</p>				

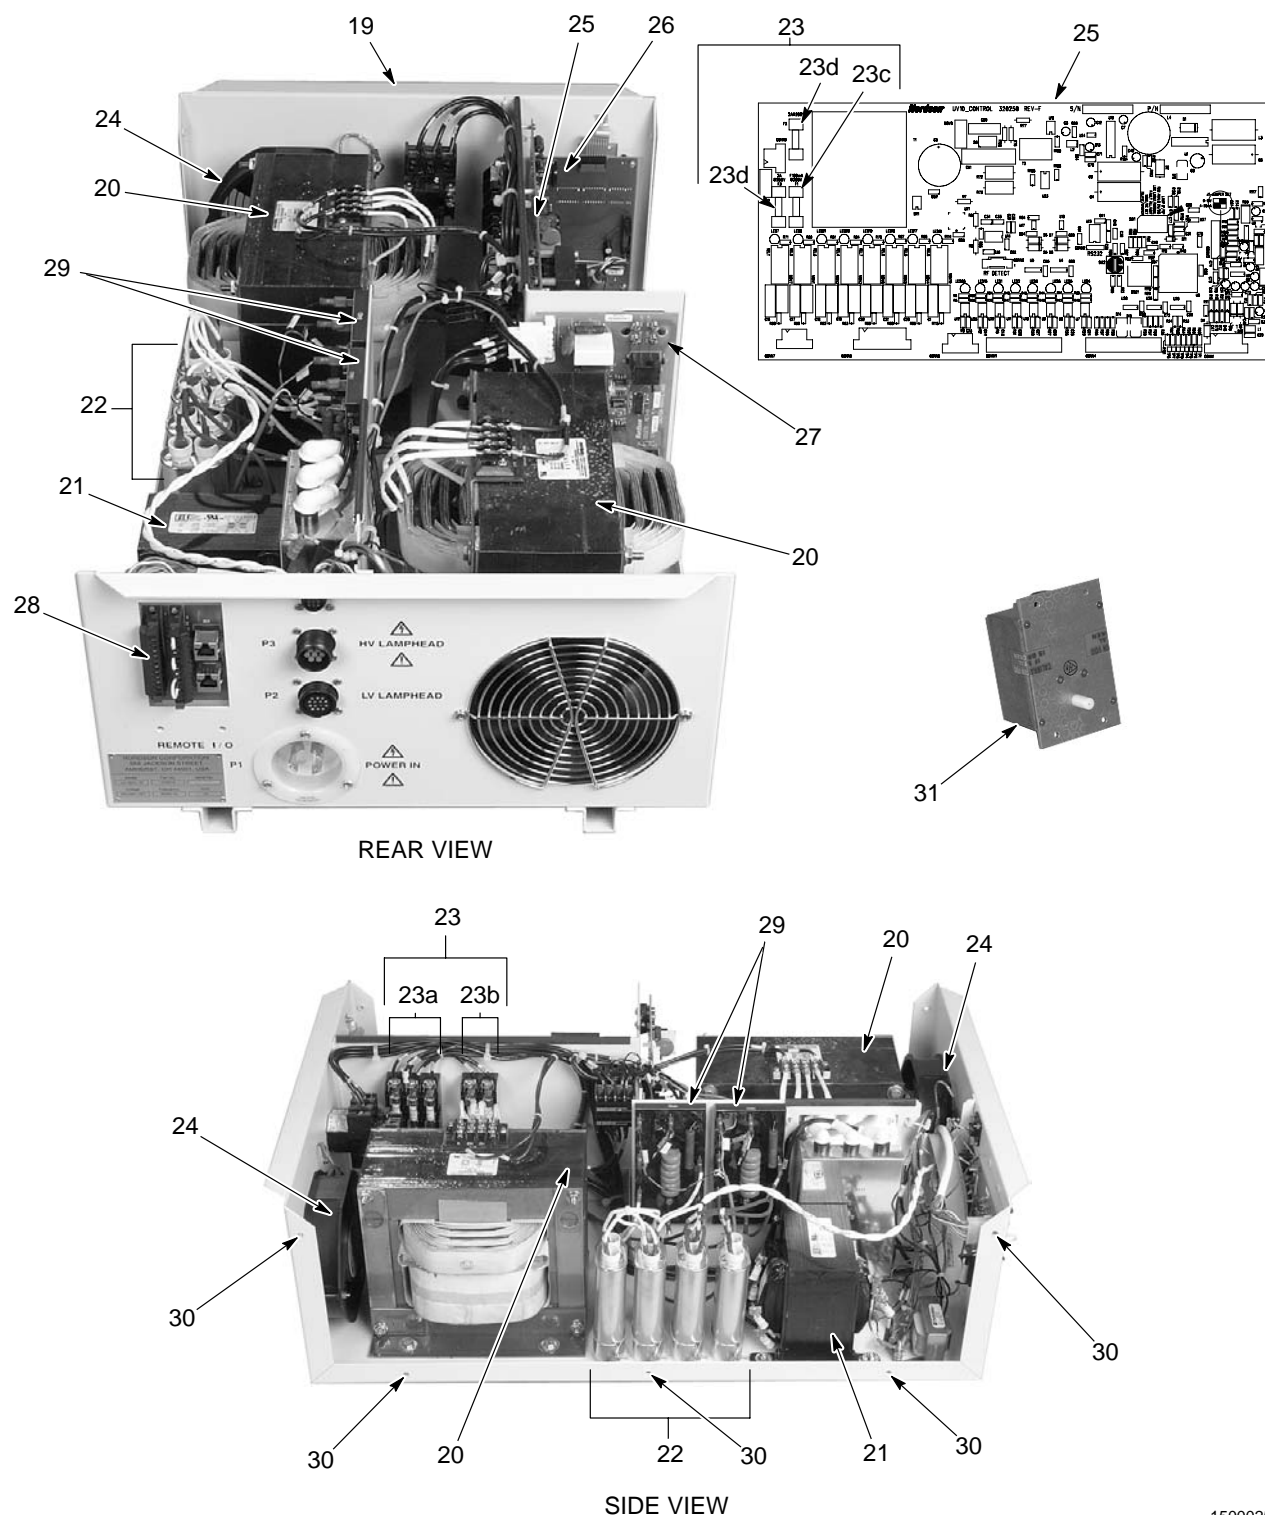


Figure 7-2 CoolWave Power Supply and RF Detector

1500025B

CoolWave Cables

See Figure 7-3. Order the correct cable length for your particular system.

Item	Part	Description	Quantity	Note
32	775024	25 ft HIGH VOLTAGE CABLE, universal	1	
32	775032	50 ft HIGH VOLTAGE CABLE, universal	1	
32	775033	75 ft HIGH VOLTAGE CABLE, universal	1	
32	775034	100 ft HIGH VOLTAGE CABLE, universal	1	
33	775027	25 ft LOW VOLTAGE CABLE, universal	1	
33	775036	50 ft LOW VOLTAGE CABLE, universal	1	
33	775037	75 ft LOW VOLTAGE CABLE, universal	1	
33	775038	100 ft LOW VOLTAGE CABLE, universal	1	
34	775029	25 ft CABLE, RF detector, 6/10	1	
34	775050	50 ft CABLE, RF detector, 6/10	1	
34	775051	75 ft CABLE, RF detector, 6/10	1	
34	775052	100 ft CABLE, RF detector, 6/10	1	
35	775031	NETWORK CABLE, 6 ft, 6/10	1	
NS	775162	60 Hz BLOWER, external, 60 Hz	1	
NS	775165	50 Hz BLOWER, external, 50 Hz	1	
NS: Not Shown				

Recommended Spare Parts

Keep the following parts in inventory to avoid unplanned downtime. Quantities listed support a lamphead or power supply.

NOTE: Most of the recommended spare parts are listed with a level number (1, 2, or 3) to identify the part's level of importance to system operation. Level 1 parts are critical to the day-to-day operation of the UV curing system so be sure to keep these parts in inventory.

Part	Description	Quantity	Level	Note
775010	FOCUS LAMPHEAD, CoolWave	1	3	
775015	FLOOD LAMPHEAD, CoolWave	1	3	
775019	50/60 HZ POWER SUPPLY, CoolWave	1	3	
775022	RF DETECTOR, CoolWave, 6/10	1	3	
775024	25 ft HIGH VOLTAGE CABLE, universal	1	3	
775027	25 ft LOW VOLTAGE CABLE, universal	1	3	
775029	25 ft CABLE, RF detector, 6/10	1	3	
775031	NETWORK CABLE, 6 ft, 6/10	1	3	
775042	MERCURY BULB, CoolWave, 10 in., H	1	1	A
775043	IRON BULB, CoolWave, 10 in., D	1	1	A
775044	GALIUM BULB, CoolWave, 10 in., V	1	1	A
775045	INDIUM BULB, CoolWave, 10 in.	1	1	A
775046	MERCURY PLUS BULB, CoolWave, 10 in., H+	1	1	A
775040	BULB, starter	1	2	
775062	SWITCH, pressure, CoolWave, 10	1	1	
775064	FILAMENT TRANSFORMER, CoolWave	2	2	
775080	FUSE, kit, CoolWave	1	1	
775076	50/60 Hz CAPACITOR, 1.1 Mf, 2500 Volt, CoolWave	4	3	
775140	PCB, CONTROL, CoolWave	1	2	
775142	PCB, DISPLAY, CoolWave	1	2	
774144	PCB, PHASE, CoolWave	1	2	
775146	PCB, I/O, CoolWave	1	2	
775085	FAN, cooling, CoolWave	2	3	
775090	FOCUSED REFLECTOR, CoolWave, standard	2	3	B
775100	FLOOD REFLECTOR, CoolWave, standard	2	3	B
775115	DEFLECTOR, strip, quartz, CoolWave	1	3	
775120	SCREEN, lamphead, CoolWave	1	1	
775130	MAGNETRON PAIR, 3.0 Kw, CoolWave	1	1	
775136	QUARTZ PLATE, kit, lamphead	1	-	
775139	SENSOR, light, CoolWave, 6/10	1	3	
775160	MANUAL, CoolWave	1	-	
NOTE A: Order the correct bulb for your particular system.				
B: Order the correct reflector for your particular system.				

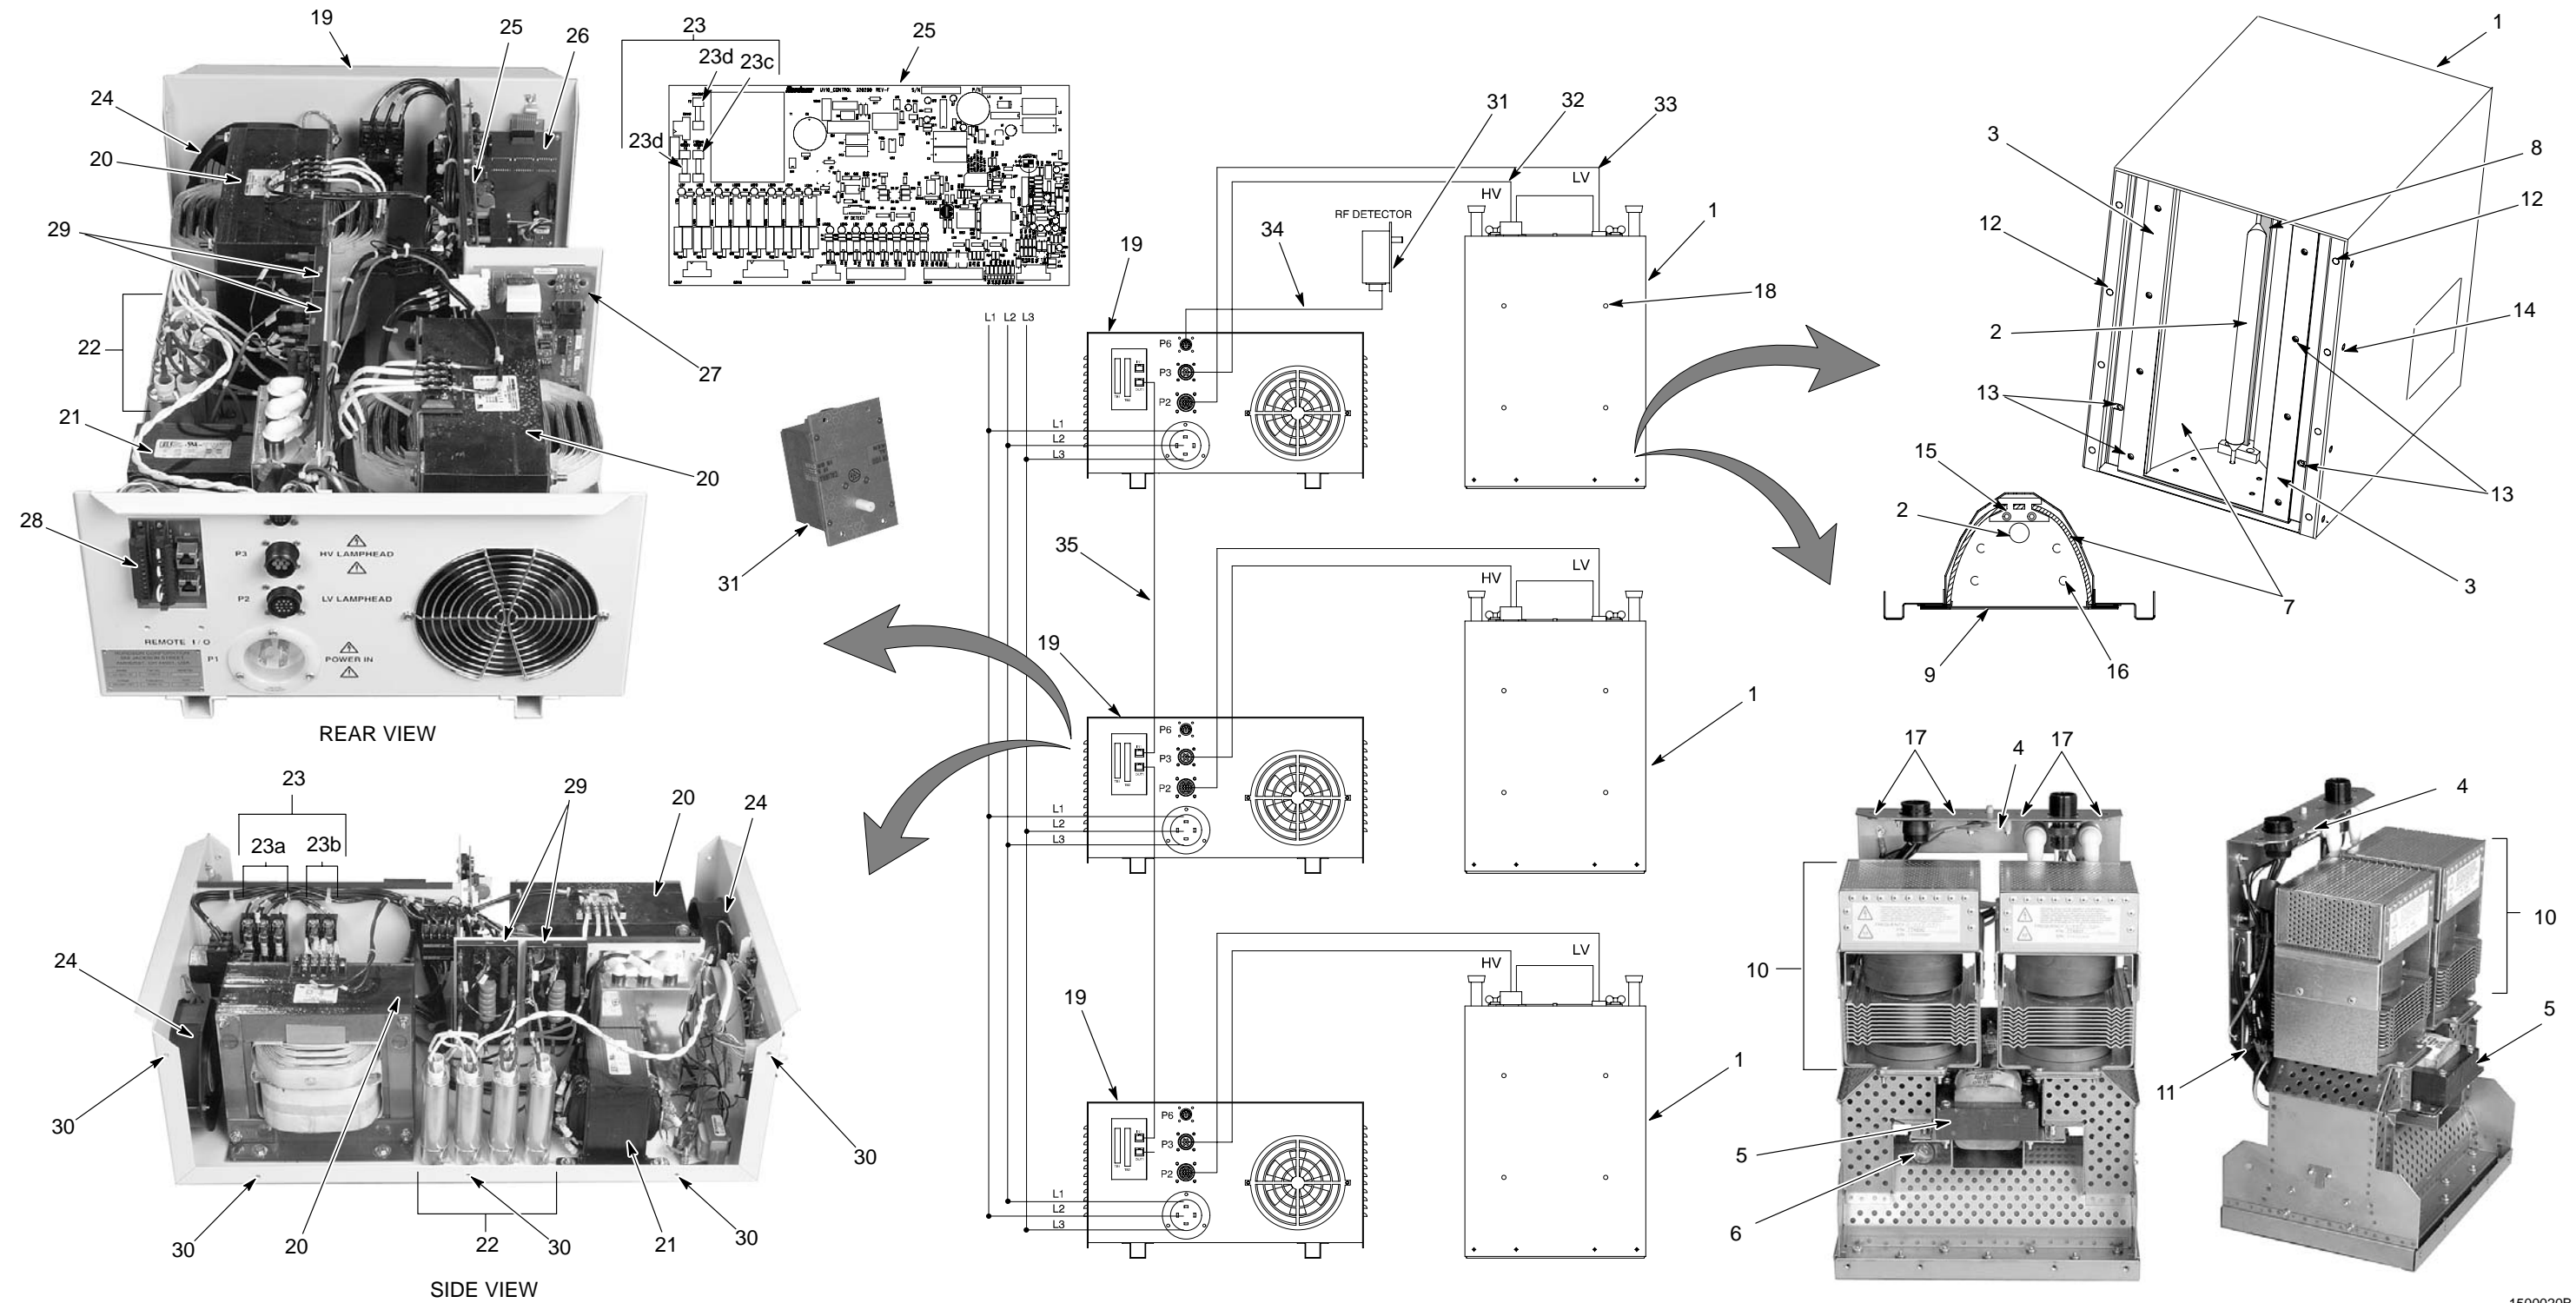


Figure 7-3 CoolWave Ultraviolet UV Microwave Curing System Parts

1500020B

Section 8

Specifications

Power Supply

Table 8-1 Power Supply Specifications

Item	Specification
Dimensions	
length	753 mm (29.65 in.)
width	465.5 mm (18.33 in.)
height	256.3 mm (10.09 in.)
Weight	105 kg (230 lb)
Voltage	380/440/480 Vac, 3 ϕ , 50/60 Hz
Current	Refer to Table 8-2
Ambient Temperature	13-49 °C (55-120 °F)

Table 8-2 Power Line Current

Line	60 Hz			50 Hz		
	Amps @ 380 Vac	Amps @ 440 Vac	Amps @ 480 Vac	Amps @ 380 Vac	Amps @ 440 Vac	Amps @ 480 Vac
L1	14	13	12	16	15	14
L2	22	21	18	25	23	21
L3	13	13	12	16	15	14

Lamphead

Table 8-3 Lamphead Specifications

Item	Specification
Dimensions	
length	264.50 mm (10.41 in.)
width	201.00 mm (7.91 in.)
height	435.10 mm (17.13 in.)
Weight	17 kg (38 lb)
High Voltage Power	5000 Vdc @ 850 ma
Filament Voltage	3.4 Vac
Cooling Air	350 cfm @ 7 in. H ₂ O; measured at lamphead (595 m ² @1780 Pascal)
Reflector	Borosilicate glass with dichroic coating 220-470 nm; focus/flood profiles
Focal Length	Variable
Interlocks	Photo resistor assembly (light detector) Air pressure switch High-voltage cable connection

Bulb

Table 8-4 Bulb Specifications

Item	Specification
Length	254 mm (10 in.)
Power	600 watts/in. maximum
Types	Mercury, Mercury +, Iron, Gallium, Indium

RF Detector

Table 8-5 RF Detector Specifications

Item	Specification
RF Level Trip Level	2 mW/cm ²
Acceptable Level	5 mW/cm ² ANSI Standard C95.1-1982 OSHA Standard 29 CFR 1910.97

This page intentionally left blank.

System Drawings

See Figures 8-1 through Figure 8-5 for the following system drawings.

Figure 8-1: PC9 Phase Control

Figure 8-2: UV Connector Board

Figure 8-3: System Schematic

Figure 8-4: Lamphead Dimensions

Figure 8-5: System Installation

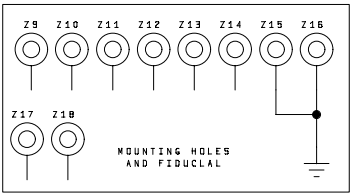


Figure 8-1 PC9 Phase Control


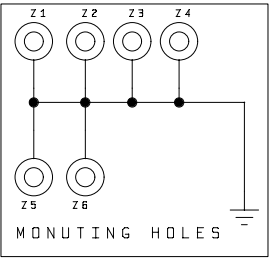


Figure 8-2 UV Connector Board

1500009A

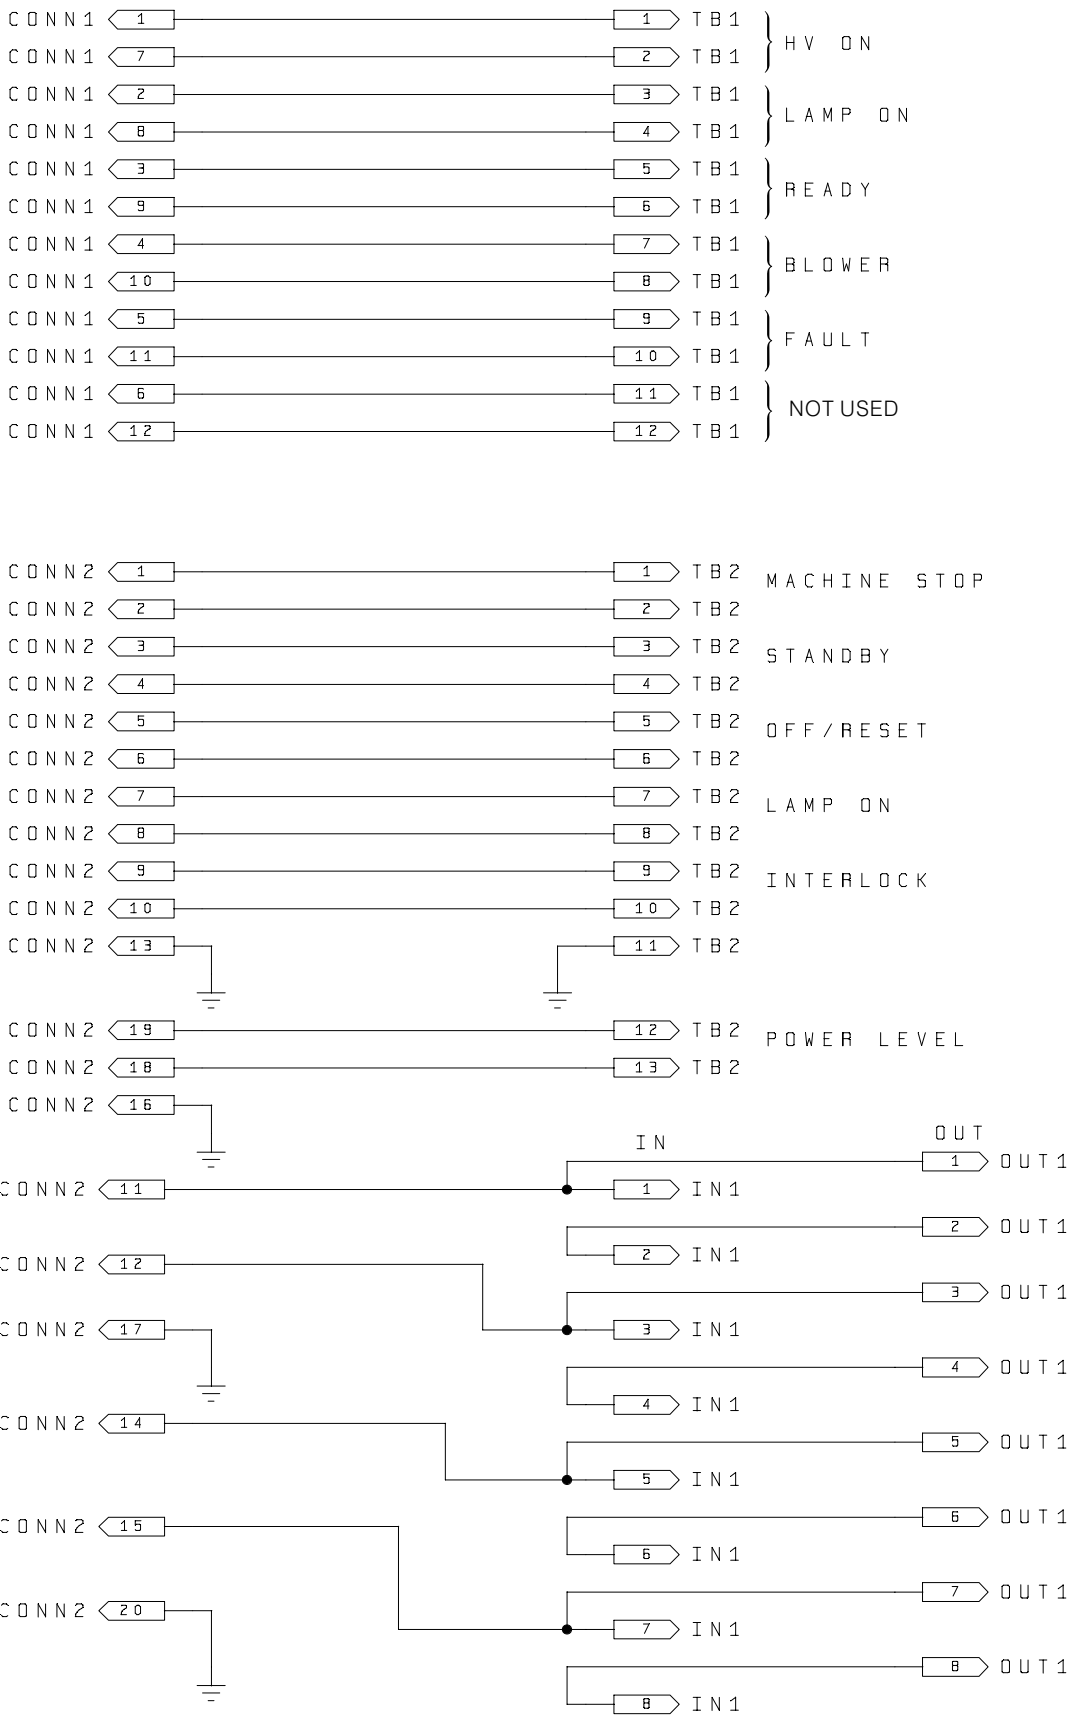

System Schematic

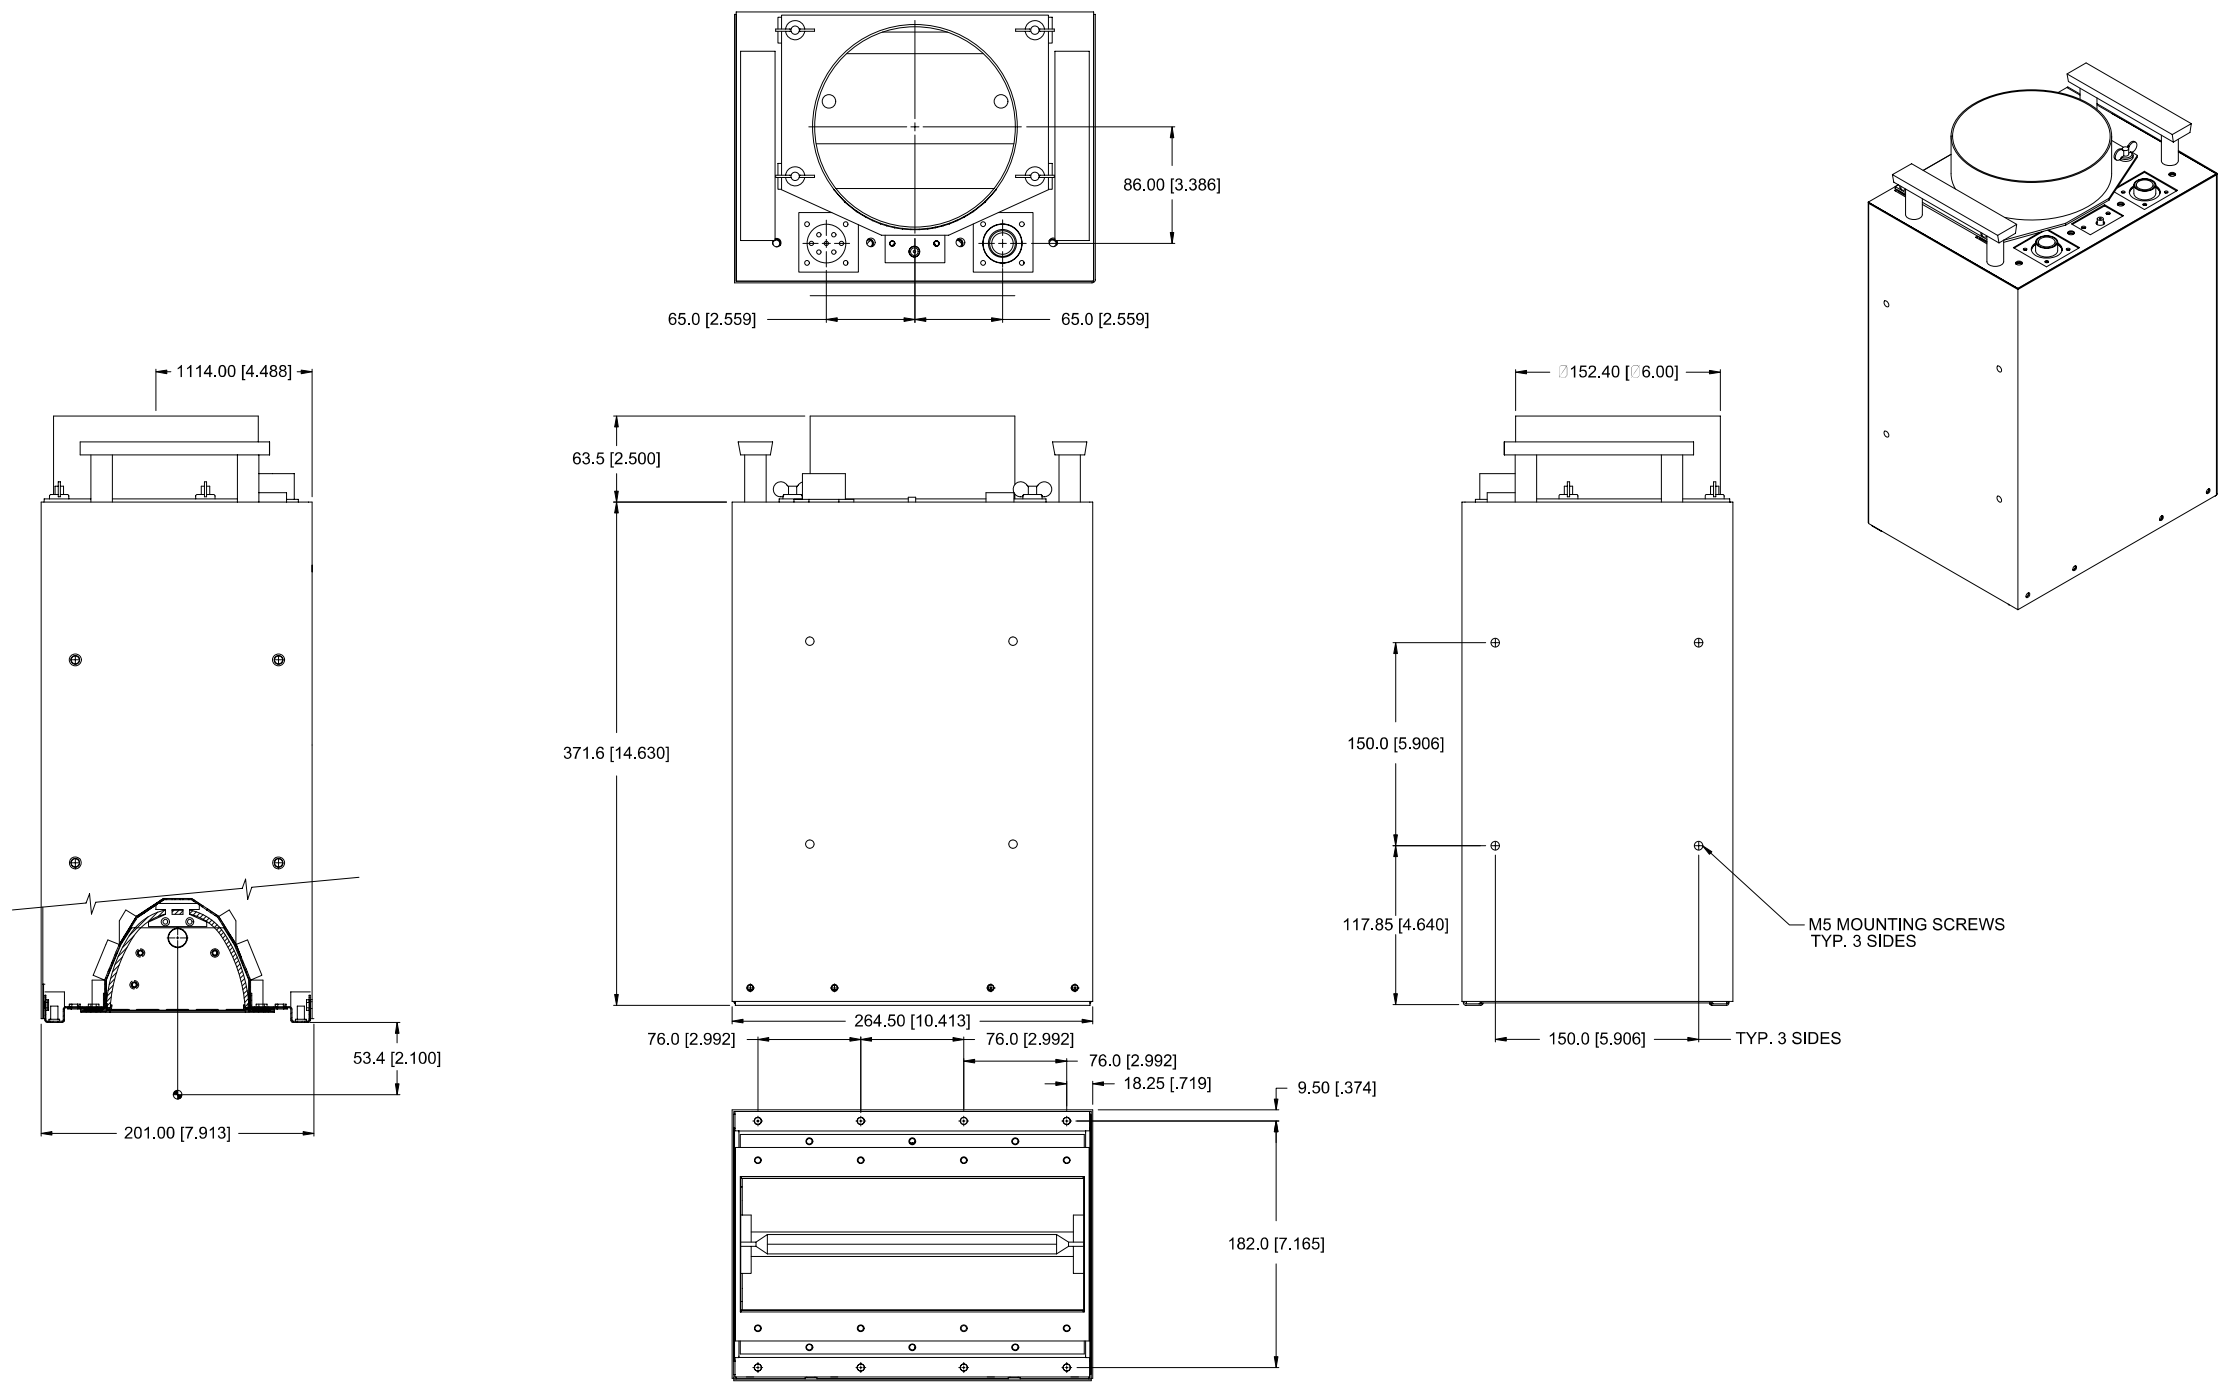


Figure 8-4 Lamphead Dimensions

1500096A

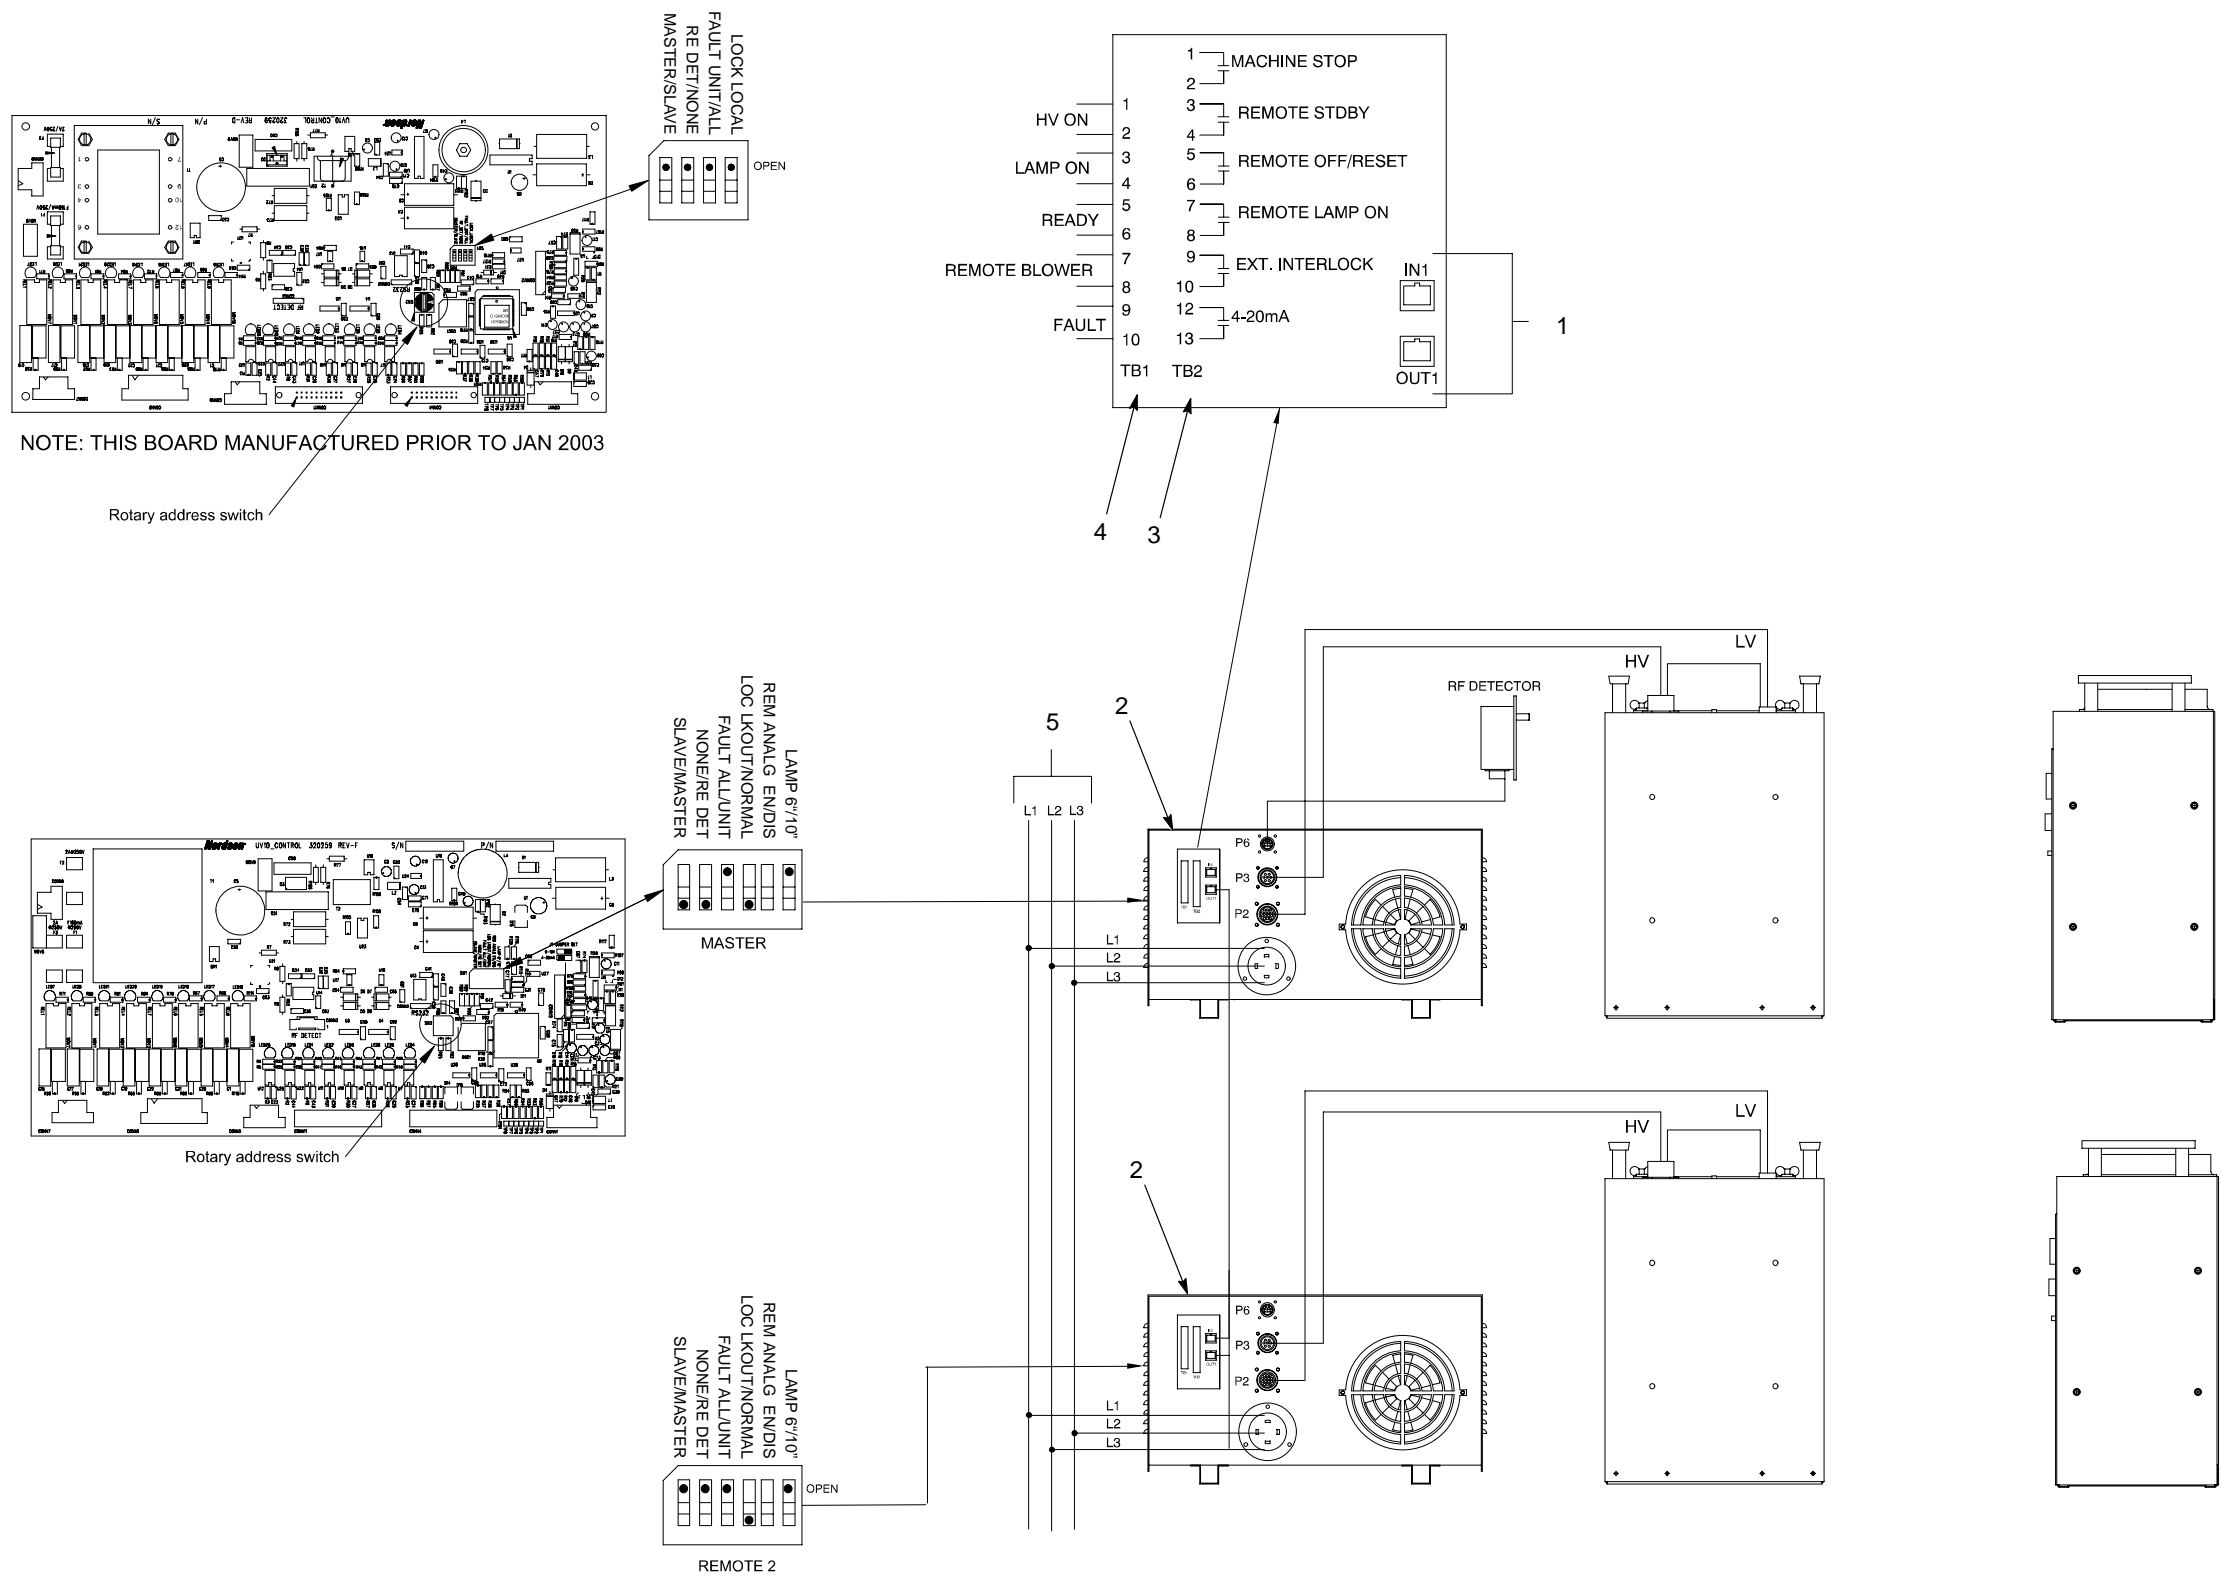


Figure 8-5 System Installation

Section 9

UV Glossary

absorption	Not reflecting. The partial loss in energy that results when light passes through or reflects off a medium.
actinic UV	Low-powered UV in the UVC band. Usually powered with several 100-watt power supplies or less instead of several 1000-watt power supplies. Nordson's UV Star and CoolWave product lines are much higher in irradiance and energy density than actinic UV products.
additive bulb	A mercury bulb that contains metal additives such as iron, gallium, indium, or others. These bulbs produce variations in spectral output as compared to mercury only bulbs.
adhesion	The state in which two surfaces are stuck together.
arc length	The distance measured between the electrodes in a quartz bulb. Also Refer to effective cure length.
ASTM spec D3359-95a	Refer to tape test.
ballast	An inductive transformer device that stabilizes the amount of current flowing through the bulb so that the power output remains constant.
black light UV	Low powered UV composed of wavelengths in the UVA band. Usually powered with several 100-watt power supplies or less instead of several 1000-watt power supplies. Nordson's UV Star and CoolWave product lines are much higher in irradiance and energy density than black light UV products.
bulb	A sealed quartz tube that contains a mixture of inert gas and mercury under medium pressure. Electrode bulbs are fitted with electrical connections at the ends of the bulb. Microwave bulbs contain no electrical connections. The mercury and inert gas are energized (vaporized) by either a voltage arc or microwave energy. The vaporized plasma gas emits UV light.
burn-in period	The second stage of the startup process of an electrode UV bulb. The total time that it takes the current and voltage inside the bulb to stabilize during startup.

capacitor	Corrects the power factor in the main power supply to reduce current levels in the UV system.
cold mirror	A reflector that is coated with a dichroic material that absorbs or passes wavelengths in the infrared range while reflecting those in the UV range. Refer to dichroic.
cover	The upper half of the lamp head assembly or the sheet metal top of the power supply. In the lamp head, the cover contains openings and baffles through which cooling air passes.
cradle	Supports the UV bulb and reflector inside an electrode lamp head housing.
cross hatch test	Refer to tape test.
cure	A UV drying process that occurs through a chemical reaction between a UV ink or coating and UV light.
cure length	Refer to effective cure length.
dichroic	A coating designed to pass certain wavelengths and reflect other wavelengths. In UV lamp heads, dichroics are used on reflectors to pass or absorb infrared energy and reflect UV energy.
devitrification	The act of making quartz glass opaque and porous through prolonged heating and UV exposure.
doped bulb	Refer to additive bulb.
dose (dosage)	Refer to energy density.
dose rate (dosage rate)	Refer to irradiance.
Dual Concentrated Focus (DCF)	An electrode system where two bulbs and two angled reflectors are positioned within one cradle. The UV light in a DCF system is concentrated into a single band of energy.
dynamic exposure	Exposure to a varying irradiance. It occurs when a lamp head passes over a substrate without pausing or when a substrate passes under a lamp head without pausing.

dynamic range	The span between the minimum irradiance and the maximum irradiance to which a radiometer will accurately respond. Measured in joules/cm ⁵ .
effective cure length	The length of a bulb that delivers optimal UV output. For electrode bulbs, the effective cure length is always less than the arc length. For microwave bulbs, the effective cure length is the length of the bulb.
electrode	The electrical fitting on the inside of an arc bulb. The electrode consists of a tungsten pin surrounded by a tungsten coil and is used to maintain a voltage arc across the bulb. Electrode is also used to refer to the style of bulb or system when differentiating between microwave and electrode bulbs and microwave and electrode systems.
electrodeless	A microwave-powered UV system.
electromagnetic spectrum	The full wavelength range of electromagnetic radiation, including microwave, ultraviolet, visible, and infrared energy.
energy density	The total amount of UV energy delivered to a particular area, measured in joules/cm ² . Also referred to as total energy. Improperly referred to as dose.
erythermal UV	Low-powered UV in the UVC band. Usually powered with several 100-watt power supplies or less instead of several 1000-watt power supplies. Nordson's UV Star and CoolWave product lines are much higher in irradiance and energy density than erythermal UV products.
flood	An unfocused band of UV light that is more evenly and diffusely distributed across the width of the reflector.
flux	The flow of photons, measured in einsteins/second.
focal distance (length)	The perpendicular distance from the edge of the lamp head to the point where the UV light emitting from the bulb converges. This is the location of maximum UV concentration.
focus	The band where the UV energy reflected from the lamp head is at the highest concentration.
frequency	The number of times a periodic wavelength cycle occurs in one second, measured in Hertz (Hz).

gallium	A bluish-white metallic element used in additive mercury bulbs. The gallium additive provides a yellowish tint to an unenergized UV bulb and a violet coloration to the UV output. Gallium bulbs have a spectral peak around 417 nm and a spectral concentration between 400 and 450 nm. They are often used when deeper cure is required or with white coatings containing titanium oxides. In some industries, microwave gallium bulbs are referred to as V bulbs.
germicidal UV	Low-powered UV in the UVC band. Usually powered with several 100-watt power supplies or less instead of several 1000-watt power supplies. Nordson's UV Star and CoolWave product lines are much higher in irradiance and energy density than germicidal UV products.
housing	The lower half of the lamp head assembly. Its function is to support the cradle.
igniter	Refer to starter.
indium	A silver-white metallic element used in additive mercury bulbs. The indium additive provides a yellowish tint to an unenergized UV bulb and a violet coloration to the UV output. Indium is used to shift the spectral output past 400 nm. In some industries, indium bulbs are referred to as Q bulbs.
infrared energy	Energy having wavelengths between 1 and 100 μm .
integral cooling fan (blower)	The bulb-cooling fan when it is mounted to the lamp head.
integral shutter	A shutter assembly that is built into the lamp head. Common designs include a pneumatically actuated clam shell that blocks the light when closed and acts as a reflector when open and a pneumatic slide mechanism that moves the lamp head behind an internal louver when shuttered. Shutters are typically associated with electrode systems.
intensity	The amount of UV energy delivered to a particular area per unit time, measured in joules/cm ² /sec or watts/cm ² /sec. Also referred to as watt density. Improperly referred to as dose rate.
iron	A white metallic element used in additive mercury bulbs. The iron provides a reddish tint to an unenergized UV bulb and a bluish coloration to the UV output. Iron is used to concentrate the spectral output between 350 and 400 nanometers. In some industries, iron bulbs are referred to as D bulbs.
irradiance	Radiant power arriving at a surface from all forward angles per unit area, measured in watts/cm ² .

irradiator	Refer to lamp head.
joule	Metric unit for measuring work or energy. One joule is equivalent to the work done by a force of one Newton acting through a distance of one meter. (1 KW-hour equals 3.6×10^6 joules).
lamp	Refer to bulb.
lamp head	Assembly containing a sheet metal housing and cover and integral or remote cooling fan. An electrode system also contains cradles and a microwave system contains magnetrons, a cavity, and a screen.
light detector	A photocell inside a microwave lamp head that confirms UV output.
long UV	Refer to UVA.
louver	A part of a UV shutter system or shielding section that blocks the UV light while allowing cooling air to pass through.
magnetron	Assembly contained inside a microwave lamp head that converts high-voltage electrical input into RF energy.
mercury	A silver-white metallic element that is liquid at room temperature and is used to create a vaporized, UV-emitting gas plasma inside a quartz tube when it is energized through the use of either a voltage arc or microwave energy. When energized the bulb produces a bright white UV output. Mercury bulbs have a peak spectral output around 365 nm and a concentration around 254 nm. In some industries, mercury bulbs are referred to as H bulbs.
mercury plus (H+)	Microwave bulbs that contain additional mercury. Mercury plus bulbs are only available in microwave systems as it is difficult to vaporize the additional mercury in an electrode bulb.
mercury arc	An electric discharge passed between two electrodes and through a mercury vapor medium inside a quartz tube.
metal halide bulb	Refer to additive bulb.
micrometer (μm)	Unit of length equivalent to one millionth of a meter.
microwave	That part of the electromagnetic spectrum associated with the larger infrared waves and the shorter radio waves.

monomers	A molecule of relatively low molecular weight and simple structure capable of combining with itself or other similar molecules to form polymers.
nanometer (nm)	Unit of length equivalent to one billionth of a meter.
negative cooling	When the cooling air for the lamp head is drawn from the area surrounding the substrate being cured and through the lamp head. Negative cooling provides exhaust for the UV system if it is ducted to atmosphere. Negative cooling is most often supplied through a remote cooling fan.
nitrogen blanketing	Refer to nitrogen inerting.
nitrogen inerting	When the coating or ink is flooded with a nitrogen blanket to prevent the coating or ink from oxidizing before cure. Nitrogen inertion reduces oxygen inhibition.
oligomers	A low molecular weight resin or polymer used in a radiation curable coating.
out-of-focus	When a lamp head is located further away from the substrate or closer to the substrate than the focal distance.
oxidizing	When the coating or ink reacts with oxygen and slows the polymerization process of the cure.
oxygen inhibition	Oxygen slows the cure response of UV curable coatings. The higher the ratio of exposed surface area to coating mass, the greater the impact oxygen has on the coating.
ozone (O₃)	An unstable, colorless gas with a penetrating odor that is generated by the reaction of short-wave UV light (≈ 184 nanometers) with air.
ozone-inhibiting (ozone-free) bulbs	Bulbs where the quartz is manufactured with an additive that prevents the transmission of UV beneath 200 nm in wavelength. It is the reaction of short-wave UV light (≈ 184 nanometers) with air that produces ozone.
Parts Per Million (PPM)	The units of the Threshold Limit Value (TLV) when referring to the maximum level of a substance that a person should inhale over an 8-hour shift during a 40-hour week without producing an ill effect. Also refer to Threshold Limit Value.
peak irradiance (peak power density)	The maximum irradiance measured over a sample period, measured in joules/cm ² /sec or watts/cm ² .

photoinitiator	A molecule which when exposed to a specific wavelength of energy forms a reaction that begins the cure process.
photopolymerization	Turning a liquid (wet) into a solid (dry) through exposure to UV light.
planar shutter	A shutter assembly that is attached to the outside of a lamp head. The louvered shutter moves perpendicular to the emitted UV light.
polymer	A macromolecule consisting of a large number of monomer units.
positive cooling	When the cooling air for the lamp head is blown through the lamp head and onto the substrate being cured. Positive cooling can be supplied through either an integral or remote cooling fan. With positive cooling, an additional exhaust system is required to remove heat and ozone.
post cure	The continuation of chemical reactions in the ink or coating after exposure to UV has ceased.
power density	Refer to irradiance.
quartz plate	Plates that allow UV energy to penetrate with minimal loss in intensity and are mounted in front of the lamp head. The plates are used to prevent positive cooling air and airborne contaminants from contacting the substrate, negative cooling air from contaminating the bulb and reflectors, or to remove some of the infrared that is radiated from the UV bulb. If the goal is to reduce the amount of heat contacting the substrate, additional cooling air must be blown across the quartz. If additional air is not used, the quartz will eventually heat up and begin radiating heat onto the substrate. To further reduce heat, the quartz can be coated with a material that passes UV light and absorbs infrared energy.
quartz tube	<p>(1) A sealed tube made from a silicate material that is filled with a precise mixture of mercury and various inert gases and sometimes fitted with electrical connections. The vapor emits light when it is energized through the use of either a voltage arc or microwave energy. Often used to refer to the bulb.</p> <p>(2) An open tube made from a silicate material through which a substrate can pass. The tube is often placed in front of a UV lamp head and flooded internally with Nitrogen. Parts traveling through the tube are then safeguarded from exposure to the oxygen and ozone in the lamp head cooling air.</p>

reflector	Reflect and concentrate the UV light onto the substrate. Rolled from highly polished aluminum sheet metal or formed from borosilicate into elliptical or parabolic profiles. Elliptical profiles optimize the concentration of UV energy that is reflected by guiding the radiation into a tightly focused UV band while parabolic reflectors result in a flood of UV light. Holes or slots in the reflector allow cooling air to pass through. The holes or slots are engineered for size and location to provide both optimal and balanced airflow across the length of the bulb.
remote cooling fan (blower)	The cooling fan when it is mounted separate from the lamp head and ducted in to the lamp head.
RF	Radio Frequency. Any frequency between normally audible sound waves and the infrared light portion of the spectrum lying between 10 KHz and 1,000,000 MHz.
RF detector	Monitors RF levels in the vicinity of the UV system and signals the power supply to shut off the UV if RF levels exceed allowable limits.
screen	A wire mesh assembly attached to a microwave lamp head that allows UV to pass through but prevents RF from leaking from the unit.
short UV	Refer to UVC.
single	An electrode lamphead assembly with a cradle that supports only one bulb and one reflector.
shutter	An assembly designed to block UV light while passing cooling air.
solarization	The effect of the UV light on the quartz bulb. Over time, UV light and heat will cause the quartz to devitrify or revert back to a crystalline and porous state.
spectral output	The various wavelengths of light emitted from a UV bulb.
spectral output efficiency graph	A graph or chart showing the relative concentration of UV at various wavelengths for a particular bulb type. Typically, the concentration is provided as a normalized percentage where the energy is integrated over 10-nanometer bands to reduce the difficulty of quantifying the effects of line emission spectra.
starter	Used in electrode, ballast-based systems to vaporize the mercury. The starter puts a 3,000-4,000 volt potential across the bulb during start up and has an internal circuit that discontinues the potential when current is established.

starter bulb	Used in the start up of microwave systems to ignite the mercury vapor in the bulb.
static exposure	Exposure to a constant irradiance for a controlled period of time.
striking	The initial phase of the startup process where the mercury in the bulb is vaporized.
surface cure	When the UV material is cured only on the surface exposed to the UV.
tape test for measuring adhesion	When an X-cut or lattice pattern of 6 or 11 cuts are scratched through the UV cured material to the substrate. Pressure-sensitive tape is then applied over the cuts and removed. Pulling the tape away from the substrate will reveal the degree of adhesion. If any material between the lines is pulled off with the tape, the adhesion is poor. If the material remains, the adhesion is good. The recommended guidelines for testing and evaluation are documented in the ASTM spec D3359-95a under Methods A and B. Method A employs the X-cut and is used for coatings that are 5 mils or greater. Method B calls for lattice cuts and is recommended for coatings with 0-5 mils of thickness.
through cure	When the UV material is cured down to and including the material / substrate interface.
Threshold Limit Value (TLV)	The maximum exposure a person should receive over an 8-hour shift during a 40-hour week without producing an ill effect. Often reported in (mg / m ³) or ppm.
Time-Weighed Average (TWA)	Refer to Threshold Limit Value (TLV).
total energy	Refer to energy density.
transmittance	The ratio of the radiant energy passed through a body to the total radiant energy received by the body.
ultraviolet light	Radiant energy in the wavelength band of 100 to 400 nanometers.
UVA (315-400 nanometers)	The portion of the electromagnetic spectrum ranging between 315 and 400 nm. UVA represents the largest portion of UV energy and is commonly referred to as long UV. UVA is most responsible for skin aging and increased skin pigmentation. UVA is at the lower limit of sensitivity to the human eye.

UVB (280-315 nanometers)	The portion of the electromagnetic spectrum ranging between 280 and 315 nm. UVB is most responsible for reddening and burning of the skin and damage to the eyes.
UVC (200-280 nanometers)	The portion of the electromagnetic spectrum ranging between 200 and 280 nm. UVC is typically referred to as short UV.
UVV (400-445 nanometers)	The portion of the electromagnetic spectrum ranging between 400 and 445 nm. The V stands for visible UV.
vacuum UV (100-200 nanometers)	The portion of the electromagnetic spectrum ranging between 100 and 200 nm. UVV does not transmit in air.
viscosity	The state or quality of having a cohesive and sticky fluid consistency.
vitrification	The act of changing pure opaque quartz into clear non-porous quartz through a fusion process.
watt	One joule per second.
watt density	Refer to irradiance.
waveguide	Directs microwaves toward the bulb in microwave UV systems.
wavelength	The measured cycle length of a wave in the direction of propagation.