

# Tribomatic® 500 Powder Spray Gun Handle Spacer Kit



**WARNING:** Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.

## Description

The Tribomatic® 500 Powder Spray Gun Handle Spacer Kit is used to eliminate potential excess space between the spray gun extension and the handle. Each kit includes two spacers, one for each side of the spray gun.

Part Number	Description
1610531	KIT, spacer, handle interface, Tribo 500

## Installation

See Figure 1.

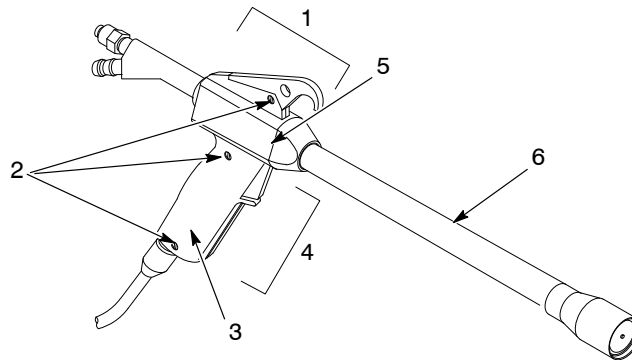


Figure 1 Tribomatic 500 Powder Spray Gun

- |                   |  |                   |
|-------------------|--|-------------------|
| 1. Spray Gun Body | 3. Left Handle<br>(right handle not shown) | 5. Flats          |
| 2. Set Screw      | 4. Cover                                   | 6. Body Extension |

1. Loosen the three set screws (2) on the cover (4).

2. Separate the cover (4) from the left handle (3).

3. Remove the spray gun body (1) from the handle (3).

**NOTE:** Keep the ground wire and nut on the extension intact.

4. Clean the flats (5) of the body extension (6) with a mild solvent, such as isopropyl alcohol.

5. Install new spacers on the flats (5) of the body extension (6), as shown in Figure 2.

**NOTE:** The spacers will cover small holes on the body extension. Leave the holes covered by the spacers.

6. Reinstall the body extension (6) to the left handle (3).

7. Loosely position the right handle (not shown) in place.

**NOTE:** Do not pinch the wires inside the handles.

8. Gently squeeze the handles together to compress the spacers before tightening the three set screws.

9. Tighten the three set screws (2) .

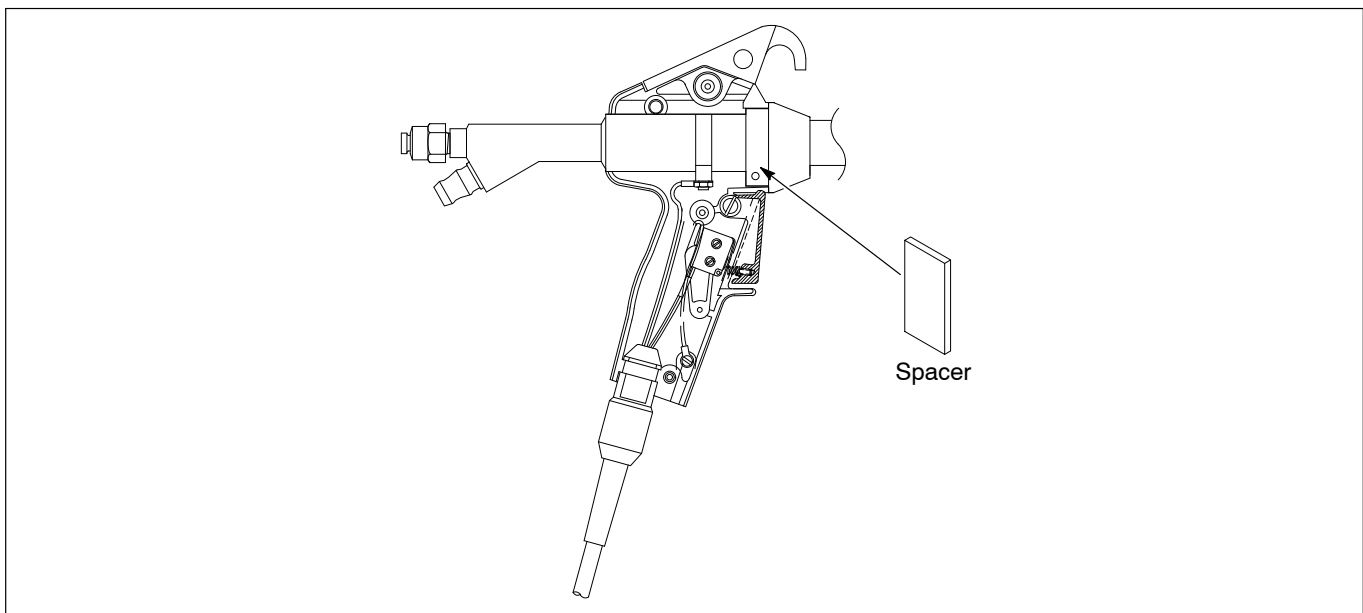


Figure 2 Handle Spacer Installation

Issued 2/17

Original copyright date 2017. Tribomatic, Nordson, and the Nordson logo are registered trademarks of Nordson Corporation.

All other trademarks are the property of their respective owners.