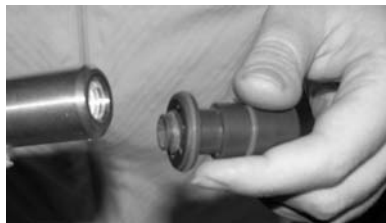
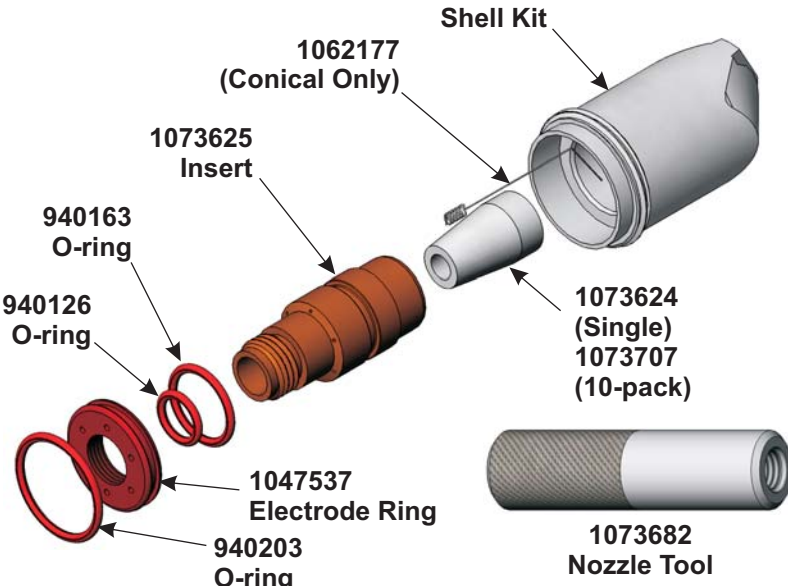


NOZZLE			COMPLETE KIT	SHELL KIT (See Note)	EFFECTIVE PATTERN SIZE	USAGE	NOZZLE DISASSEMBLY AND PARTS		
Dual Slot Flat Spray			1073706	1073726	8 to 10 inches (203 to 254 mm)	General use on manual or automatic guns	1. Thread the nozzle tool onto the end of the insert inside the nozzle. 2. Rotate the nozzle tool and pull on it to remove the internal component assembly.  	3. Remove the internal component assembly from the nozzle. 4. Unscrew the assembly from the nozzle tool.  	
75° Single Slot Flat Spray			1077385	1077395	4 to 6 inches (101 to 152 mm)	Manual coating and touch-up			
90° Single Slot Flat Spray			1077382	1077394	7 to 9 inches (178 to 229 mm)	Manual coating and automatic dedicated areas			
115° Single Slot Flat Spray			1077388	1077396	9 to 11 inches (229 to 279 mm)	General use on manual or automatic guns			
140° Single Slot Flat Spray			1077392	1077397	11 to 13 inches (279 to 330 mm)	Large flat surfaces			
180° Single Slot Flat Spray			1073911	1077393	13 to 15 inches (330 to 381mm)	Large flat surfaces			
100° Conical			1062166	1062161	6 to 8 inches (152 to 230 mm)	General use on manual or automatic guns	5. Unscrew the electrode ring from the insert. 6. Remove the cone from the insert. NOTE: Shell includes electrode for all nozzles except conical nozzles. For conical nozzles replace electrode separately. 		
70° Conical			1062223	1062160	4 to 6 inches (101 to 152 mm)	General use on manual or automatic guns			
40° Conical			1073819	1073818	2 to 4 inches (51 to 102 mm)	Manual coating and touch-up			
60° Crosscut			1077584	1077893	3 to 5 inches (76 to 127 mm)	Manual coating and touch-up			
90° Crosscut			1077585	1077894	2 to 4 inches (51 to 102 mm)	Manual coating and touch-up			
6 Slot Crosscut			1077586	1077895	2 to 3 inches (51 to 76 mm)	Manual coating - deep recesses			
10 Hole Pinpoint			1077587	1077896	Pinpoint	Manual coating - touch-up and deep recesses			