


How to Use the Prism Tool for Spectra

1. Create a USB backup file from the Spectra unit

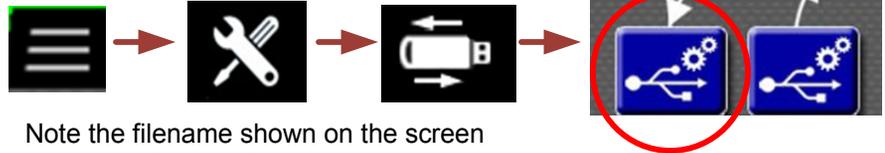

Note the filename shown on the screen
File name format: Spectra30_1_yyyy-mm-dd_hhmm.nor

2. Insert the USB drive into your computer



3. Start the Spectra Prism program

4. Open the .NOR backup file created in step 1. (from the USB drive) using the File/Open .NOR file menu command

Note: Backup files are stored in the "Backup" directory on the USB drive


5. Make the changes to the desired settings using the Prism program

6. Save the changes to a .PAT (patch file) on the USB drive using the file/Create .PAT file menu command

Note the filename shown on the screen
File name format: Spectra30_1_yyyy-mm-dd_hhmm.pat
The file is saved to the same directory the NOR file was loaded from

7. Copy the .PAT file to the root directory of the flash drive

8. Import the .PAT file created in step 6 using the Spectra USB port

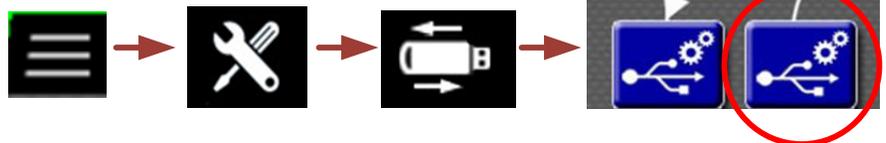

Note: Select the .PAT file name created in Step 6 from the file list