

Solvent Chamber Feeder Kit



WARNING: Allow only qualified personnel to perform the following tasks. Observe and follow the safety instructions in this document and all other related documentation.

1. Introduction

See Figure 1. The solvent chamber feeder kit provides a method of filling the solvent chambers of Nordson vertically mounted air powered fluid pumps. The kit consists of a heavy duty 1-gallon plastic container equipped with a spigot and 4 ft of tubing.

NOTE: Support the container either on a shelf or another flat surface.

Installation

1. Install the container (2) so that the spigot (3) is higher than the pump's solvent chamber.
2. Use clamps or cable ties to secure the container (2) in place.
3. Install one end of the tubing (3) on the barbed end of the spigot. Route the tubing into the solvent chamber. Cut off excess tubing.

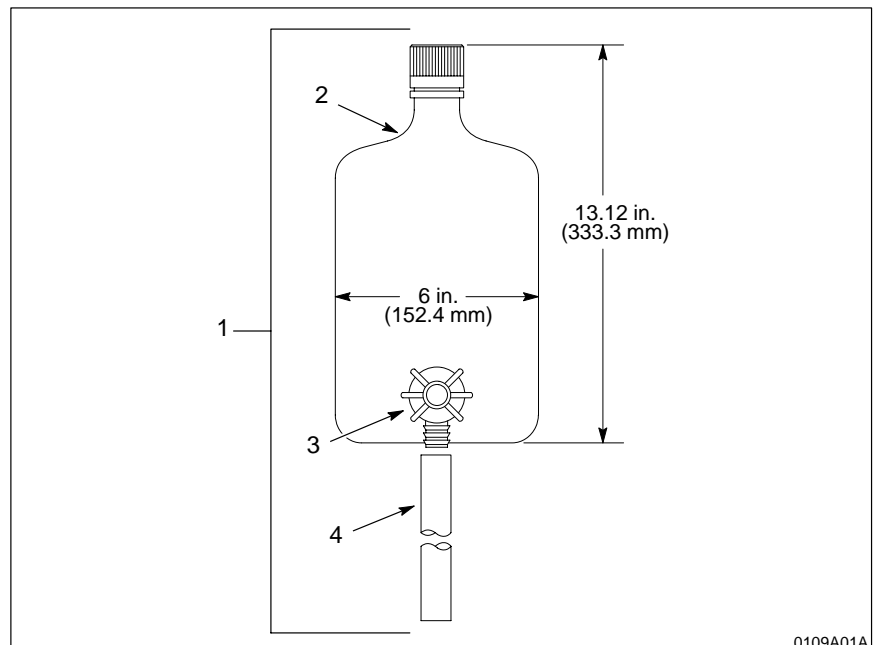


Fig. 1 Solvent chamber feeder kit

1. Solvent chamber feeder kit
2. Container

3. Spigot
4. Tubing

2. Parts

[See Figure 1.](#)

Item	Part	Description	Quantity	Note
1	112 322	Service kit, solvent chamber feeder	1	

Original copyright date 1990. Nordson and the Nordson logo are registered trademarks of Nordson Corporation.