
## Kinetix<sup>®</sup> Air Spray and KVLP Manual Electrostatic Spray Gun

## Service Kits and Parts

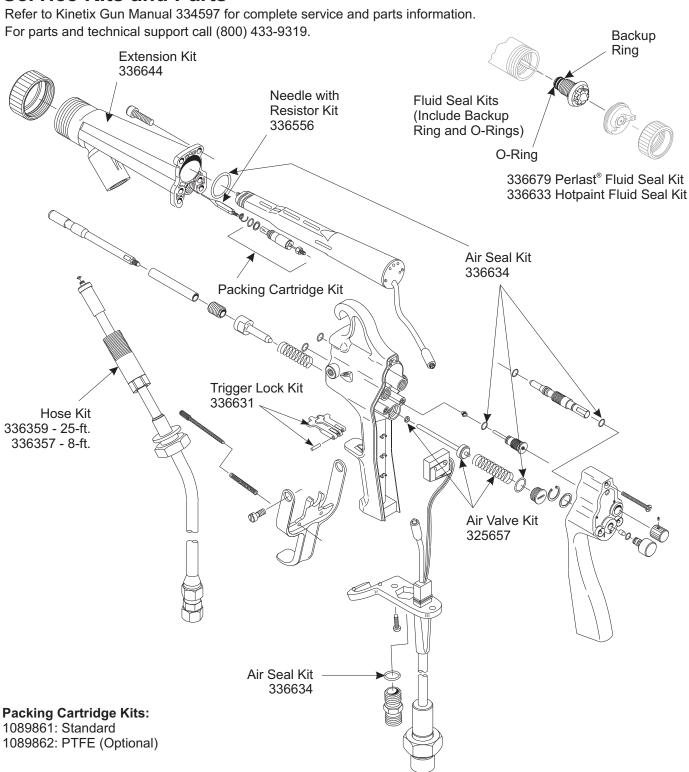


Kinetix, Nordson, and the Nordson logo are registered trademarks of Nordson Corporation.

MagnaLube is a registered trademark of General Magnaplate Corporation.

Perlast is a registered trademark of Precision Polymer Engineering Limited Company.



## **Service Notes**

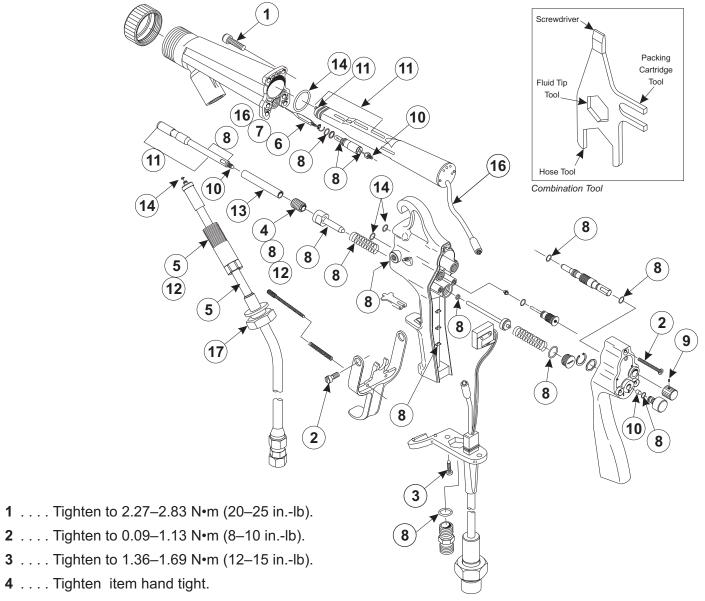

- 5 . . . . Tighten the hose assembly into the extension inlet 1/4 turn past hand tight.
- 6 . . . . Trigger the spray gun to pull the needle tip back before removing or installing a fluid tip.
- 7 . . . . Tighten hand tight.
- 8 . . . . Generously apply MagnaLube® G (PTFE-filled lubricant) to these parts.
- **9** . . . . Align the set screw with the flat on the knob.
- **10** . . . Apply threadlocking adhesive to the threads of these items.
- 11 . . . Apply a liberal coat of dielectric grease to these areas.
- **12** . . . Apply a thin coat of dielectric grease to the threads of these items.
- 13 . . . Apply a thin coat of dielectric grease to the outside of this item.
- **14** . . . Apply dielectric grease to these O-rings.
- **15** . . . . Make sure the cable is snapped into the ribbed slots in the back of the handle. Do not pinch the cable between the handle and the back cover.
- **16** . . . . A removable threadlocking adhesive can be applied to the threads of the needle if there are problems with the needle backing out.
- 17 . . . . Tighten ½ turn past hand tight.

334597-QR02 ©2008 Nordson Corporation