


Gage Part Number: 1106888




WARNING: Review the Safety section in the applicable pump manual before using this gage.

How to use the gage to check an Encore pump throat:


- 1 Unscrew the nut on the end of the pump and remove the throat holder.

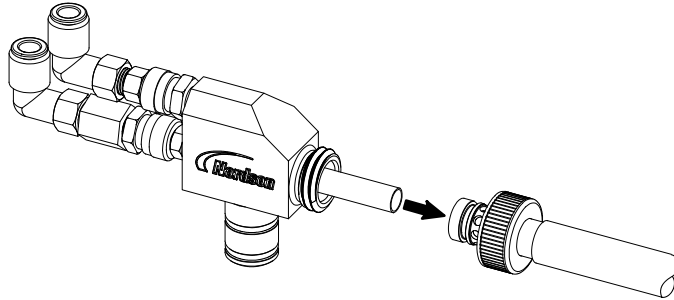

- 2 Remove the throat from the pump body. Insert the gage into the throat.

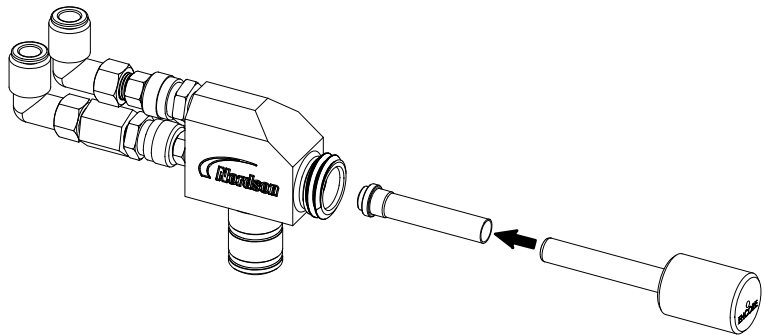

- 3 If the gage does not bottom out on the face of the throat, the throat is not worn beyond limits.

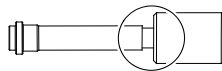

- 4 If the gage bottoms out on the face of the throat, replace the throat. Refer to the applicable pump manual for the throat part number.

