

T-Filter Screen (230 micron) Replacement and Cleaning Kit 1052901




WARNING: High pressure fluids are hazardous. Shut off the system pump or close the gun circuit and relieve the fluid pressure before cleaning the T-filter. Failure to relieve pressure could result in serious injury.

1 Hang the cup on the drip tray.

2 Remove the filter cap. Drain the coating material into the cup.



3 Remove the filter element and metal gasket.

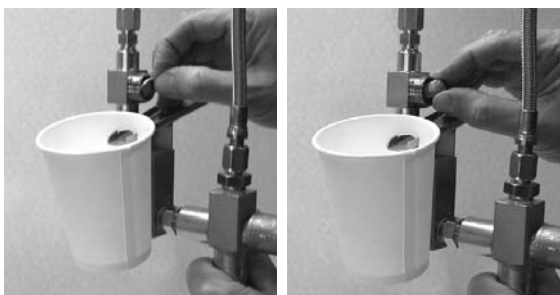


4 Swab out the filter housing and cap with cotton swabs.



5 Wash out the filter housing and cap with cleaning fluid.

6 Clean up with the disposable cloths.

7 Install the new filter element and gasket.

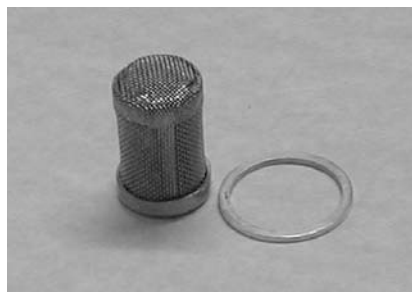

8 Replace the filter cap.

9 Fill out the maintenance tag and attach it to the filter.



10 Place used materials in the kit bag and dispose of properly.

NOTE: Drip tray part number is 1053515.