

Encore[®] HD and Prodigy[®] Power Supply Cover

This instruction is for the installation of the power supply cover on Encore[®] HD and Prodigy[®] pump panels.

Installing Cover



WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.



WARNING: Shut off and lock out system electrical power and relieve system air pressure before performing the following tasks. Failure to observe this warning may result in personal injury or death.


The power supply cover kit includes the cover and two standoffs.

See Figures 1 and 2.

1. Open pump cabinet.
2. Remove the two front power supply screws with lock washers.

NOTE: Retain screws for installation of cover.

3. Install the two standoffs in place of screws.
4. Place cover over power supply, routing any wires through the cover cutout.
5. Install the screws with lock washers to secure the cover to the standoffs.

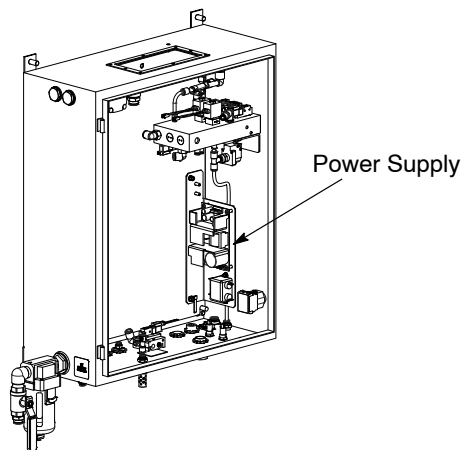

10013094

Figure 1 Power Supply Location (some components hidden for clarity)

Installing Cover *(contd)*

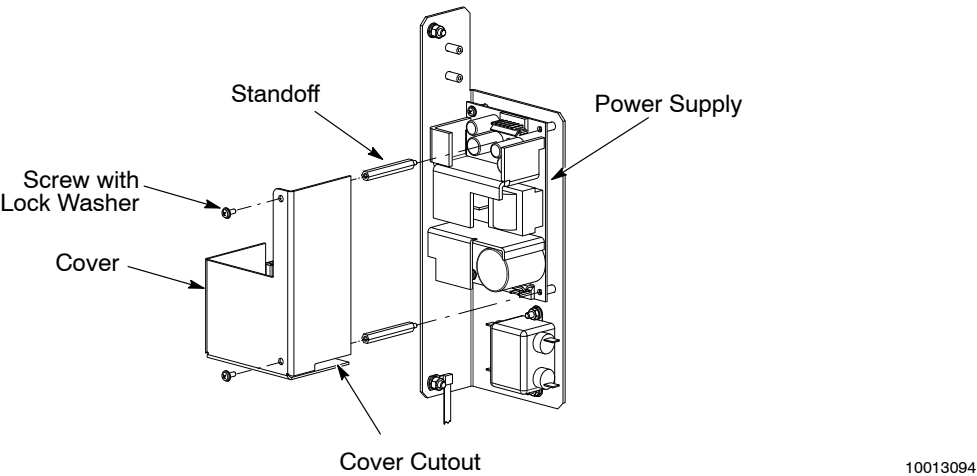


Figure 2 Installing Power Supply Cover

Parts

Part	Description	Note
1611787	KIT, touch-safe cover, 24 Vdc power supply	

Issued 05/18

Original copyright date 2018. Encore, Prodigy, Nordson, and the Nordson logo are registered trademarks of Nordson Corporation.

All other trademarks are the property of their respective owners.