

Pro-Flo® III Hi-Flo Applicator

Customer Product Manual

Part 334617B

Issued 8/02



NORDSON CORPORATION • AMHERST, OHIO • USA

Table of Contents

Safety	1	Maintenance	8
Qualified Personnel	1	Troubleshooting	8
Intended Use	1	Checking Cable Continuity	11
Regulations and Approvals	1	Repair	11
Personal Safety	1	Material Blockages	11
High-Pressure Fluids	2	Clearing a Blocked Nozzle	11
Fire Safety	2	Clearing a Blocked Material Supply Hose ..	12
Halogenated Hydrocarbon		Gun-to-Robot Connections	12
Solvent Hazards	3	Remove the Gun from the Robot	12
Action in the Event of a Malfunction	3	Install the Gun on the Robot	12
Disposal	3	Trimset Cartridge	13
Description	4	Remove the Trimset Cartridge	13
Gun Components	4	Install the Trimset Cartridge	13
Specifications	4	Spring Closure Assembly	14
Installation	5	Pressure Transducer	
Gun Mounting	5	and Cordset	14
Gun Connections	7	Replace the Pressure Transducer	14
Material Supply Line	7	Replace the Cordset	15
Supply Air	7	Parts	16
Gun Control Cable/Controller	7	Using the Illustrated Parts List	16
Spring Closure Assembly	7	Right-Hand Gun Parts	17
Nozzle	7	Left-Hand Gun Parts	19
Operation	8		

Nordson Corporation welcomes requests for information, comments, and inquiries about its products. General information about Nordson can be found on the Internet using the following address: <http://www.nordson.com>.

Address all correspondence to:

Nordson Corporation
Attn: Customer Service
555 Jackson Street
Amherst, OH 44001

Notice

This is a Nordson Corporation publication which is protected by copyright. Original copyright date 1999. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Nordson Corporation. The information contained in this publication is subject to change without notice.

© 2002 All rights reserved.

Trademarks

AccuJet, AeroCharge, AquaGuard, Asymtek, Automove, Autotech, Baitgun, Blue Box, CF, CanWorks, Century, Clean Coat, CleanSleeve, CleanSpray, Control Coat, Cross-Cut, Cyclo-Kinetic, Dispensejet, DispenseMate, Durafiber, Durasystem, Easy Coat, Easymove Plus, Econo-Coat, EFD, ETI, Excel 2000, Flex-O-Coat, FlexiCoat, Flexi-Spray, Flow Sentry, Fluidmove, FoamMelt, FoamMix, Helix, Horizon, Hot Shot, Isocoil, Isocore, Iso-Flo, JR, KB30, Kinetix, Little Squirt, Magnastatic, MEG, Meltex, Microcoat, MicroSet, Millennium, Mini Squirt, Moist-Cure, Mountaingate, MultiScan, Nordson, OmniScan, OptiMix, Package of Values, Patternview, PluraFoam, Porous Coat, PowderGrid, Powderware, Prism, Pro-Flo, ProLink, Pro-Meter, Pro-Stream, PRX, RBX, Rhino, S. design stylized, Saturn, SC5, Seal Sentry, Select Charge, Select Coat, Select Cure, Slautterback, Smart-Coat, Solder Plus, Spectrum, Spray Squirt, Spraymelt, Super Squirt, Sure Coat, Tela-Therm, Trends, Tribomatic, UniScan, UpTime, Veritec, Versa-Coat, Versa-Screen, Versa-Spray, Walcom, Watermark, and When you expect more are registered trademarks of Nordson Corporation.

ATS, Auto-Flo, AutoScan, BetterBook, Chameleon, CanNeck, Check Mate, Colormax, Control Weave, Controlled Fiberization, CoolWave, CPX, Dura-Coat, Dry Cure, E-Nordson, EasyClean, Eclipse, Equi-Bead, Fill Sentry, Fillmaster, Gluie, Heli-flow, Ink-Dot, Iso-Flex, Lacquer Cure, Maxima, MicroFin, MicroMax, Minimeter, Multifil, Origin, PermaFlo, PluraMix, Powder Pilot, Powercure, Primarc, Process Sentry, PurTech, Pulse Spray, Ready Coat, Select Series, Sensomatic, Shaftshield, SheetAire, Spectral, Spectronic, Speedking, Spray Works, Summit, Sure Brand, Sure Clean, Sure Max, Swirl Coat, Tempus, Tracking Plus, Trade Plus, Universal, Vista, Web Cure, and 2 Rings (Design) are trademarks of Nordson Corporation.

Pro-Flo III HI-Flo Applicator

Safety

Read and follow these safety instructions. Task- and equipment-specific warnings, cautions, and instructions are included in equipment documentation where appropriate.

Make sure all equipment documentation, including these instructions, is accessible to persons operating or servicing equipment.

Qualified Personnel

Equipment owners are responsible for making sure that Nordson equipment is installed, operated, and serviced by qualified personnel. Qualified personnel are those employees or contractors who are trained to safely perform their assigned tasks. They are familiar with all relevant safety rules and regulations and are physically capable of performing their assigned tasks.

Intended Use

Use of Nordson equipment in ways other than those described in the documentation supplied with the equipment may result in injury to persons or damage to property.

Some examples of unintended use of equipment include

- using incompatible materials
- making unauthorized modifications
- removing or bypassing safety guards or interlocks
- using incompatible or damaged parts
- using unapproved auxiliary equipment
- operating equipment in excess of maximum ratings

Regulations and Approvals

Make sure all equipment is rated and approved for the environment in which it is used. Any approvals obtained for Nordson equipment will be voided if instructions for installation, operation, and service are not followed.

Personal Safety

To prevent injury follow these instructions.

- Do not operate or service equipment unless you are qualified.
- Do not operate equipment unless safety guards, doors, or covers are intact and automatic interlocks are operating properly. Do not bypass or disarm any safety devices.
- Keep clear of moving equipment. Before adjusting or servicing moving equipment, shut off the power supply and wait until the equipment comes to a complete stop. Lock out power and secure the equipment to prevent unexpected movement.
- Relieve (bleed off) hydraulic and pneumatic pressure before adjusting or servicing pressurized systems or components. Disconnect, lock out, and tag switches before servicing electrical equipment.
- While operating manual spray guns, make sure you are grounded. Wear electrically conductive gloves or a grounding strap connected to the gun handle or other true earth ground. Do not wear or carry metallic objects such as jewelry or tools.
- If you receive even a slight electrical shock, shut down all electrical or electrostatic equipment immediately. Do not restart the equipment until the problem has been identified and corrected.

Personal Safety *(contd)*

- Obtain and read Material Safety Data Sheets (MSDS) for all materials used. Follow the manufacturer's instructions for safe handling and use of materials, and use recommended personal protection devices.
- Make sure the spray area is adequately ventilated.
- To prevent injury, be aware of less-obvious dangers in the workplace that often cannot be completely eliminated, such as hot surfaces, sharp edges, energized electrical circuits, and moving parts that cannot be enclosed or otherwise guarded for practical reasons.

High-Pressure Fluids

High-pressure fluids, unless they are safely contained, are extremely hazardous. Always relieve fluid pressure before adjusting or servicing high pressure equipment. A jet of high-pressure fluid can cut like a knife and cause serious bodily injury, amputation, or death. Fluids penetrating the skin can also cause toxic poisoning.

If you suffer a fluid injection injury, seek medical care immediately. If possible, provide a copy of the MSDS for the injected fluid to the health care provider.

The National Spray Equipment Manufacturers Association has created a wallet card that you should carry when you are operating high-pressure spray equipment. These cards are supplied with your equipment. The following is the text of this card:



WARNING: Any injury caused by high pressure liquid can be serious. If you are injured or even suspect an injury:

- Go to an emergency room immediately.
- Tell the doctor that you suspect an injection injury.
- Show him this card
- Tell him what kind of material you were spraying

MEDICAL ALERT—AIRLESS SPRAY WOUNDS: NOTE TO PHYSICIAN

Injection in the skin is a serious traumatic injury. It is important to treat the injury surgically as soon as possible. Do not delay treatment to research toxicity. Toxicity is a concern with some exotic coatings injected directly into the bloodstream.

Consultation with a plastic surgeon or a reconstructive hand surgeon may be advisable.

The seriousness of the wound depends on where the injury is on the body, whether the substance hit something on its way in and deflected causing more damage, and many other variables including skin microflora residing in the paint or gun which are blasted into the wound. If the injected paint contains acrylic latex and titanium dioxide that damage the tissue's resistance to infection, bacterial growth will flourish. The treatment that doctors recommend for an injection injury to the hand includes immediate decompression of the closed vascular compartments of the hand to release the underlying tissue distended by the injected paint, judicious wound debridement, and immediate antibiotic treatment.

Fire Safety

To avoid a fire or explosion, follow these instructions.

- Ground all conductive equipment. Use only grounded air and fluid hoses. Check equipment and workpiece grounding devices regularly. Resistance to ground must not exceed one megohm.
- Shut down all equipment immediately if you notice static sparking or arcing. Do not restart the equipment until the cause has been identified and corrected.
- Do not smoke, weld, grind, or use open flames where flammable materials are being used or stored.
- Do not heat materials to temperatures above those recommended by the manufacturer. Make sure heat monitoring and limiting devices are working properly.

- Provide adequate ventilation to prevent dangerous concentrations of volatile particles or vapors. Refer to local codes or your material MSDS for guidance.
- Do not disconnect live electrical circuits when working with flammable materials. Shut off power at a disconnect switch first to prevent sparking.
- Know where emergency stop buttons, shutoff valves, and fire extinguishers are located. If a fire starts in a spray booth, immediately shut off the spray system and exhaust fans.
- Shut off electrostatic power and ground the charging system before adjusting, cleaning, or repairing electrostatic equipment.
- Clean, maintain, test, and repair equipment according to the instructions in your equipment documentation.
- Use only replacement parts that are designed for use with original equipment. Contact your Nordson representative for parts information and advice.

Halogenated Hydrocarbon Solvent Hazards

Do not use halogenated hydrocarbon solvents in a pressurized system that contains aluminum components. Under pressure, these solvents can react with aluminum and explode, causing injury, death, or property damage. Halogenated hydrocarbon solvents contain one or more of the following elements:

<u>Element</u>	<u>Symbol</u>	<u>Prefix</u>
Fluorine	F	"Fluoro-"
Chlorine	Cl	"Chloro-"
Bromine	Br	"Bromo-"
Iodine	I	"Iodo-"

Check your material MSDS or contact your material supplier for more information. If you must use halogenated hydrocarbon solvents, contact your Nordson representative for information about compatible Nordson components.

Action in the Event of a Malfunction

If a system or any equipment in a system malfunctions, shut off the system immediately and perform the following steps:

- Disconnect and lock out system electrical power. Close hydraulic and pneumatic shutoff valves and relieve pressures.
- Identify the reason for the malfunction and correct it before restarting the system.

Disposal

Dispose of equipment and materials used in operation and servicing according to local codes.

Description

See Figure 1. The Nordson Pro-Flo III Hi-Flo applicator is used in the robotic application of sealants and adhesives. The gun is part of the Pro-Flo system, which consists of a gun and controller used in conjunction with a robot and its controller.

A Pro-Flo controller, using feedback from the robot controller and other sensors, controls the gun dispensing rate. Consistent bead size is maintained by adjusting the module dispensing rate due to changes in robot speed, material viscosity, and material delivery pressure.

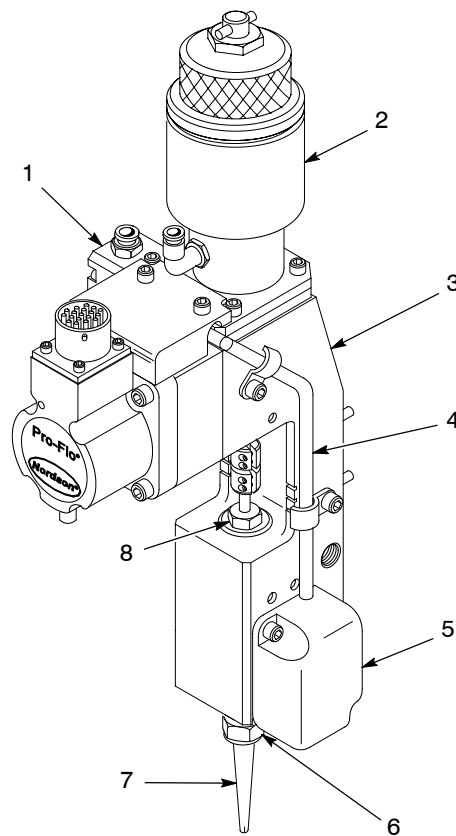


Figure 1 Pro-Flo III Hi-Flo Applicator

- | | |
|--|--------------------------------|
| 1. Air manifold | 5. Pressure transducer (cover) |
| 2. Spring closure assembly | 6. Nozzle nut |
| 3. Pneumatic actuator and frame assembly | 7. Nozzle |
| 4. Pressure transducer cordset | 8. Trimset cartridge |

Gun Components

See Figure 1. The Pro-Flo III Hi-Flo applicator consists of the following main components:

- Air manifold (1)
- Spring closure assembly (2)
- Pneumatic actuator and frame assembly (3) left- or right-hand version
- 138 bar (2000-psi) pressure transducer (5) with left- or right-hand pressure transducer cordset (4)
- Removable trimset cartridge (8)

Specifications

Following are the specifications for the Pro-Flo III Hi-Flo applicator.

Item	Specification
Weight	2.91 kg (6 lb 7 oz)
Air Pressure	Operating: 4.8–8.4 bar (70–120 psi) Maximum airflow: 0.023 m ³ /min (0.8 scfm) Ambient air temperature: 4–71 °C (40–160 °F)
Maximum Static Fluid Pressure Rating	207 bar (3000 psi),
Maximum Operating Temperature of Material	Unheated guns with polymyte seals: 49 °C (120 °F)
Material Viscosity Range	10,000–3,000,000 cps
Flow Range	0–158 kg/hr (0–350 lb/hr)

Installation



WARNING: Allow only qualified personnel to perform the following tasks. Observe and follow the safety instructions in this document and all other related documentation.



WARNING: Disconnect the equipment from the line voltage. Failure to do so may result in serious personal injury.



WARNING: System or material pressurized. Relieve pressure. Failure to observe this warning may result in serious personal injury.



CAUTION: Carefully route cables, air lines, and the material supply hose to avoid contact with the workpiece and damage from robot movement.

Gun Mounting

NOTE: Clearance dimensions will vary based on gun nozzle (or material control device), heaters, temperature conditioning fittings, and other devices installed.

See Figure 2. Mount the gun to the robot arm using an adapter designed for the application. The adapter must accept two $\frac{1}{4}$ -20 threaded mounting bolts (1) and two $\frac{1}{4}$ in., nominal, dowel pins (2) spaced in a square pattern as shown.

Gun Mounting (contd)

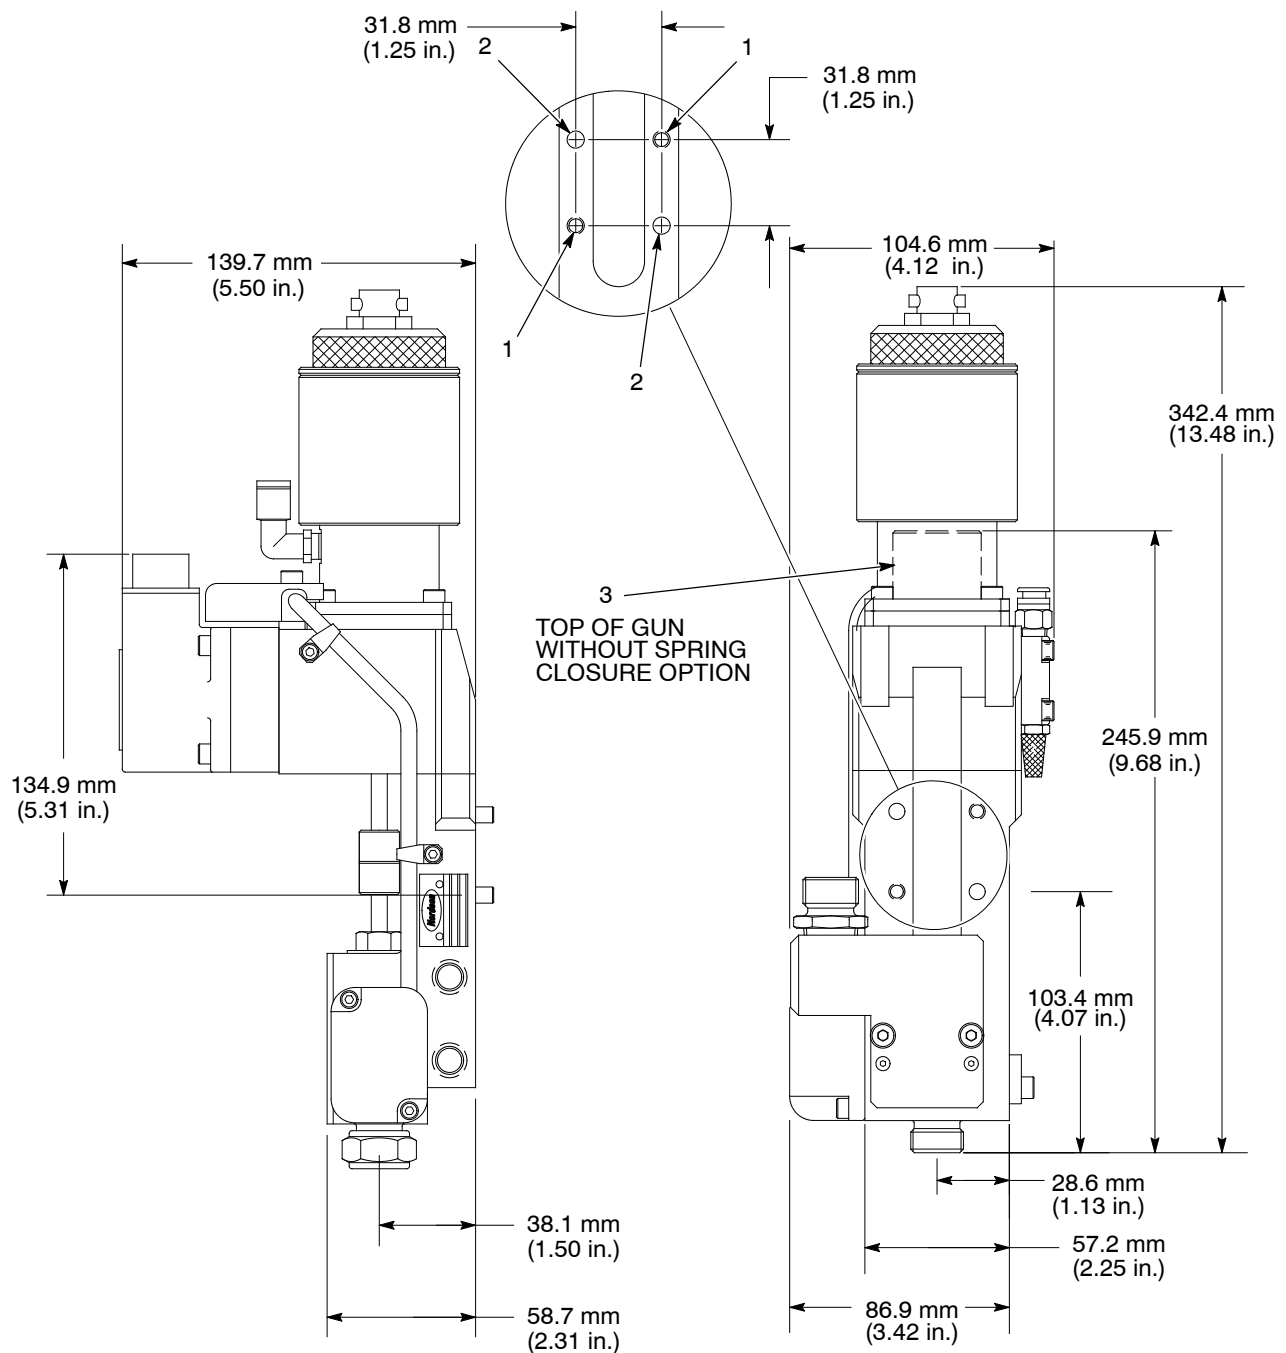


Figure 2 Dimensions

1. Mounting bolts (1/4-20)

2. Dowels (1/4-in.)

Gun Connections

See Figure 3. Follow these procedures to make the necessary connections for the Pro-Flo III Hi-Flo applicator.

Material Supply Line

Install a standard material inlet fitting (90 elbow, JIC-6, $\frac{9}{16}$ -18 thread) or swivel connector to the material inlet (5). Contact your Nordson representative for assistance in selecting a swivel connector. Connect the material supply line.

Supply Air

Connect a supply air line to the control air inlet (6). Supply air must be oil-free and maintain a pressure of 4.8–8.4 bar (70–120 psi).

Gun Control Cable/Controller

Connect the gun control cable to the gun control receptacle (2). Route the cable carefully around the robot arm to the controller to avoid damage to the cable.

Spring Closure Assembly

Connect a line supplying filtered shop air, 4.8–8.4 bar (70–120 psi) from the spring air closure solenoid to the spring closure air inlet (1).

Nozzle

Contact a Nordson representative to select the correct nozzle (3) for your application.

See Figure 3. Place the nozzle nut (4) over the nozzle and tighten securely to the actuator body.

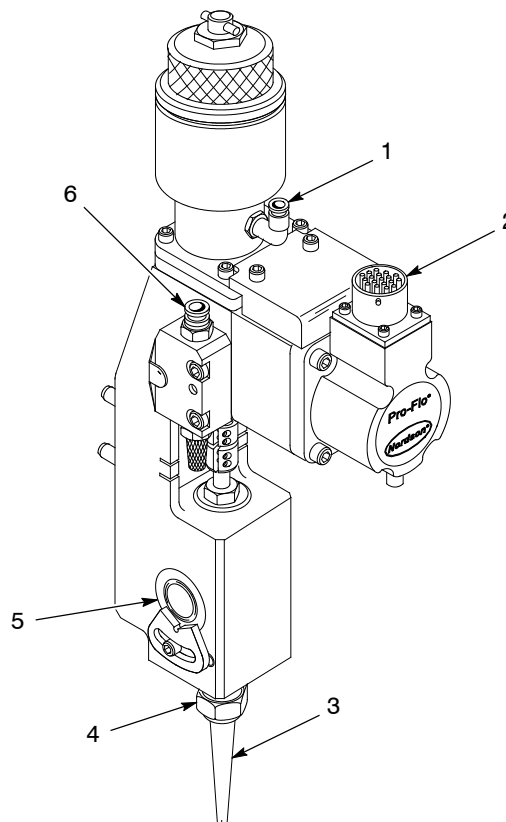


Figure 3 Connections (Heated Gun Shown)

- | | |
|-----------------------------|----------------------|
| 1. Spring closure air inlet | 4. Nozzle nut |
| 2. Gun control receptacle | 5. Material inlet |
| 3. Nozzle | 6. Control air inlet |

Operation



WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.

Pro-Flo III applicator operation is controlled by the Pro-Flo system controller. Refer to your Pro-Flo system controller manual or robot controller manual for more information.

Prior to operation, purge the gun to remove air from the material hose, the trimset valve, and the nozzle:

1. Place a material waste container under the gun.
2. Initiate a purge from the Pro-Flo controller or robot controller.
3. Purge the gun until a constant flow of material exits the nozzle.

Maintenance

Refer to Table 1. Use the following maintenance schedule to keep the Pro-Flo III applicator operating efficiently.

Table 1 Maintenance Schedule

Frequency	Component	Task
Daily	Nozzle	Check nozzle for wear and replace as needed.
	Cable connections	Check and secure all cable connections as needed.
Weekly	Trimset cartridge	Check trimset cartridge for leaks. Replace as needed.
	Cable connectors	Check cable connectors for wear and replace as needed.
Monthly	Gun mounting	Check and secure the gun mounting as needed.
	Cables	Check cables for wear and replace as needed.
	Air supply line filter	Clean air supply line filter.

Troubleshooting



WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.

This section contains troubleshooting procedures. These procedures cover only the most common problems that you may encounter. If you cannot solve the problem with the information given here, contact your local Nordson representative for help.

Problem	Possible Cause	Corrective Action
1. Gun not dispensing material and not opening	Supply air pressure absent or low Stem binding Pneumatic actuator malfunctioning Spring closure not actuated	Check the supply air pressure. Increase the air pressure if necessary. Remove the trimset cartridge. Check and replace the cartridge, if necessary. Replace the pneumatic actuator assembly. Check the air supply to the spring closure assembly, which requires a minimum of 4.8 bar (70 psi).
2. Gun not dispensing material but opens fully	Trimset cartridge blocked Material supply pressure low Nozzle blocked Material supply hose blocked	Remove and clean the trimset cartridge. Increase the material supply pressure. Remove and clean the nozzle. Check and unblock material supply hose. Refer to <i>Clearing a Blocked Material Supply Hose</i> in the <i>Repair</i> section.
3. Gun not changing dispensing rate to control bead size	Cordset damaged Gun control or extension cable damaged Analog signal malfunctioning	Check the continuity of the cordset. Replace the cordset, if necessary. Refer to <i>Checking Cable Continuity</i> in this section. Check the continuity and replace the cables, if necessary. Refer to your controller manual for troubleshooting procedures.
4. Gun not changing dispensing rate to control bead size but opens fully	Pressure transducer in controller malfunctioning	Check the pressure output voltage of the controller board. Replace pressure transducer if necessary.
5. Gun continuing to dispense after cycle; Controller indicating that gun is closed	Control air pressure low Needle not seating due to contamination Stem and trimset valve seats worn	Check the supply air pressure and increase, if necessary. Purge the gun. Replace the trimset cartridge.
Continued...		

Problem	Possible Cause	Corrective Action
6. Dispensing starts late	GUN ON signal from robot controller to Nordson controller timed improperly (digital controller only) Stem binding	Set the proper timing sequence. Remove the trimset cartridge. Check and replace the trimset cartridge, if necessary.
7. Bead deposition wiggling	Nozzle too high above workpiece Material velocity through nozzle too high	Lower the nozzle. Decrease the bead size or install a larger nozzle.
8. Bead size changing unexpectedly	Nozzle partially blocked Material has exceeded shelf life	Clean the nozzle. Refer to <i>Clearing a Blocked Nozzle</i> in the <i>Repair</i> section. Purge gun and begin using new material.
9. Material leaking from bonnet	Trimset cartridge worn Trimset cartridge loose	Replace the trimset cartridge. Tighten the trimset cartridge in the gun body to 27.1 N•m (20 ft-lb).
10. Gun won't fully open	Needle cannot pull completely out of the seat (upper and lower shafts not touching within coupling)	Use this procedure to join the coupling shafts: <ol style="list-style-type: none"> 1. Unscrew the top portion of the spring closure assembly until the yellow band is fully visible. 2. Loosen the coupling screws and slide the coupling up the actuator shaft as far as it will go. 3. Pull the needle out of seat enough to touch actuator shaft. 4. Reinstall coupling by sliding it down until it hits the shoulder on the lower shaft. Tighten coupling screws to 0.9-1.1 N•m (8-10 in.-lb). Reinstall spring closure assembly.

Checking Cable Continuity

See Figure 4 and refer to Table 2 when checking cable continuity.

1. Remove the pressure transducer cover and unplug the cordset.
2. Disconnect the gun control cable from the gun.
3. Using an ohmmeter, check the continuity of each wire from the cordset plug to the gun control cable receptacle.
4. Replace the cordset if the wiring is not continuous.

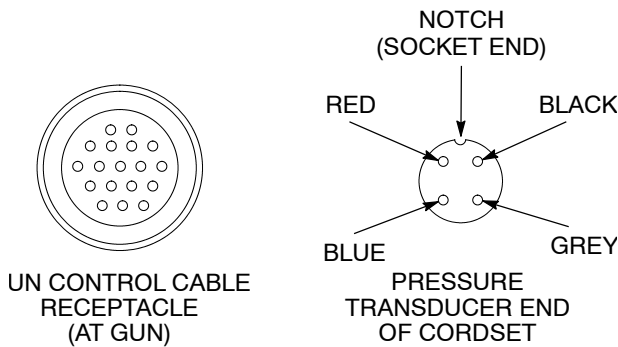


Figure 4 Wiring Continuity

Table 2 Cordset Wire Connections

Gun Control Cable Receptacle Pin	Pressure Transducer Cordset Plug	Wire Color
J	45° clockwise from notch	Black
K	45° counterclockwise from notch	Red
L	135° clockwise from notch	Gray
M	135° counterclockwise from notch	Blue

Repair



WARNING: Allow only qualified personnel to perform the following tasks. Follow the safety instructions in this document and all other related documentation.

Material Blockages

The following procedures detail how to clear material blockages from nozzles and from material supply hoses.

Clearing a Blocked Nozzle

See Figure 5. Use the following procedures to clear a blocked nozzle.

1. Shut off the air pressure to the drum unloader.
2. Bleed off the residual pressure using the pressure relief valve in the material supply line. The valve is located on the drum unloader pump body.
3. Shut off and lock out all power to the system.
4. Remove the nozzle nut (4) and nozzle (3).
5. Clean the nozzle thoroughly with an appropriate solvent.
6. Install the nozzle and secure in place with the nozzle nut.

Clearing a Blocked Material Supply Hose

Use the following procedures to clear a blocked material supply hose.

NOTE: When clearing a blocked material supply hose, start at the drum unloader and work toward the gun. Repeat the procedure for each connection in the material supply hose.

1. Shut off the air pressure to the drum unloader.
2. Bleed off the residual pressure using the pressure relief valve in the material supply line. The valve is located on the drum unloader pump body.
3. Disconnect the material supply hose.
4. Turn on the drum unloader and check the flow.
 - a. If the flow is good, turn off the drum unloader and relieve the system pressure. Reconnect the hose. Repeat steps 1 through 4 as needed for the next connection.
 - b. If the flow is not good, turn off the drum unloader and relieve the system pressure. Remove the hose and clear the blockage or replace. Reconnect the hose.

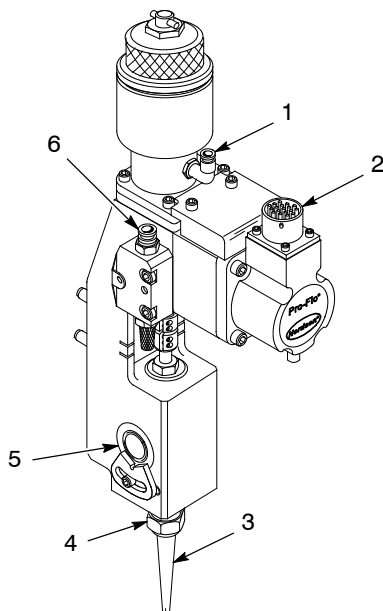


Figure 5 Basic Repair

- | | |
|-----------------------------|----------------------|
| 1. Spring closure air inlet | 4. Nozzle nut |
| 2. Gun control receptacle | 5. Material inlet |
| 3. Nozzle | 6. Control air inlet |

Gun-to-Robot Connections

The following sections detail the gun-to-robot connections. Follow these procedures, as necessary, to remove and install the gun to the robot adapter.

Remove the Gun from the Robot

See Figure 5. It may be necessary to remove the gun from the robot for repairs. To remove the gun from the robot, follow these steps:

1. Shut off the drum unloader.
2. Purge the gun to relieve the pressure in the hose and gun.
3. Shut off and lock out all power to the system.
4. Disconnect the material supply hose from the material inlet (5).
5. Mark the control air inlet tubing and disconnect it from the control air inlet (6) on the air manifold.
6. Disconnect the gun control cable from the gun control receptacle (2).
7. Disconnect the air supply tubing from the spring closure air inlet (1).
8. Remove the two bolts securing the gun to the robot arm adapter.

Install the Gun on the Robot

See Figure 5. Use the following procedures to install the gun to the robot.

1. Mount the gun on the robot arm adapter. Secure with the two screws.
2. Connect the material supply hose to the material inlet (5) on the gun.
3. Connect the gun control cable to the gun control receptacle (2).
4. Connect the control air supply line to the air manifold control air inlet (6).
5. Connect the air supply tubing to the spring closure air inlet (1).
6. Turn on the drum unloader and check for leaks in the hose and fittings.
7. Purge the gun to remove air from the hoses and gun.

Trimset Cartridge

Follow these procedures to replace the trimset cartridge.

Remove the Trimset Cartridge

See Figure 6. Follow these steps to remove the trimset cartridge from the actuator body:

1. Shut off the drum unloader.
2. Purge the gun to relieve the pressure in the hose and gun.
3. Shut off and lock out all power to the system.
4. Unscrew the knurled cap of the spring closure assembly (1) to reveal the entire yellow band (2) and until the threads are fully disengaged. Be careful not to let the spring closure assembly come off the gun.
5. Using a 2.5-mm hex key, loosen but do not remove the four clamp screws (5) in the coupling (4).
6. Slide the coupling and upper shaft (3) all the way up until they bottom out in the actuator frame.
7. Using an $11/16$ open-end wrench, loosen and remove the trimset cartridge (7) from the lower portion of the actuator body.

Install the Trimset Cartridge

See Figure 6. Follow these procedures to install a new trimset cartridge in the actuator body of the gun.

1. Lubricate all external O-rings (8) on the trimset cartridge (7) with lubricant.
2. Using an $11/16$ open-end wrench, reinstall the trimset cartridge in the lower portion of the actuator body. Tighten the trimset cartridge to 27.1 N•m (20 ft-lb).



WARNING: Make sure the knurled cap is fully threaded into the spring closure assembly before re-applying air to the gun. The yellow band must not be visible after the following step. Failure to observe this warning may result in equipment damage or personal injury.

3. Re-engage the threads and screw the knurled cap of the spring closure (1) down until it bottoms out hand tight. Be sure that the yellow band is completely hidden by threading the spring closure in all the way.
4. Lower the upper shaft (3) until it fully contacts the trimset needle shaft (7).
5. Push the coupling (4) down until it is centered over the joint between the upper shaft and needle shaft.
6. Tighten the lower coupling set screws (9) to 0.9–1.1 N•m (8–10 in-lb).
7. Turn on the drum unloader and check for leaks in the hose and fittings.
8. Purge the gun to remove air from the hoses and gun.

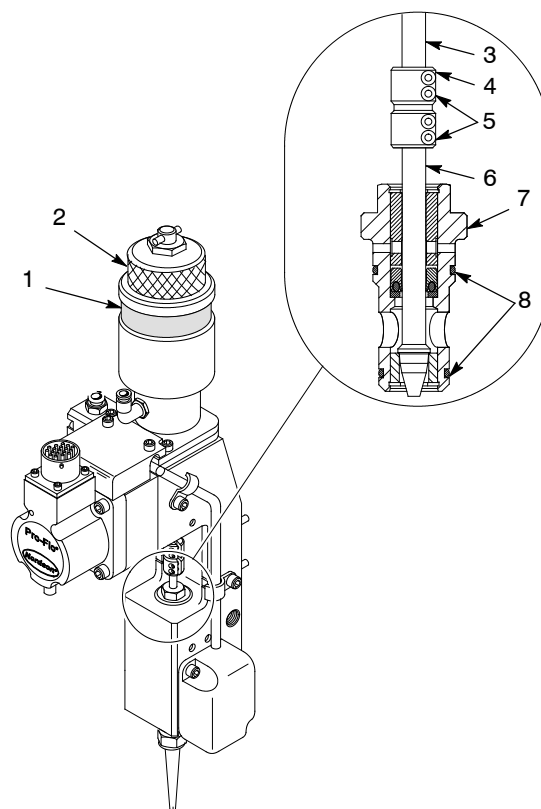


Figure 6 Replacing the Trimset Cartridge

- | | |
|--|--------------------------|
| 1. Yellow band | 5. Coupling clamp screws |
| 2. Knurled cap (spring closure assembly) | 6. Needle shaft |
| 3. Upper shaft | 7. Trimset cartridge |
| 4. Coupling | 8. O-rings |

Spring Closure Assembly

See Figure 7. Follow this procedures to remove and replace the spring closure assembly.

1. Shut off the drum unloader.
2. Purge the gun to relieve the pressure in the hose and gun.
3. Shut off and lock out all power to the system.
4. Disconnect the air supply hose from the air inlet of the spring closure assembly.
5. Remove the screws (2) that secure the spring closure assembly (1) to the actuator body (3).
6. Remove the spring closure assembly.
7. Install a new spring closure assembly on the actuator body. Tighten the screws to 6.2–6.8 N•m (55–60 in-lb).
8. Turn on the drum unloader and check for leaks in the hose and fittings.
9. Purge the gun to remove air from the hoses and gun.

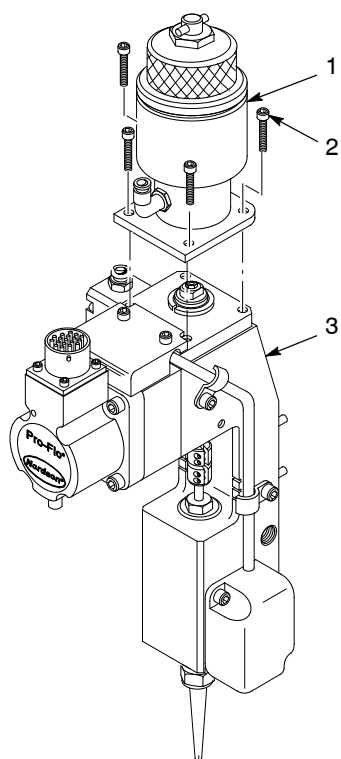


Figure 7 Replacing the Spring Closure Assembly

- | | |
|----------------------------|------------------|
| 1. Spring closure assembly | 3. Actuator body |
| 2. Screws | |

Pressure Transducer and Cordset

This section provides procedures for replacing the pressure transducer and the cordset

Replace the Pressure Transducer

See Figure 8. The pressure transducer is available in several pressure ratings. Refer to the *Parts* section for the part corresponding to your pressure transducer.

1. Using a 4-mm hex key, loosen the screws (4) and remove the pressure transducer cover (3).
2. Unscrew the cordset plug (5).
3. Using a $\frac{7}{16}$ open-end wrench, remove the pressure transducer (2) and O-ring (1) from the actuator body.
4. Coat the pressure transducer O-ring with lubricant. The new pressure transducer will have the O-ring already installed.
5. Install and tighten the new pressure transducer and O-ring.
6. Connect the cordset plug.
7. Replace the pressure transducer cover and secure with the screws.

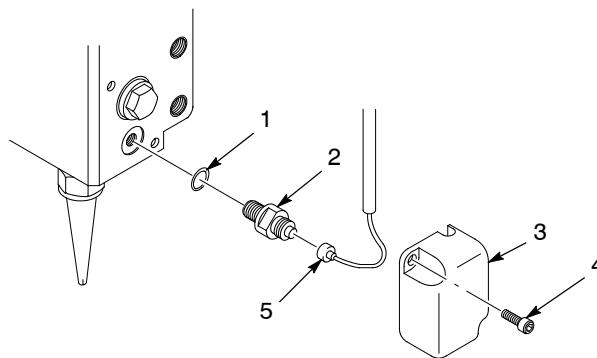


Figure 8 Replacing the Pressure Transducer

- | | |
|------------------------------|-----------------|
| 1. O-ring | 4. Screw |
| 2. Pressure transducer | 5. Cordset plug |
| 3. Pressure transducer cover | |

Replace the Cordset

Use the following procedures to replace the pressure transducer cordset.

1. Remove the gun from the robot. Refer to *Remove the Gun from the Robot* in this section.
2. See Figure 9. Remove the screws (1) and remove the spring closure assembly (2).
3. Remove the screws (12) and the actuator leads cover (11).
4. Loosen the terminal block (3) set screws that secure the four colored wires from the cordset (4). See Figure 10 for the cordset wiring diagram.
5. See Figure 9. Remove the cordset wires from the terminal block.
6. Remove the screws (8) and remove the pressure transducer cover (7).
7. Unplug the cordset from the pressure transducer (9).
8. Remove the screws (6) and remove the cordset clamps (5).
9. See Figure 10. Install the wires of the new cordset in the proper terminal block slots and tighten the screws.
10. Mount the new cordset and loosely install the cordset clamp and screws.
11. Connect the cordset plug to the pressure transducer and replace the pressure transducer cover and screws.
12. Replace and tighten the spring closure assembly and screws.
13. Align the cordset and tighten the cordset clamp screws.
14. Replace and tighten the actuator leads cover and screws.
15. Install the gun on the robot. Refer to *Install the Gun on the Robot* in this section.

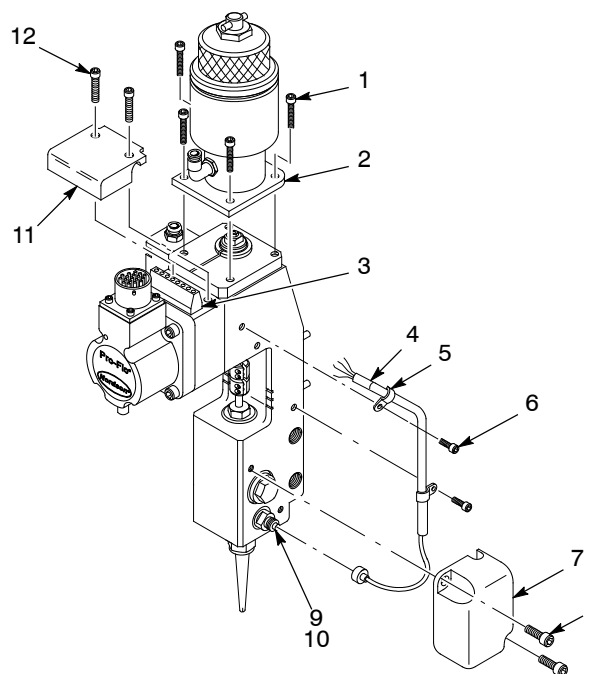


Figure 9 Replacing the Cordset
(right-hand version shown)

- | | |
|----------------------------|------------------------------|
| 1. Screw | 7. Pressure transducer cover |
| 2. Spring closure assembly | 8. Screw |
| 3. Terminal block | 9. Pressure transducer |
| 4. Cordset | 10. O-ring |
| 5. Clamp | 11. Actuator leads cover |
| 6. Screw | 12. Screws |

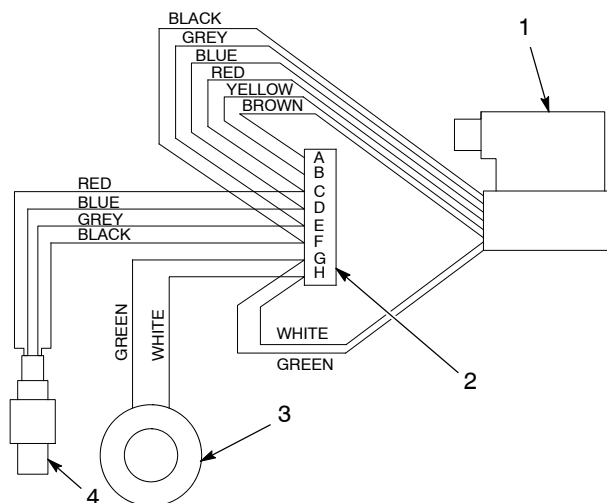


Figure 10 Cordset Wiring

- | | |
|-------------------|------------------------|
| 1. Gun | 3. Coil |
| 2. Terminal block | 4. Pressure transducer |

Note: Terminal block and coil are shown for reference.

Parts

To order parts, call the Nordson Customer Service Center or your local Nordson representative. Use this five-column parts list, and the accompanying illustration, to describe and locate parts correctly.

Using the Illustrated Parts List

Numbers in the Item column correspond to numbers that identify parts in illustrations following each parts list. The code NS (not shown) indicates that a listed part is not illustrated. A dash (—) is used when the part number applies to all parts in the illustration.

The number in the Part column is the Nordson Corporation part number. A series of dashes in this column (-----) means the part cannot be ordered separately.

The Description column gives the part name, as well as its dimensions and other characteristics when appropriate. Indentations show the relationships between assemblies, subassemblies, and parts.

- If you order the assembly, items 1 and 2 will be included.
- If you order item 1, item 2 will be included.
- If you order item 2, you will receive item 2 only.

The number in the Quantity column is the quantity required per unit, assembly, or subassembly. The code AR (As Required) is used if the part number is a bulk item ordered in quantities or if the quantity per assembly depends on the product version or model.

Letters in the Note column refer to notes at the end of each parts list. Notes contain important information about usage and ordering. Special attention should be given to notes.

Item	Part	Description	Quantity	Note
—	0000000	Assembly	1	
1	000000	• Subassembly	2	A
2	000000	• • Part	1	

Right-Hand Gun Parts

See Figure 11 and refer to the following parts list.

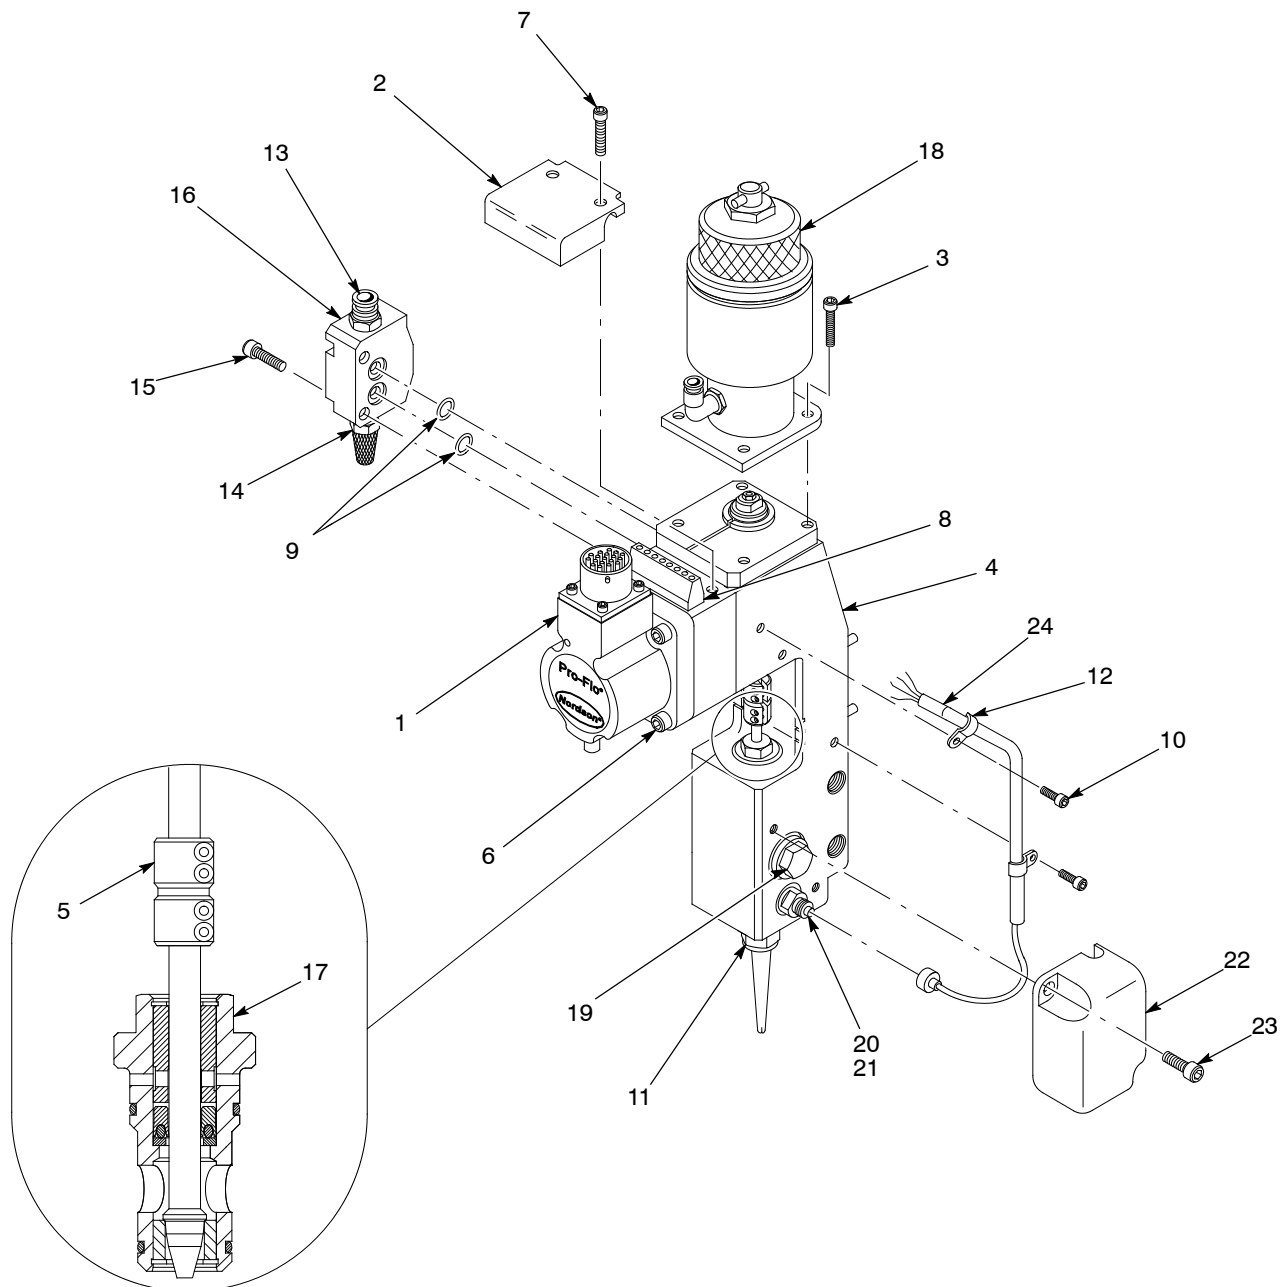


Figure 11 Right-Hand Pro-Flo III Hi-Flo Applicator Parts

Item	Part	Description	Quantity	Note
—	329603	Gun, H/F III, 20/200, right hand	1	
—	332873	Kit, service, actuator, Hi-Flo, right-hand	1	
1	163460	• Valve, servo, 18 p, Pro-Flo	1	
2	329700	• Cover, actuator leads	1	
3	982028	• Screw, socket, M5 x 20, bl	4	
4	-----	• Frame, body, Hi-Flo, left-hand	1	
5	327545	• Coupling, clamp, 1/4-inch bore	1	
6	982386	• Screw, socket, M5 x 35, bl	4	
7	982201	• Screw, socket, M5 x 8, bl	2	
NS	-----	• Standoff, Hi-Flo	2	
8	-----	• Board, w/junction block, 8-pin	1	
9	940101	• O-ring, Viton, 0.239 ID x 0.070 w, br	4	
NS	900349	• Lubricant, TFE grease, 0.75 oz tube	AR	
10	982372	Screw, socket, M5 x 12, bl	3	
11	325104	Nut, nozzle, 1/2 NPSM	1	
12	152444	Clamp, tube, Pro-Flo	2	
NS	156208	Key, locking swivel	1	
—	329708	Module, manifold, Pro-Flo, extrude	1	
13	972716	• Connector, male, 1/4 tube x 1/8 NPT	1	
9	940101	• O-ring, Viton, 0.239 ID x 0.070 w, br	2	
14	241040	• Muffler, air 1/8 NPT	1	A
15	982028	• Screw, socket, M5 x 20, bl	2	
16	-----	• Manifold, air, Hi-Flo	1	
NS	900236	• Sealant, paste, PTFE	AR	
17	332875	Kit, service, trimset cartridge, Hi-Flo, polymyte	1	
18	332872	Kit, service, spring closure, Hi-Flo III	1	
3	982028	Screw, socket, M5 x 20, bl	4	B
19	973574	Plug, O-ring, straight thread, 9/16-18	1	
20	945038	O-ring, Viton, 3/16 tube	1	
21	139596	Transducer, with tag, 2000 psi, 3/8-24	1	
22	152403	Cover, transducer, Pro-Flo	1	
23	982166	Screw, socket, M5 x 16, bl	2	
24	329706	Cordset, transducer, right-hand, Hi-Flo	1	
<p>NOTE A: Apply sealant paste, part 900236.</p> <p> B: Replacement screws are not included in the spring closure service kit. Order new screws as needed.</p> <p>AR: As Required</p> <p>NS: Not Shown</p>				

Left-Hand Gun Parts

See Figure 12 and refer to the following parts list.

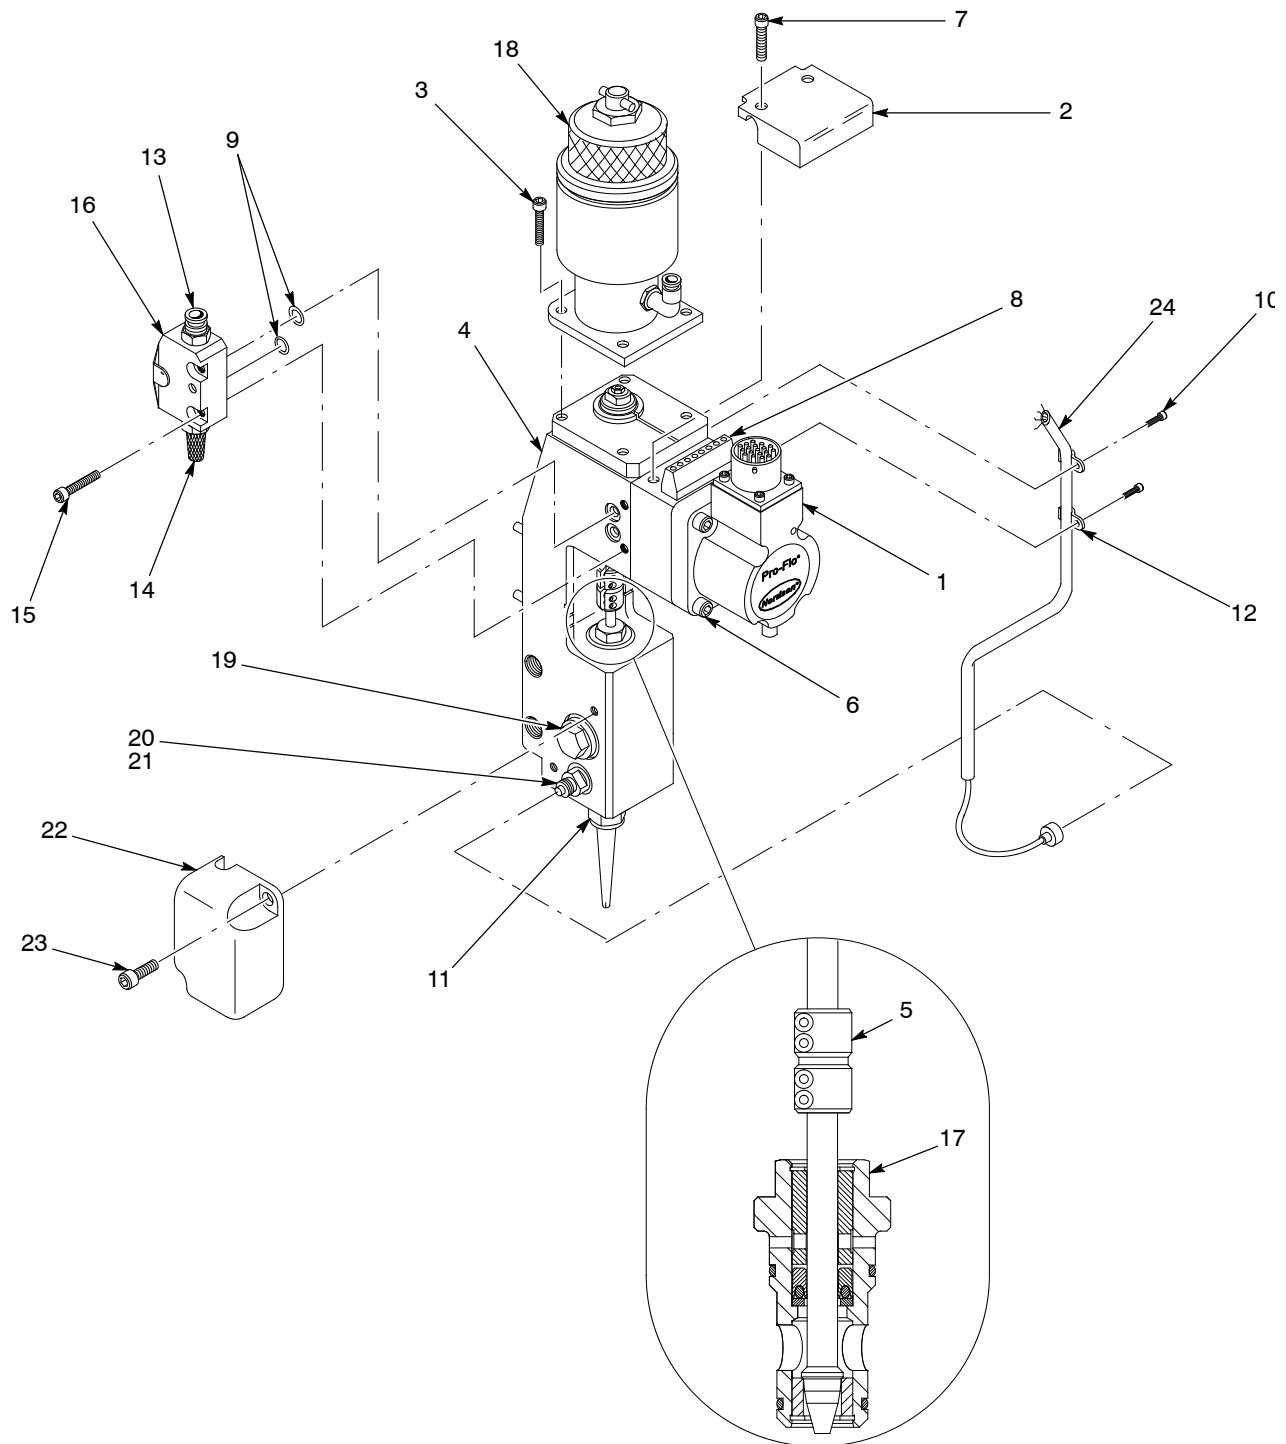


Figure 12 Left-Hand Pro-Flo III Hi-Flo Applicator Parts

Item	Part	Description	Quantity	Note
—	322921	Gun, H/F III, 20/200, left hand	1	
—	332874	Kit, service, actuator, Hi-Flo, left-hand	1	
1	163460	• Valve, servo, 18 p, Pro-Flo	1	
2	329700	• Cover, actuator leads	1	
3	982028	• Screw, socket, M5 x 20, bl	4	
4	-----	• Frame, body, Hi-Flo, left-hand	1	
5	327545	• Coupling, clamp, 1/4-inch bore	1	
6	982386	• Screw, socket, M5 x 35, bl	4	
7	982201	• Screw, socket, M5 x 8, bl	2	
NS	-----	• Standoff, Hi-Flo	2	
8	-----	• Board, w/junction block, 8-pin	1	
9	940101	• O-ring, Viton, 0.239 ID x 0.070 w, br	4	
NS	900349	• Lubricant, TFE grease, 0.75 oz tube	AR	
10	982372	Screw, socket, M5 x 12, bl	3	
11	325104	Nut, nozzle, 1/2 NPSM	1	
12	152444	Clamp, tube, Pro-Flo	2	
NS	156208	Key, locking swivel	1	
—	329708	Module, manifold, Pro-Flo, extrude	1	
13	972716	• Connector, male, 1/4 tube x 1/8 NPT	1	
9	940101	• O-ring, Viton, 0.239 ID x 0.070 w, br	2	
14	241040	• Muffler, air 1/8 NPT	1	A
15	982028	• Screw, socket, M5 x 20, bl	2	
16	-----	• Manifold, air, Hi-Flo	1	
NS	900236	• Sealant, paste, PTFE	AR	
17	332875	Kit, service, trimset cartridge, Hi-Flo, polymyte	1	
18	332872	Kit, service, spring closure, Hi-Flo III	1	
3	982028	Screw, socket, M5 x 20, bl	4	B
19	973574	Plug, O-ring, straight thread, 9/16-18	1	
20	945038	O-ring, Viton, 3/16 tube	1	
21	139596	Transducer, with tag, 2000 psi, 3/8-24	1	
22	152403	Cover, transducer, Pro-Flo	1	
23	982166	Screw, socket, M5 x 16, bl	2	
24	322923	Cordset, transducer, left-hand, Hi-Flo	1	
<p>NOTE A: Apply sealant paste, part 900236.</p> <p> B: Replacement screws are not included in the spring closure service kit. Order new screws as needed.</p> <p>AR: As Required</p> <p>NS: Not Shown</p>				